

# series 48



---

## Laser Operator's Manual

### M Version

---



4600 Campus Place  
Mukilteo, WA 98275  
1.800.SYNRAD1  
tel 1.425.349.3500  
fax 1.425.349.3667  
e-mail [synrad@synrad.com](mailto:synrad@synrad.com)  
web [www.synrad.com](http://www.synrad.com)





**M Version Laser  
Operator's Manual**

**Model 48-1**

**Model 48-2**

**Model 48-5**

Version 8.2

Released February 2014

Part number 900-00007-04



4600 Campus Place  
Mukilteo, WA 98275  
1.800.SYNRAD1  
*tel* 1.425.349.3500  
*fax* 1.425.349.3667  
*e-mail* [synrad@synrad.com](mailto:synrad@synrad.com)  
*web* [www.synrad.com](http://www.synrad.com)



# table of contents

## Laser Safety

Hazard information.....	1
Terms.....	1
General hazards .....	1
Other hazards.....	3
Disposal.....	3
Additional laser safety information.....	3
48-1 label locations.....	4
48-2 label locations.....	5
48-5 label locations.....	6
Agency compliance .....	7
Center for Devices and Radiological Health (CDRH) requirements.....	7
Federal Communications Commission (FCC) requirements .....	8
European Union (EU) requirements.....	9
Declaration of Conformity .....	12

## Getting Started 1

Introduction.....	1-2
Series 48 features .....	1-2
Series 48 nomenclature .....	1-2
Model numbers .....	1-2
Unpacking.....	1-3
Incoming inspection.....	1-3
Packaging guidelines.....	1-3
Inventory.....	1-4
Contents description .....	1-5
Mounting .....	1-6
Standard mounting.....	1-6
With an FH Series marking head .....	1-7
Connecting .....	1-8
Air-cooled connections .....	1-8
Water-cooled connections .....	1-9
Electrical connections .....	1-14
Control connections.....	1-16
DB-9 connections.....	1-17

## Operation 2

Controls and indicators .....	2-2
Initial start-up .....	2-4
With a UC-2000 Controller.....	2-4
Without a UC-2000 Controller .....	2-6

# table of contents

## Technical Reference 3

Technical overview.....	3-2
Introduction.....	3-2
Plasma section .....	3-2
Optical resonator.....	3-2
Control circuitry.....	3-3
Optical setup.....	3-5
Controlling laser power .....	3-7
Control signals.....	3-7
Operating modes.....	3-10
DB-9 connections .....	3-12
Sample DB-9 Connector I/O circuits.....	3-15
Integrating Series 48 safety features .....	3-18
Remote keyswitch functions.....	3-18
Remote interlock functions.....	3-19
Model 48-1 general specifications .....	3-20
Model 48-2 general specifications .....	3-22
Model 48-5 general specifications .....	3-24
Model 48-1 package outline drawing .....	3-26
Model 48-2 package outline drawing .....	3-27
Model 48-5 package outline drawing .....	3-28
Series 48 packaging instructions.....	3-29

## Maintenance/Troubleshooting 4

Maintenance.....	4-2
Disabling the 48 Series laser.....	4-2
Daily inspections .....	4-2
Storage/shipping .....	4-3
Cleaning optical components.....	4-3
Troubleshooting.....	4-6
Introduction.....	4-6
Resetting faults .....	4-7
Laser faults .....	4-8
Beam delivery optics.....	4-10

## Appendix A

Closed Loop Stabilization Kit.....	A-2
Introduction.....	A-2
Safety precautions.....	A-2
Connecting.....	A-3
Operation.....	A-4
Closed loop specifications.....	A-5

# table of contents

## List of Figures

Figure 1	48-1 hazard label and CE label locations .....	4
Figure 2	48-2 hazard label and CE label locations .....	5
Figure 3	48-5 hazard label and CE label locations .....	6
Figure 4	European compliance mark .....	11
Figure 1-1	Series 48 shipping box contents .....	1-4
Figure 1-2	48-1/48-2 cooling fan placement.....	1-8
Figure 1-3	48-1/48-2 cooling connections.....	1-12
Figure 1-4	48-5 cooling connections .....	1-13
Figure 1-5	DC-1 (Emerson LPS) power supply.....	1-14
Figure 1-6	PS-2 (Emerson iMP4) power supply.....	1-15
Figure 1-7	PS-6 (Emerson iVS1) power supply .....	1-16
Figure 1-8	Typical Series 48 system interconnection .....	1-18
Figure 2-1	48-1/48-2 controls and indicators.....	2-2
Figure 2-2	48-5 controls and indicators .....	2-3
Figure 3-1	Beam characteristics .....	3-3
Figure 3-2	“Flying optics” beam path.....	3-5
Figure 3-3	Tickle pulse waveform .....	3-8
Figure 3-4	Series 48 waveforms.....	3-8
Figure 3-5	PWM Command signal waveform.....	3-9
Figure 3-6	Factory-installed DB-9 jumper plug wiring .....	3-12
Figure 3-7	Physical layout of Series 48 DB-9 Connector .....	3-14
Figure 3-8	Remote Keyswitch circuit.....	3-15
Figure 3-9	Remote Interlock circuit.....	3-15
Figure 3-10	Remote Ready output to PLC input (PLC sourcing).....	3-15
Figure 3-11	Remote Ready output to PLC input (PLC sinking).....	3-16
Figure 3-12	Remote Ready output to PLC input using pull-up resistor ...	3-16
Figure 3-13	Message Output to PLC input .....	3-16
Figure 3-14	Fault Shutdown Output to PLC input.....	3-17
Figure 3-15	Model 48-1 package outline and mounting dimensions .....	3-26
Figure 3-16	Model 48-2 package outline and mounting dimensions .....	3-27
Figure 3-17	Model 48-5 package outline and mounting dimensions .....	3-28
Figure 3-18	Model 48-1 packaging instructions .....	3-29
Figure 3-19	Model 48-2 packaging instructions .....	3-30
Figure 3-20	Model 48-5 packaging instructions .....	3-31
Figure 3-21	FLMK-1A (10W fan shroud) packaging instructions .....	3-32

# table of contents

## List of Figures (cont.)

Figure 3-22 FLMK-2A (25W fan shroud) packaging instructions .....	3-33
Figure A-1 Typical closed loop setup .....	A-3
Figure A-2 Graph of duty cycle vs. power output before/after C.L. kit installed .....	A-4

## List of Tables

Table 1	Class 4 safety features.....	10
Table 2	European Union Directives .....	11
Table 1-1	Ship kit contents.....	1-4
Table 1-2	Dew point temperatures.....	1-11
Table 3-1	Assist gas purity specifications .....	3-6
Table 3-2	Input signal specifications.....	3-7
Table 3-3	Tickle pulse specifications.....	3-7
Table 3-4	PWM Command signal specifications.....	3-10
Table 3-5	DB-9 pin assignments .....	3-13
Table 3-6	DB-9 Connector input signal specifications.....	3-14
Table 3-7	DB-9 Connector output signal specifications.....	3-14
Table 3-8	Model 48-1 general specifications .....	3-20
Table 3-9	Model 48-2 general specifications .....	3-22
Table 3-10	Model 48-5 general specifications .....	3-24
Table 4-1	Required cleaning materials .....	4-4
Table 4-2	Series 48 cooling specifications .....	4-9
Table A-1	Closed loop general specifications .....	A-5

## **Trademark/copyright information**

SYNRAD, Duo-Lase and Power Wizard are registered trademarks of SYNRAD, Inc.

All other trademarks or registered trademarks are the property of their respective owners.

© 2006, 2007, 2009, 2010, 2011, 2012, 2014 by SYNRAD, Inc.  
All rights reserved.

## Warranty information

This is to certify that Series 48-1 lasers are guaranteed by SYNRAD, Inc. to be free of all defects in materials and workmanship for a period of three years from the date of purchase. Series 48-2 and 48-5 lasers are guaranteed to be free of all defects in materials and workmanship for a period of one year from the date of purchase. This warranty does not apply to any defect caused by negligence, misuse (including environmental factors), accident, alteration, or improper maintenance. We request that you examine each shipment within 10 days of receipt and inform SYNRAD, Inc. of any shortage or damage. If no discrepancies are reported, SYNRAD shall assume the shipment was delivered complete and defect-free.

If, within one year from the date of purchase, any part of the Series 48 laser should fail to operate, contact the SYNRAD Customer Service department at 1.800.SYNRAD1 (outside the U.S. call 1.425.349.3500) and report the problem. When calling for support, please be prepared to provide the date of purchase, model number and serial number of the unit, and a brief description of the problem. When returning a unit for service, a Return Authorization (RA) number is required; this number must be clearly marked on the outside of the shipping container in order for the unit to be properly processed. If replacement parts are sent to you, then you are required to send the failed parts back to SYNRAD for evaluation unless otherwise instructed.

If your Series 48 laser fails within the first 45 days after purchase, SYNRAD, Inc. will pay all shipping charges to and from SYNRAD when shipped as specified by SYNRAD Customer Service. After the first 45 days, SYNRAD will continue to pay for the costs of shipping the repaired unit or replacement parts back to the customer from SYNRAD. The customer, however, will be responsible for shipping charges incurred when sending the failed unit or parts back to SYNRAD or a SYNRAD Authorized Distributor. In order to maintain your product warranty and to ensure the safe and efficient operation of your Series 48 laser, only authorized SYNRAD replacement parts can be used. This warranty is void if any parts other than those provided by SYNRAD, Inc. are used.

SYNRAD, Inc. and SYNRAD Authorized Distributors have the sole authority to make warranty statements regarding SYNRAD products. SYNRAD, Inc. and its Authorized Distributors neither assumes nor authorizes any representative or other person to assume for us any other warranties in connection with the sale, service, or shipment of our products. SYNRAD, Inc. reserves the right to make changes and improvements in the design of our products at any time without incurring any obligation to make equivalent changes in products previously manufactured or shipped. Buyer agrees to hold SYNRAD harmless from any and all damages, costs, and expenses relating to any claim arising from the design, manufacture, or use of the product, or arising from a claim that such product furnished Buyer by SYNRAD, or the use thereof, infringes upon any Patent, foreign or domestic.

## Contact information

### Worldwide headquarters

SYNRAD's worldwide headquarters are located north of Seattle in Mukilteo, Washington, U.S.A. Our

mailing address is: SYNRAD, Inc.  
4600 Campus Place  
Mukilteo, WA 98275  
U.S.A.

Phone us at: 1.800.SYNRAD1 (1.800.796.7231)

Outside the U.S.: +1.425.349.3500

Fax: +1.425.349.3667

Email: [synrad@synrad.com](mailto:synrad@synrad.com)

### Sales and Applications

SYNRAD's Regional Sales Managers work with customers to identify and develop the best CO<sub>2</sub> laser solution for a given application. Because they are familiar with you and your laser application, use them as a first point of contact when questions arise. Regional Sales Managers also serve as the liaison between you and our Applications Lab in processing material samples per your specifications. To speak to the Regional Sales Manager in your area, call SYNRAD at 1.800.SYNRAD1.

### Customer Service

For assistance with order or delivery status, service status, or to obtain a Return Authorization (RA) number, contact SYNRAD at 1.800.SYNRAD1 and ask to speak to a Customer Service representative.

### Technical Support

SYNRAD's Regional Sales Managers are able to answer many technical questions regarding the installation, use, troubleshooting, and maintenance of our products. In some cases, they may transfer your call to a Laser, Marking Head, or Software Support Specialist. You may also email questions to the Technical Support Group by sending your message to [support@synrad.com](mailto:support@synrad.com) or to [support@winmark.com](mailto:support@winmark.com).

### Reference materials

Your Regional Sales Manager can provide reference materials including Outline & Mounting drawings, Operator's Manuals, Technical Bulletins, and Application Newsletters. Most of these materials are also available directly from SYNRAD's web site at <http://www.synrad.com>.

### European headquarters

For assistance in Europe, contact SYNRAD's European subsidiary, Synrad Europe, at:

Synrad Europe  
Münchener Straße 2A  
D-82152 Planegg, Germany

Phone: +49 (0) 89 31 707-0

Fax: +49 (0) 89 31 707-222

Email: [info@synrad-europe.com](mailto:info@synrad-europe.com)

# laser safety

## Hazard information

Hazard information includes terms, symbols, and instructions used in this manual or on the equipment to alert both operating and service personnel to the recommended precautions in the care, use, and handling of Class 4 laser equipment.

## Terms

Certain terms are used throughout this manual or on the equipment labels. Please familiarize yourself with their definitions and significance.

**⚠ Danger:** Imminent hazards which, if not avoided, will result in death or serious injury.

**⚠ Warning:** Potential hazards which, if not avoided, could result in death or serious injury.

**⚠ Caution:** Potential hazards or unsafe practices which, if not avoided, may result in minor or moderate injury.

**Caution:** Potential hazards or unsafe practices which, if not avoided, may result in product damage.

**Important Note:** Important information or recommendations concerning the subject under discussion.

**Note:** Points of particular interest for more efficient or convenient equipment operation; additional information or explanation concerning the subject under discussion.

## General hazards

Following are descriptions of general hazards and unsafe practices that could result in death, severe injury, or product damage. Specific warnings and cautions not appearing in this section are found throughout the manual.

**⚠ Danger**  
serious  
personal  
injury

This Class 4 laser product emits *invisible* infrared laser radiation in the 9.3–10.6  $\mu\text{m}$  CO<sub>2</sub> wavelength band depending on model.

Do not allow laser radiation to enter the eye by viewing direct or reflected laser energy. CO<sub>2</sub> laser radiation can be reflected from metallic objects even though the surface is darkened. Direct or diffuse laser radiation can inflict severe corneal injuries leading to permanent eye damage or blindness. All personnel must wear eye protection suitable for 10.6  $\mu\text{m}$  CO<sub>2</sub> radiation when in the same area as an exposed laser beam. Eyewear protects against scattered energy but is not intended to protect against direct viewing of the beam—never look directly into the laser output aperture or view scattered laser reflections from metallic surfaces.

Enclose the beam path whenever possible. Exposure to direct or diffuse CO<sub>2</sub> laser radiation can seriously burn human or animal tissue, which may cause permanent damage.

This product is not intended for use in explosive, or potentially explosive, atmospheres.

# laser safety

## Hazard information

 **Warning**  
serious  
personal  
injury

For laser systems being used or sold within the U.S.A., customers should refer to and follow the laser safety precautions described in the American National Standards Institute (ANSI) Z136.1-2007 document, *Safe Use of Lasers*.

For laser systems being used or sold outside the U.S.A., customers should refer to and follow the laser safety precautions described in European Normative and International Electrotechnical Commission documents EN 60825-1:2007—*Safety of Laser Products – Part 1: Equipment Classification and Requirements* and IEC/TR 60825-14:2004, *Safety of Laser Products – Part 14: A User's Guide*.

 **Warning**  
serious  
personal  
injury

Materials processing with a laser can generate air contaminants such as vapors, fumes, and/or particles that may be noxious, toxic, or even fatal. Material Safety Data Sheets (MSDS) for materials being processed should be thoroughly evaluated and the adequacy of provisions for fume extraction, filtering, and venting should be carefully considered. Review the following references for further information on exposure criteria:

ANSI Z136.1-2007, *Safe Use of Lasers*, section 7.3.

United States Government's *Code of Federal Regulations*: 29 CFR 1910, Subpart Z.

*Threshold Limit Values* (TLV's) published by the American Conference of Governmental Industrial Hygienists (ACGIH).

It may be necessary to consult with local governmental agencies regarding restrictions on the venting of processing vapors.

 **Warning**  
serious  
personal  
injury

The use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

 **Warning**  
serious  
personal  
injury

The use of aerosol dusters containing difluoroethane causes “blooming”, a condition that **significantly** expands and scatters the laser beam. This beam expansion can affect mode quality and/or cause laser energy to extend beyond the confines of optical elements in the system, possibly damaging acrylic safety shielding. Do not use air dusters containing difluoroethane in any area adjacent to CO<sub>2</sub> laser systems because difluoroethane persists for long time periods over wide areas.

# laser safety

## Hazard information

Series 48 lasers should be installed and operated in manufacturing or laboratory facilities by trained personnel only. Due to the considerable risks and hazards associated with the installation and operational use of any equipment incorporating a laser, the operator must follow product warning labels and instructions to the user regarding laser safety.

To prevent exposure to direct or scattered laser radiation, follow all safety precautions specified throughout this manual and exercise safe operating practices per ANSI Z136.1-2007 at all times when actively lasing.

Always wear safety glasses or protective goggles with side shields to reduce the risk of damage to the eyes when operating the laser.

A CO<sub>2</sub> laser is an intense heat source and will ignite most materials under the proper conditions. Never operate the laser in the presence of flammable or explosive materials, gases, liquids, or vapors.

The use of controls or adjustments or performance of procedures other than those specified herein may result in exposure to hazardous *invisible* laser radiation, damage to, or malfunction of the laser. Severe burns will result from exposure to the laser beam.

Safe operation of the laser requires the use of an external beam block to safely block the beam from traveling beyond the desired work area. Do not place your body or any combustible object in the path of the laser beam. Use a water-cooled beam dump or power meter, or similar non-scattering, noncombustible material as the beam block. Never use organic material or metals as the beam blocker; organic materials, in general, are apt to combust or melt and metals act as specular reflectors which may create a serious hazard outside the immediate work area.

## Other hazards

The following hazards are typical for this product family when incorporated for intended use: (A) risk of injury when lifting or moving the unit; (B) risk of exposure to hazardous laser energy through unauthorized removal of access panels, doors, or protective barriers; (C) risk of exposure to hazardous laser energy and injury due to failure of personnel to use proper eye protection and/or failure to adhere to applicable laser safety procedures; (D) risk of exposure to hazardous or lethal voltages through unauthorized removal of covers, doors, or access panels; (E) generation of hazardous air contaminants that may be noxious, toxic, or even fatal.

## Disposal

This product contains components that are considered hazardous industrial waste. If a situation occurs where the laser is rendered non-functional and cannot be repaired, it may be returned to SYNRAD, Inc. who, for a fee, will ensure adequate disassembly, recycling, and/or disposal of the product.

## Additional laser safety information


The SYNRAD web site at <http://www.synrad.com/LaserFacts/lasersafety.html> contains an online laser safety handbook that provides information on (1) Laser Safety Standards for OEM's/System Integrators, (2) Laser Safety Standards for End Users, (3) References and Sources, and (4) Assistance with Requirements.

In addition, the Occupational Safety and Health Administration (OSHA) provides an online Technical Manual (located at [http://www.osha.gov/dts/osta/otm/otm\\_iii/otm\\_iii\\_6.html](http://www.osha.gov/dts/osta/otm/otm_iii/otm_iii_6.html)). Section III, Chapter 6 and Appendix III are good resources for laser safety information.

Another excellent laser safety resource is the Laser Institute of America (LIA). Their comprehensive web site is located at <http://www.laserinstitute.org>.

# laser safety


## 48-1 label locations

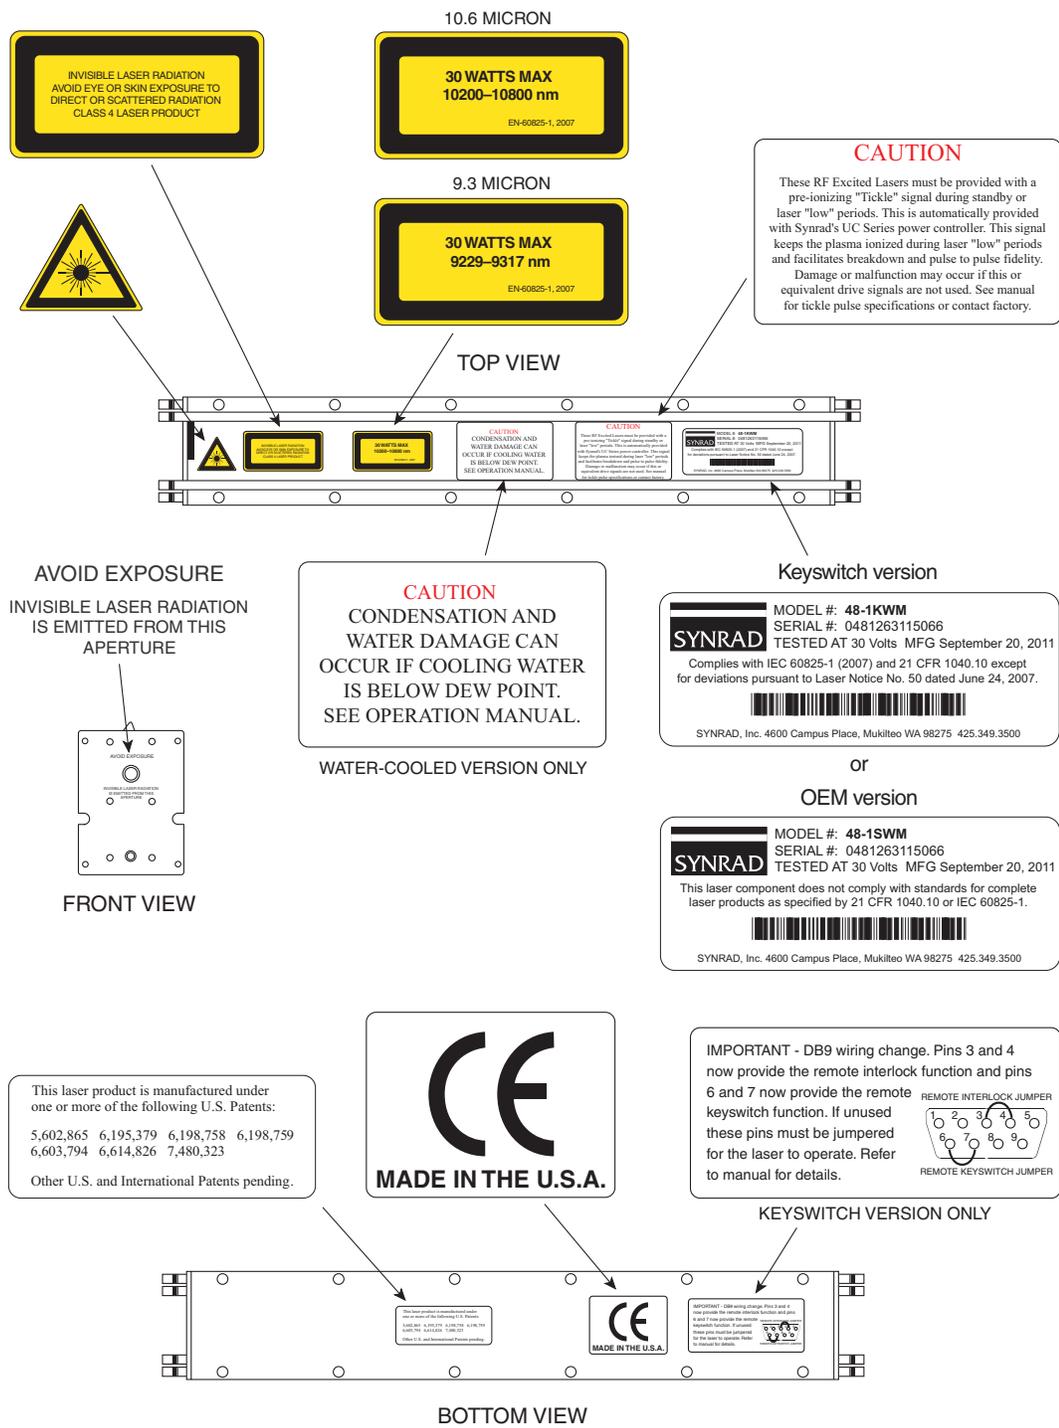

**Figure 1** 48-1 hazard label and CE label locations

# laser safety

## 48-2 label locations

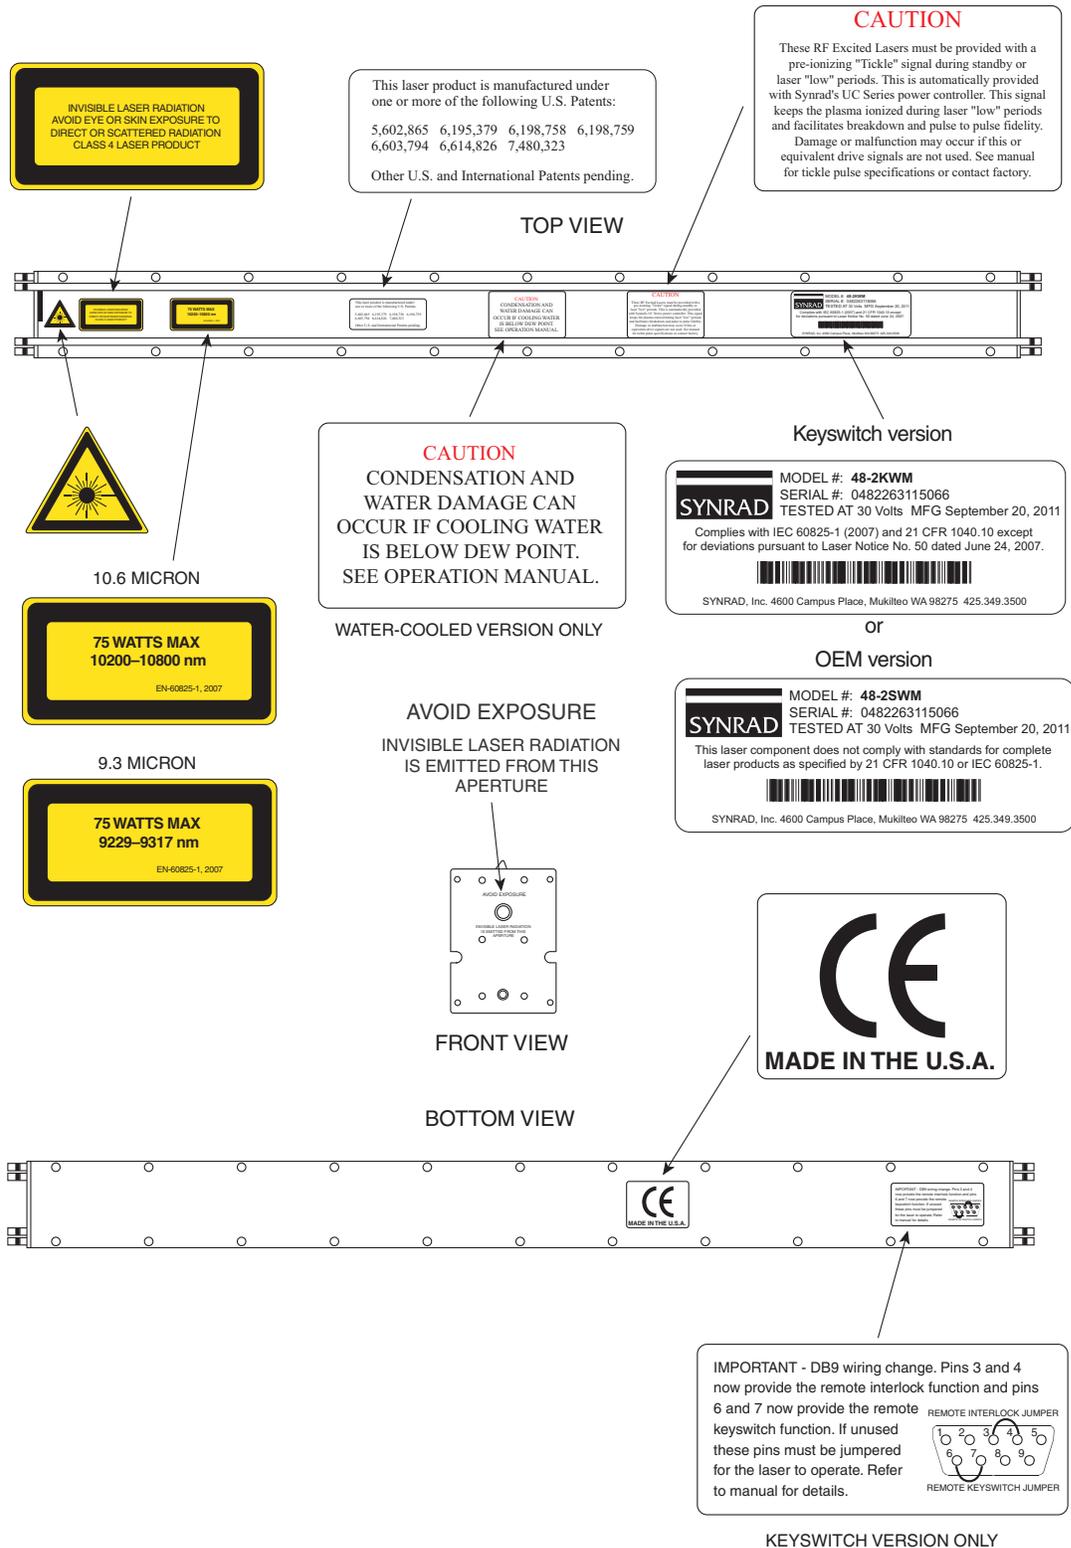

**Figure 2** 48-2 hazard label and CE label locations

# laser safety

## 48-5 label locations

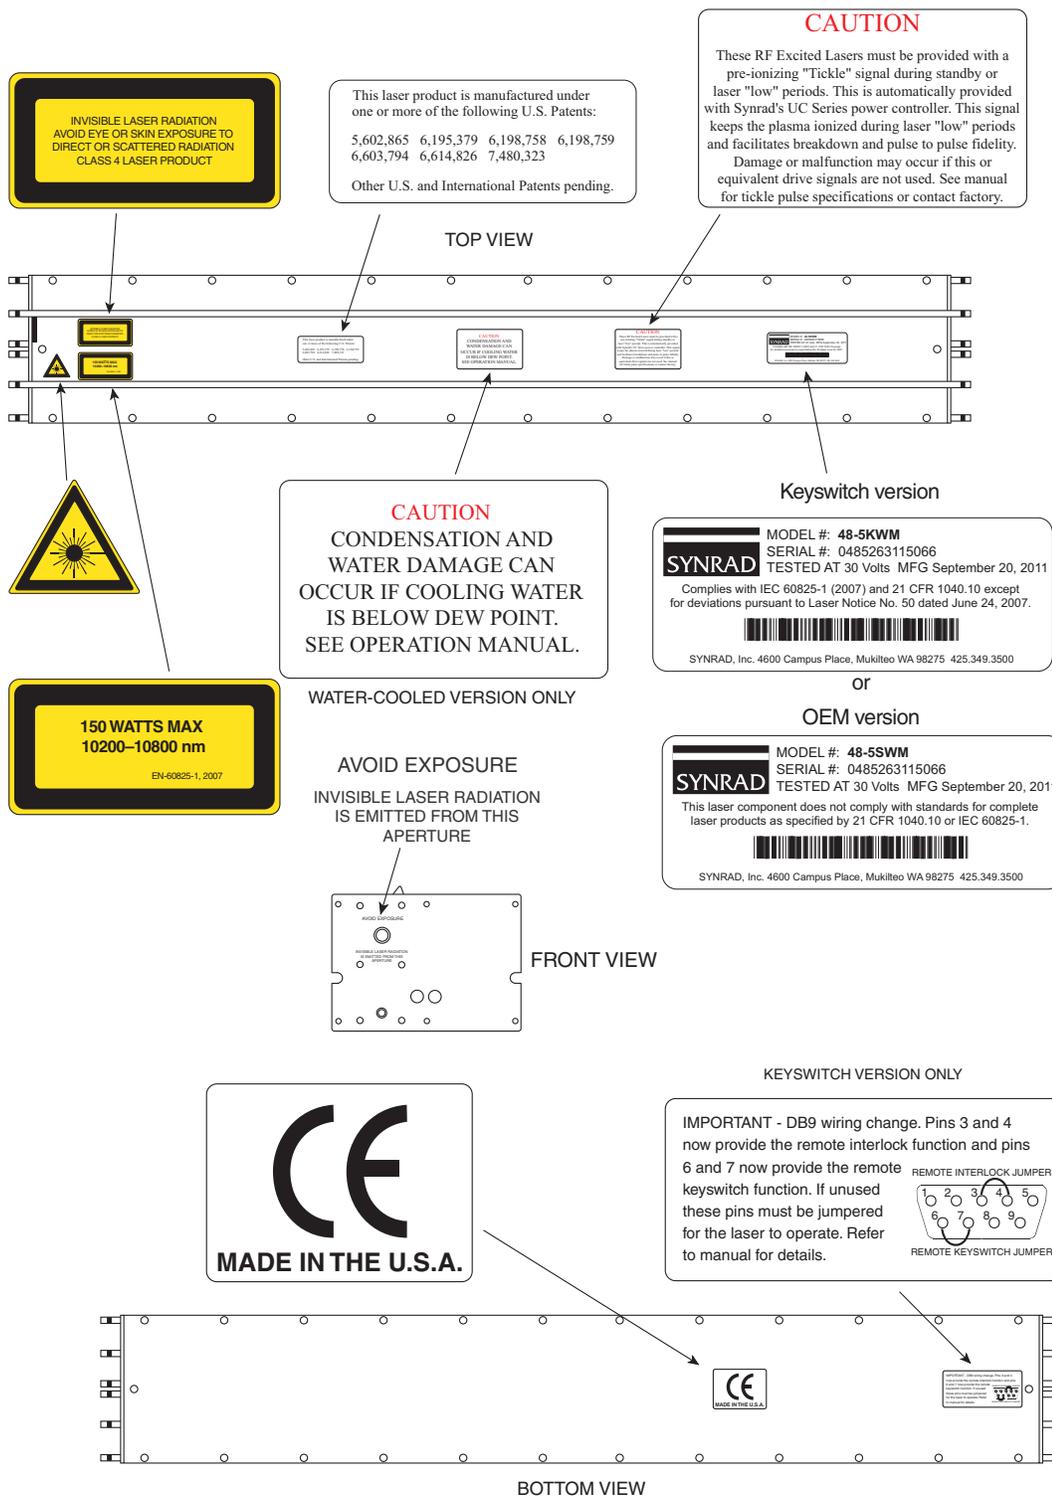


Figure 3 48-5 hazard label and CE label locations

# laser safety

## Agency compliance

The *Agency compliance* section includes subsections:

- Center for Devices and Radiological Health (CDRH) requirements
- Federal Communications Commission (FCC) requirements
- European Union (EU) requirements

SYNRAD lasers are designed, tested, and certified to comply with certain United States (U.S.) and European Union (EU) regulations. These regulations impose product performance requirements related to electromagnetic compatibility (EMC) and product safety characteristics for industrial, scientific, and medical (ISM) equipment. The specific provisions to which systems containing Series 48 lasers must comply are identified and described in the following paragraphs. Note that compliance to CDRH, FCC, and EU requirements depends in part on the laser version selected—Keyswitch or OEM.

In the U.S., laser safety requirements are governed by the Center for Devices and Radiological Health (CDRH) under the auspices of the U.S. Food and Drug Administration (FDA) while radiated emission standards fall under the jurisdiction of the U.S. Federal Communications Commission (FCC). Outside the U.S., laser safety and emissions are governed by European Union (EU) Directives and Standards.

In the matter of CE-compliant laser products, SYNRAD, Inc. assumes no responsibility for the compliance of the system into which the product is integrated, other than to supply and/or recommend laser components that are CE marked for compliance with applicable European Union Directives.

Because OEM laser products are intended for incorporation as components in a laser processing system, they do not meet all of the Standards for complete laser processing systems as specified by 21 CFR, Part 1040 or EN 60825-1. SYNRAD, Inc. assumes no responsibility for the compliance of the system into which OEM laser products are integrated.

## Center for Devices and Radiological Health (CDRH) requirements

### Keyswitch models

Series 48 Keyswitch model lasers comply with requirements for Class 4 laser products imposed by the Radiation Control for Health and Safety Act of 1968. Under this Act, the U.S. Food and Drug Administration (FDA) issued a performance standard in the *Code of Federal Regulations* (CFR) for laser products. This performance standard, (21 CFR, Subchapter J, Part 1040.10) was developed to protect public health and safety by imposing requirements upon manufacturers of laser products to provide an indication of the presence of laser radiation, to provide the user with certain means to control radiation, and to assure that all personnel are adequately warned of potential hazards through the use of product labels and instructions.

Product features incorporated into the design of Series 48 lasers to comply with CDRH requirements are integrated as panel controls or indicators, internal circuit elements, or input/output signal interfaces. Specifically, these features include a keyswitch (Keyswitch versions), lase and laser ready indicators, remote interlock for power on/off, a laser aperture shutter switch, and a five-second delay between power on and lasing. Incorporation of certain features is dependent on the laser version (Keyswitch or OEM). Table 1, *Class 4 safety features*, indicates which features are available on Series 48 lasers, the type and description of the feature, and if the feature is required by CDRH regulations.

# laser safety

## Agency compliance

### OEM models

Series 48 OEM lasers are OEM products intended for incorporation as components in laser processing systems. As supplied by SYNRAD, these lasers do not meet the requirements of 21 CFR, Subchapter J without additional safeguards. In the U.S., the Buyer of these OEM laser components is solely responsible for the assurance that the laser processing system sold to an end user complies with all laser safety requirements before the actual sale of the system. Under CDRH regulations, the Buyer must submit a report to the CDRH prior to shipping the system. In jurisdictions outside the U.S., it is the sole responsibility of the Buyer of these OEM components to ensure that they meet all applicable local laser safety requirements. In cases where the Buyer is also the end-user of the OEM laser product, the Buyer/end-user must integrate the laser so that it complies with all applicable laser safety standards as set forth above. Table 1, *Class 4 safety features*, indicates which features are available on Series 48 lasers, the type and description of the feature, and if the feature is required by CDRH regulations.

## Federal Communications Commission (FCC) requirements

The United States Communication Act of 1934 vested the Federal Communications Commission (FCC) with the authority to regulate equipment that emits electromagnetic radiation in the radio frequency spectrum. The purpose of the Communication Act was to prevent harmful electromagnetic interference (EMI) from affecting authorized radio communication services. The FCC regulations that govern industrial, scientific, and medical (ISM) equipment are fully described in 47 CFR, Part 18, Subpart C.

Series 48 lasers have been tested and found to comply by demonstrating performance characteristics that have met or exceeded the requirements of 47 CFR, Part 18, Radiated and Conducted Emissions.

## FCC information to the user

NOTE: The following FCC information to the user is provided to comply with the requirements of 47 CFR, Part 18, Section 213.

### Interference Potential

In our testing, SYNRAD, Inc. has not discovered any significant electrical interference traceable to Series 48 lasers.

### System Maintenance

Ensure that all exterior covers are properly fastened in position.

### Measures to Correct Interference

If you suspect that your Series 48 laser interferes with other equipment, take the following steps to minimize this interference:

- 1 Use shielded cables to and from the equipment that is experiencing interference problems.
- 2 Ensure that the Series 48 laser is properly grounded to the same electrical potential as the equipment or system it is connected to.
- 3 Install bisected ferrite on the laser's DC power cables; locate them as close as possible to the laser housing.

# laser safety

## Agency compliance

### FCC caution to the user

The Federal Communications Commission warns the user that changes or modifications of the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## European Union (EU) requirements

### Laser safety standards

Under the Low Voltage Directive, 2006/95/EC, the European Norm (EN) document EN 60825-1 was developed to protect persons from laser radiation by imposing requirements upon manufacturers of laser products to provide an indication of laser radiation; to classify laser products according to the degree of hazard; to require both user and manufacturer to establish procedures so that proper precautions are adopted; to ensure adequate warning of the hazards associated with accessible radiation through signs, labels, and instructions; to improve control of laser radiation through protective features; and to provide safe usage of laser products by specifying user control measures.

### Keyswitch models

Series 48 Keyswitch models are designed to comply with the requirements imposed by EN 60825-1 for Class 4 laser products. Table 1, *Class 4 safety features*, summarizes Series 48 product features, indicating the type and description of features and whether those features are required by European Union regulations.

### OEM models

Series 48 OEM lasers are OEM products intended for incorporation as components in laser processing systems. As supplied by SYNRAD, these lasers do not meet the requirements of EN 60825-1 without additional safeguards. European Union Directives state that "OEM laser products which are sold to other manufacturers for use as components of any system for subsequent sale are not subject to this Standard, since the final product will itself be subject to the Standard." This means that Buyers of OEM laser components are solely responsible for the assurance that the laser processing system sold to an end-user complies with all laser safety requirements before the actual sale of the system. Note that when an OEM laser component is incorporated into another device or system, the entire machinery installation may be required to conform to EN 60825-1; EN 60204-1, *Safety of Machinery*; the Machinery Directive EN 2006/42/EC; and/or any other applicable Standards. In cases where the Buyer is also the end-user of the OEM laser product, the Buyer/end-user must integrate the laser so that it complies with all applicable laser safety standards as set forth above. Table 1, *Class 4 safety features*, indicates which features are available on Series 48 lasers, the type and description of the feature, and if the feature is required by European Union regulations.

## Electromagnetic interference standards

The European Union's Electromagnetic Compatibility (EMC) Directive, 2004/108/EC, is the sole Directive developed to address electromagnetic interference (EMI) issues in electronic equipment. In particular, the Directive calls out European Norm (EN) documents that define the emission and immunity standards for specific product categories. For Series 48 lasers, EN 55011 and CISPR:11 define radiated and conducted RF emission limits while the generic Standards EN 61326 and EN 50082-1 define immunity requirements published by the International Electromechanical Commission (IEC).

SYNRAD's Series 48 lasers have demonstrated performance characteristics that have met or exceeded the requirements of EMC Directive 2004/108/EC.

# laser safety

## Agency compliance

**Table 1** Class 4 safety features

Feature	Location/Description	Required by:	
		CDRH	EN60825-1
Keyswitch <sup>1</sup>	Panel control On/Off Keyswitch controls power to laser electronics. Key can not be removed from switch in the “On” position.	Yes	Yes
Shutter function <sup>1</sup>	Laser control Attenuates beam/disables RF driver/laser output when closed.	Yes	Yes
Power indicator <sup>2</sup>	Panel indicator (Green) Indicates that laser has power applied and is capable of lasing.	Yes	No
Lase indicator	Panel indicator (Red) Indicates laser is actively lasing. Illuminates when duty cycle of Command signal is long enough to produce laser output.	Yes	Yes
Five-second delay	Circuit element Disables RF driver/laser output for five to ten seconds after Key-switch is turned to “On” and remote keyswitch is closed.	Yes	No
Power-on reset <sup>1</sup>	Circuit element Disables RF driver/laser output if input power is removed then later reapplied (AC power failure) while Keyswitch is in “On” position.	Yes	Yes
Remote Interlock <sup>1</sup>	Panel connection Disables RF driver/laser output when remote interlock switch on equipment door or panel is opened.	Yes	Yes
Remote Keyswitch	Panel connection Allows operator to turn laser On/Off from a remote location.	No	No
Over/under voltage protection	Circuit element Fault shutdown occurs if supply voltage falls below +15 V or rises above +36 V. Reset laser to restore operation.	No	No
Reverse voltage protection	Circuit element Internal diode protects circuitry from reverse input voltages. External fuse will blow.	No	No
Overtemp protection	Circuit element Over temperature shutdown occurs when temperature of tube reaches 60 °C ±2 °C. Reset laser to restore operation.	No	No
PWM failure protection	Circuit element Disables laser if output power exceeds Command input by 20% or more due to electronics failure. Reset laser to restore operation.	No	No
Fault signal	Signal output Latches to a logic low state when a fault shutdown occurs.	No	No
Message signal	Signal output Pre-shutdown warning latches to a logic low state when tube temperature reaches 54 °C ±2 °C.	No	No
Warning labels	Exterior housing Labels attached to various locations to warn of potential hazards.	Yes	Yes

<sup>1</sup> Keyswitch version only

<sup>2</sup> On OEM versions, the Power indicator illuminates and the five-second delay begins when DC power is applied to the laser

# laser safety

## Agency compliance

When integrating SYNRAD's Series 48 OEM lasers, the Buyer and/or integrator of the end system is responsible for meeting all applicable Standards to obtain the CE mark. To aid this compliance process, SYNRAD's testing program has demonstrated that Series 48 lasers comply with the relevant requirements of 2004/108/EC, the Electromagnetic Compatibility Directive, as summarized in Table 2 below.


**Table 2** European Union Directives

<b>Applicable Standards/Norms</b>	
2004/108/EC	Electromagnetic Compatibility Directive
2006/95/EC	Low Voltage Directive
2011/65/EU	RoHS Directive
EN 60825-1:2007	Safety of Laser Products (Keyswitch models only)
EN 61010-1:2001	Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 1: General Requirements
EN 55011:1998	Conducted and Radiated Emissions Group 2, Class A
EN 50082-1:1997	RF Electromagnetic Immunity
IEC 1000-4-2:1995	Electrostatic Discharge Immunity
IEC 1000-4-3:1995	RF Electromagnetic Fields Immunity
IEC 1000-4-4:1995	Electrical Fast Transient/Burst Immunity

## RoHS compliance

SYNRAD Series 48 M version lasers meet the requirements of the European Parliament and Council Directive 2011/65/EU on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment that establishes maximum concentration values for certain hazardous substances in electrical and electronic equipment.

After a laser or laser processing system has met the requirements of all applicable EU Directives, the product can bear the official compliance mark of the European Union as shown in Figure 4 and a Declaration of Conformity is provided for the compliant component.

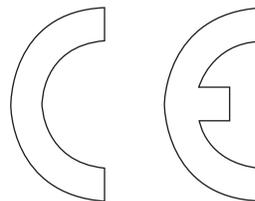

MADE IN U.S.A.

**Figure 4** European compliance mark

# laser safety

## Declaration of Conformity

### Declaration of Conformity

in accordance with ISO/IEC 17050-2:2004

We,

**Manufacturer's Name:** SYNRAD, Inc.

**Manufacturer's Address:** 4600 Campus Place  
Mukilteo, WA 98275  
U.S.A.

hereby declare under our sole responsibility that the following equipment:

**Product Name:** Series 48 M Version Laser

**Model Number:** 48-1KxM, 48-2KxM, 48-5KWM (Keyswitch)  
48-1SxM, 48-2SxM, 48-5SWM (OEM\*)

conforms to the following Directive(s) and Standard(s):

**Applicable Directive(s):** 2004/108/EC Electromagnetic Compatibility Directive  
2011/65/EU RoHS Directive

**Applicable Standard(s):** EN 61010-1:2001 Safety Requirements for Electrical Equipment  
for Measurement, Control, and Laboratory  
Use - Part 1: General Requirements

EN 60825-1:2007 Safety of Laser Products (Keyswitch only)

EN 55011:1998 Conducted and Radiated Emissions, Group 2,  
Class A

EN 50082-1:1997 RF Electromagnetic Immunity

IEC 1000-4-2:1995 Electrostatic Discharge Immunity

IEC 1000-4-3:1995 RF Electromagnetic Field Immunity

IEC 1000-4-4:1995 Electrical Fast Transient/Burst Immunity

\*OEM lasers do not comply with EN 60825-1:2007, *Safety of Laser Products*. Buyers of OEM laser products are solely responsible for meeting applicable Directives and Standards for CE compliance and marking.

**Corporate Officer:**



Dave Clarke, President of SYNRAD, Inc.

**European Contact:**

Synrad Europe  
Münchener Straße 2A  
D-82152 Planegg  
Germany

Dated 09 May 2012



MADE IN U.S.A.

# getting started

Use information in this chapter to prepare your Series 48 laser for operation. The order of information presented in this chapter is the same as the order of tasks that you need to perform. The best way to get your laser ready for operation is to start at *Unpacking* and work your way through *Connecting*.

This chapter contains the following information:

- Introduction – introduces Series 48 lasers and lists important features.
- Unpacking – provides important information about shipping your Series 48 laser.
- Inventory – displays and describes all components shipped with your laser.
- Mounting – describes how to attach laser components to a mounting surface.
- Connecting – explains how to connect power and control cables as well as cooling connections for water-cooled models.

# getting started

## Introduction

The *Introduction* section includes subsections:

- Series 48 features
- Series 48 nomenclature
- Model numbers

## Series 48 features

The Series 48 family of lasers incorporates the latest developments in sealed carbon dioxide devices, combining the best features of both waveguide and free space CO<sub>2</sub> laser technology in an innovative aluminum tube design. Series 48 lasers utilize state-of-the-art surface mount electronics, newly patented RF excitation technology, and fully CE-compliant systems for EMI containment, heat removal, and laser safety. In the 10 W to 50 W range of continuous optical output, these lasers represent an ideal balance between proven, mature laser tube technology and reliable, simplified electronic control.

Series 48 features include:

- Compact resonator design
- RF power supply integrated into laser chassis
- Keyswitch air- or water-cooled models available
- 10 W and 25 W models available in 9.3 μm or standard 10.6 μm wavelengths
- OEM (no Keyswitch/no shutter) air- or water-cooled models available

## Series 48 nomenclature

Series 48 lasers are divided into two distinct functional categories: Keyswitch and OEM models. In addition to a manual *Keyswitch*, all *Keyswitch*-equipped lasers include a manual *Shutter Switch* that allows the laser output aperture to be blocked. OEM lasers do not incorporate either a manual keyswitch or shutter assembly since they are primarily designed as components for integration into a larger processing system by an Original Equipment Manufacturer (OEM) or System Integrator who bears the responsibility for meeting the appropriate laser safety requirements for Class 4 laser systems.

## Model numbers

The last three characters in the Series 48 model number serve to designate the functional category, cooling method, and model version. The functional category is indicated by either a “K” for Keyswitch or “S” (Switch-less) for OEM models. The next letter indicates the cooling method: “W” for water-cooled units, “F” for fan-cooled units, and “A” for air-cooled lasers (where the customer must provide the proper cooling via fans). The last letter in the model number indicates the current model version beginning with “B”. For example, the model number 48-1SAM designates that particular 48-1 (10 W) laser as an OEM, air-cooled, “M” version model.

# getting started

## Unpacking

The *Unpacking* section includes subsections:

- Incoming inspection
- Packaging guidelines

### Incoming inspection

Upon arrival at your facility, inspect all shipping containers for signs of damage. If you discover shipping damage, document the damage (photographically if possible), then immediately notify the shipping carrier and SYNRAD.

The shipping carrier is responsible for any damage occurring during transportation from SYNRAD, Inc. to your receiving dock.


Carefully remove your Series 48 laser from the shipping container and remove the outer foam packing material. Inspect the laser housing for any signs of shipping damage. Verify that all external labels are attached to the housing (refer to label location drawings in the Laser Safety chapter). Contact SYNRAD Customer Service if the laser housing is damaged or if any of the required accessory materials or labels are missing.

### Packaging guidelines

- To prevent equipment damage or loss of small components, use care when removing packaging materials.
- Save all shipping containers and packaging materials, including covers and plugs. Use these specialized packing materials when shipping the laser to another location.
- After unpacking, review the *Inventory* section and verify that all components are on hand.
- When packing a laser for shipment, be sure to remove all accessory items not originally attached to the laser including beam delivery components, cooling tubing, fittings, etc.
- Refer to the *Packaging instructions* drawings in the Technical Reference chapter for information on packaging a Series 48 laser for shipment using SYNRAD-supplied packaging materials.
- When shipping water-cooled lasers, remember to drain all cooling water from the laser and then cap the open fittings to prevent debris from entering the coolant path.
- Do not lift or support the laser using the cooling fittings; lift the laser by the mounting feet or baseplate only.

# getting started

## Inventory

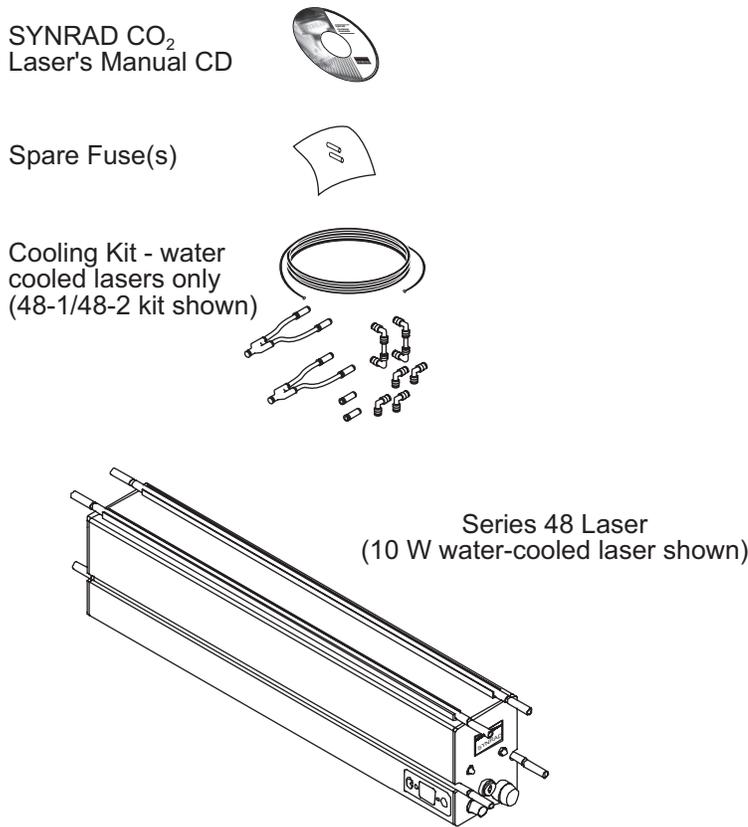

**Figure 1-1** Series 48 shipping box contents

Table 1-1 lists items included in the Series 48 ship kit.

**Table 1-1** Ship kit contents

Shipping Box Contents	Qty
SYNRAD Series 48 Laser .....	1
SYNRAD CO <sub>2</sub> Lasers Manual CD (Keypress models only)...	1
Mounting Kit (not shown, Keypress models only) .....	1
Spare Fuse(s) .....	1
Cooling Kit (water-cooled lasers only) .....	1
Final Test Report (not shown) .....	1

# getting started

## Inventory

### Contents description

Each item listed in Table 1-1 is described below.

SYNRAD Series 48 Laser – for cutting, welding, drilling, and marking a wide variety of products and materials.

SYNRAD CO<sub>2</sub> Lasers Manual CD (Keyswitch models only) – contains a *Series 48 M Version Operator's Manual* that provides setup, operation, and maintenance information for your laser.

Mounting Kit (Keyswitch models only) – contains components to mount the laser and also includes a DB-9 connector and cover to replace the factory jumper plug when integrating Series 48 laser signals into your control system.

Spare Fuse(s) – fast-blow fuse protects Series 48 internal circuitry. A 10 A fuse is included with 48-1 lasers, a 20 A fuse with 48-2 lasers, and two 20 A fuses are shipped with 48-5 lasers.

Cooling Kit (water-cooled lasers only)

(48-1/48-2) – includes quick-disconnect inlet and outlet cooling manifolds, extra 1/4" union elbows, extra straight 1/8" NPT to 1/4" tube fittings, and 20 feet of 1/4" O.D. black polyethylene tubing.

(48-5) – includes quick-disconnect inlet and outlet cooling manifolds, extra 1/4" union elbows, extra straight 1/4" NPT to 3/8" tube fittings, and 20 feet of 3/8" O.D. black polyethylene tubing.

Final Test Report (not shown) – contains data collected during the laser's final pre-shipment test.

# getting started

## Mounting

The *Mounting* section includes subsections:

- Standard mounting
- With an FH Series marking head

## Standard mounting

The recommended mounting orientation for Series 48 lasers is horizontal. If this cannot be accomplished then the laser may be mounted at an angle of  $> 20^\circ$  to the vertical. Consult the factory for limitations if the laser is mounted in a vertical orientation.

### Caution

possible  
equipment  
damage

SYNRAD does not recommend mounting lasers in a vertical “head-down” or “tail-down” orientation. If you must mount your laser in this manner, please contact the factory for limitations as vertical orientation increases the risk of damage to the laser’s output optic.

**Note:** To allow for proper airflow, air-cooled units must have at least 57.2 mm (2.25 in) of unobstructed clearance between the outside edge of the cooling fan and any enclosure or mounting surface.

Series 48 lasers may be hard-mounted to equipment by removing several of the bottom panel screws and replacing these with longer screws to secure the laser to optical assemblies. This mounting method is only recommended as long as the screws do not support the weight of the laser. For a sturdier attachment, the laser may be clamped to optical assemblies by applying clamping forces between top and bottom cover screws. Do not apply clamping forces on the longitudinal centerline.

- 1 Refer to the appropriate outline and mounting diagram in the Technical Reference chapter for mounting screw locations and then drill four (48-1) or six (48-2/48-5) holes into your mounting surface. Locate holes in a symmetrical pattern to properly distribute mounting forces.

**Note:** Do not remove covers from the laser housing when mounting.

- 2 Place your Series 48 laser on the mounting surface so that the threaded holes on the laser housing line up with the holes drilled through the mounting surface.
- 3 Measure the 6–32 screws (48-1/48-2) or 10–32 screws (48-5) you removed from the laser housing and add a length equivalent to the thickness of the mounting surface.
- 4 Insert these new screws through the mounting surface into the threaded holes of the laser housing. Turn the screws by hand until the threads engage and then tighten using an Allen wrench.

# getting started

## Mounting

### With an FH Series marking head

To mount your Series 48 laser to an FH Series marking head, perform the following steps:

**Note:** The laser's mounting feet are precisely aligned and shimmed at the factory to ensure alignment between the marking head and the *Mounting Rail*. Do not loosen or remove the mounting feet from the laser. See the *FH Flyer Marking Head Operator's Manual* for further details.

- 1 Orient the laser on the FH *Mounting Rail* with the laser's output aperture facing the *L-bracket*.
- 2 Ease the laser forward until the dowel pins on the mounting feet drop into the dowel pin holes in the *Mounting Rail*. The screw holes on the ends of the mounting feet should be positioned over the appropriate mounting holes in the *Mounting Rail*.
- 3 Install and tighten four capscrews to secure the laser to the *Mounting Rail*. 48-1 and 48-2 lasers use 6-32 × 1" socket head capscrews while 48-5 lasers use 10-32 × 3/4" fasteners.

# getting started

## Connecting

The *Connecting* section includes subsections:

- Air-cooled connections
- Water-cooled connections
- Electrical connections
- Control connections
- DB-9 connections


The *Connecting* section contains all the information you need to connect your Series 48 laser for operation. Figure 1-8 at the end of this chapter illustrates the connections used in a typical Series 48 laser system.

## Air-cooled connections

**Note:** 48-5 (50 W) lasers must be water-cooled to prevent damage to the laser. See the *Water-cooled connections* section for connection details.

Since air-cooled lasers are shipped without cooling fans, customers must provide air cooling to prevent overheating of the laser. An airflow of 7.1 m<sup>3</sup>/min (250 CFM) per fan is required to keep laser and heatsink temperatures below 50 °C (122 °F). 48-1 lasers have a heat load specification of 300 W maximum and requires two cooling fans for a total of 14.2 m<sup>3</sup>/min (500 CFM). 48-2 lasers have a 500 W heat load and requires four cooling fans for a total air flow of 28.3 m<sup>3</sup>/min (1000 CFM).

Place cooling fans symmetrically on each side of the laser so that air flow is directed perpendicular to the laser's cooling fins as shown in Figure 1-2. The fans should have a diameter of approximately 114–127 mm (4.5–5 in) and have at least 57.2 mm (2.25 in) of unobstructed clearance between the outside edge of the cooling fan housing and any enclosure or mounting surface.

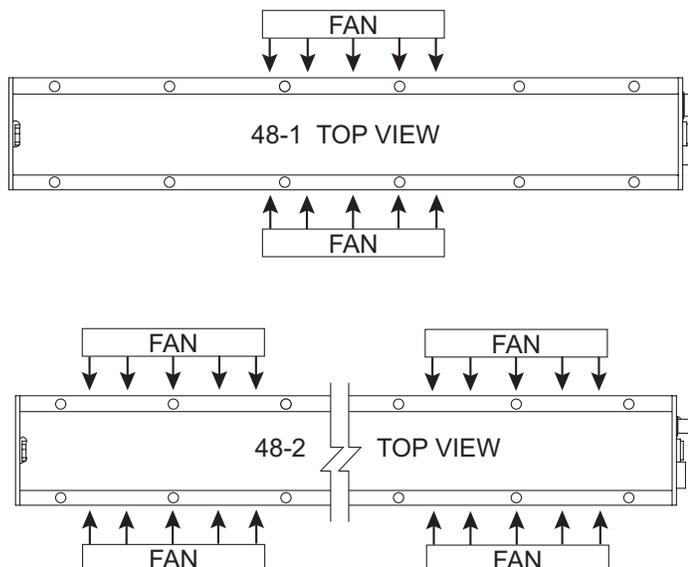

**Figure 1-2** 48-1/48-2 cooling fan placement

# getting started

## Connecting

### Water-cooled connections

Read *Guidelines for cutting and installing tubing* before installing any cooling tubing and then make sure to connect the cooling system exactly as described for your particular laser.

#### Guidelines for cutting and installing tubing

- Cut tubing lengths generously to allow for trimming.
- Cut tubing squarely; diagonal cuts may not seal properly. Trim away any burrs if the cut is “ragged”.
- Avoid excessive stress on fittings by creating a gentle radius when bends in the tubing are close to fittings. Bending tubing too sharply will compromise the sealing properties of the fitting.
- Never allow the tubing to kink, since kinking severely restricts coolant flow.
- Push tubing completely into the fitting, then pull the tubing to verify that it is locked into place.
- If tubing must be disconnected from a fitting, first push and hold the tubing slightly into the fitting. Next push the white fitting ring evenly towards the fitting, and then pull the tubing free.
- After disconnecting tubing from a fitting, trim 12.7 mm (0.5 in) from its end before reconnecting. Trimming the end of the tubing before reconnecting provides an undisturbed sealing surface.

#### Laser cooling fittings

If your integrated laser application uses metric cooling tubing, we recommend the installation of tubing adaptors to convert 48-1/48-2 cooling kit fittings from 1/4" tubing to 6 mm metric tubing. For 48-5 cooling kits, convert the 3/8" tubing to 8 mm metric tubing. These tubing adaptors are available from many tubing and fitting manufacturers.

#### Chiller preparation guidelines

- You must provide fittings that will adapt the laser’s 1/4" or 3/8" O.D. polyethylene cooling tubing to your chiller’s Inlet and Outlet ports. These fittings can be either “quick disconnect” or compression type fittings.
- Because Series 48 cooling tubing is specified in inch sizes, the use of metric tube fittings is discouraged unless you have installed the appropriate inch-to-metric tubing adaptors. The use of metric fittings on inch size tubing will lead to coolant leaks or may allow pressurized tubing to blow-off the fitting.

#### Coolants

SYNRAD recommends that the laser’s cooling fluid contain at least 90% distilled water by volume. In closed-loop systems, use a corrosion inhibitor/algaecide such as Optishield® Plus or equivalent as required. Avoid glycol-based additives because they reduce the coolant’s heat capacity and high concentrations may affect power stability. For SYNRAD lasers, the minimum coolant setpoint is 18 °C (64 °F) so glycol is not necessary unless the chiller is subjected to freezing temperatures. If tap water is used, chloride levels should not exceed a concentration of 25 parts per million (PPM) and total hardness should be below 100 PPM. Install a filter on the chiller’s return line and inspect frequently.

**Note:** DO NOT use de-ionized (DI) water as a coolant. DI water is unusually corrosive and is not recommended for mixed material cooling systems.

# getting started

## Connecting

### Setting coolant temperature

Choosing the correct coolant temperature is important to the proper operation and longevity of your laser. When coolant temperature is lower than the dew point (the temperature at which moisture condenses out of the surrounding air), condensation forms inside the laser housing leading to failure of laser electronics as well as damage to optical surfaces.

The greatest risk of condensation damage occurs when water-cooled lasers are run in a high heat/high humidity environment and the chiller's coolant temperature is colder than the dew point temperature of the surrounding air or when the system is shut down, but coolant continues to flow through the laser for extended periods of time.

The chiller's temperature setpoint must always be set above the dew point temperature. In cases where this is not possible within the specified coolant temperature range of 18 °C to 22 °C (64 °F to 72 °F), then the following steps **MUST** be taken to reduce the risk of condensation damage.

- Stop coolant flow when the laser is shut down.
- Increase coolant flow by an additional 3.8 lpm (1.0 GPM). Do not exceed a coolant pressure of 414 kPa (60 PSI).
- Air-condition the room or the enclosure containing the laser.
- Install a dehumidifier to reduce the humidity of the enclosure containing the laser.

Table 1-2 provides dew point temperatures for a range of air temperature and relative humidity values. Remember that the laser's coolant temperature must be set above the dew point temperatures shown in the chart; **however, for best results and performance, use a coolant temperature in the range of 18–22 °C (64–72 °F).**

### Caution

possible  
equipment  
damage

Operating the laser at coolant temperatures above 22 °C (72 °F) may result in decreased performance and/or premature failure of electronic components.

# getting started

## Connecting

**Table 1-2** Dew point temperatures

Dew Point Temperature Chart °F (°C)		Relative Humidity (%)															
		20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95
Air Temp °F (°C)																	
60 (16)	—	—	—	32 (0)	36 (2)	39 (4)	41 (5)	44 (7)	46 (8)	48 (9)	50 (10)	52 (11)	54 (12)	55 (13)	57 (14)	59 (15)	
65 (18)	—	—	33 (1)	37 (3)	40 (4)	43 (6)	46 (8)	48 (9)	51 (11)	53 (12)	55 (13)	57 (14)	59 (15)	60 (16)	62 (17)	64 (18)	
70 (21)	—	33 (1)	37 (3)	41 (5)	45 (7)	48 (9)	51 (11)	53 (12)	56 (13)	58 (14)	60 (16)	62 (17)	64 (18)	65 (18)	67 (19)	69 (21)	
75 (24)	—	37 (3)	42 (6)	46 (8)	49 (9)	52 (11)	55 (13)	58 (14)	60 (16)	62 (17)	65 (18)	67 (19)	68 (20)	70 (21)	72 (22)	73 (23)	
80 (27)	35 (2)	41 (5)	46 (8)	50 (10)	54 (12)	57 (14)	60 (16)	62 (17)	65 (18)	67 (19)	69 (21)	71 (22)	73 (23)	75 (24)	77 (25)	78 (26)	
85 (29)	40 (4)	45 (7)	50 (10)	54 (12)	58 (14)	61 (16)	64 (18)	67 (19)	70 (21)	72 (22)	74 (23)	76 (24)	78 (26)	80 (27)	82 (28)	83 (28)	
90 (32)	44 (7)	50 (10)	54 (12)	59 (15)	62 (17)	66 (19)	69 (21)	72 (22)	74 (23)	77 (25)	79 (26)	81 (27)	83 (28)	85 (29)	87 (31)	88 (31)	
95 (35)	48 (9)	54 (12)	59 (15)	63 (17)	67 (19)	70 (21)	73 (23)	76 (24)	79 (26)	81 (27)	84 (29)	86 (30)	88 (31)	90 (32)	92 (33)	93 (34)	
100 (38)	52 (11)	58 (14)	63 (17)	68 (20)	71 (22)	75 (24)	78 (26)	81 (27)	84 (29)	86 (30)	88 (31)	91 (33)	93 (34)	95 (35)	97 (36)	98 (37)	

To use Table 1-2, look down the *Air Temp* column and locate an air temperature in Fahrenheit or Celsius (°C values are shown in parentheses) that corresponds to the air temperature in the area where your laser is operating. Follow this row across until you reach a column matching the relative humidity in your location. The value at the intersection of the *Air Temp* and *Relative Humidity* columns is the *Dew Point* temperature in °F (or °C). The chiller's temperature setpoint must be set **above** the dew point temperature.

For example, if the air temperature is 85 °F (29 °C) and the relative humidity is 60%, then the dew point temperature is 70 °F (21 °C). Adjust the chiller's temperature setpoint to 72 °F (22 °C) to prevent condensation from forming inside the laser.


# getting started

## Connecting

### 48-1/48-2 cooling tubing connections

Water enters the laser's rear plate through the lower 1/4" diameter cooling tubes and exits through the top-mounted cooling tubes. The two right angle connections are installed at the front. Both circuits must be used in parallel to maintain thermal balance. All fittings are quick-disconnect, push-on types.

To connect coolant tubing to your 48-1/48-2 laser, refer to Figure 1-3 and perform the following steps:

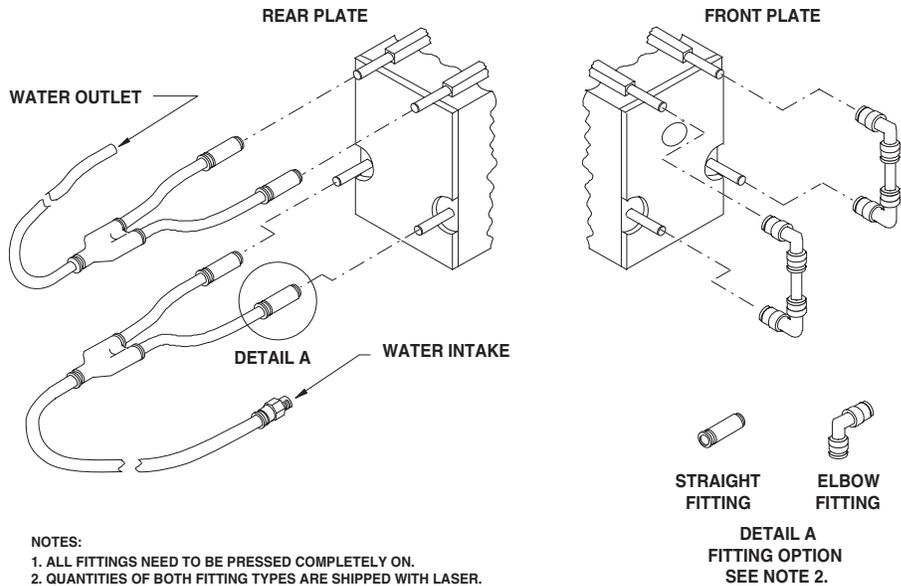

**Figure 1-3** 48-1/48-2 cooling connections

- 1 Connect the Water Intake manifold to both of the laser's lower coolant tubes on the rear plate.
- 2 Connect the Water Intake fitting to your coolant source.
- 3 Connect the Water Outlet manifold to both of the laser's upper coolant tubes on the rear plate.
- 4 Connect the Water Outlet fitting to your coolant return or drain.
- 5 On the front plate, connect one right angle connection between one of the lower coolant tubes and its corresponding upper coolant tube. Repeat this step on the other set of lower/upper tubes.
- 6 Turn on the chiller and adjust the temperature setpoint between 18–22 °C. For 48-1 lasers, regulate coolant flow to 1.9 lpm (0.5 GPM) at less than 414 kPa (60 PSI) of pressure. For 48-2 lasers set a coolant rate of 3.0 lpm (0.8 GPM) at less than 414 kPa (60 PSI) of pressure.
- 7 Closely examine all cooling connections and verify that there are no leaks.

**Important Note:** Inlet cooling water temperature must always be maintained above the dew point temperature to prevent condensation and water damage to your laser.


# getting started

## Connecting

### 48-5 cooling tubing connections

Cooling water enters through the two lower side-mounted tubes plus one of the center-mounted cooling tubes located on the laser's rear plate. Cooling water flows through the tubes and out the two top-mounted cooling tubes and the other center-mounted tube. The front central tubes are "jumpered" using a "U" fitting while the front side and top connections on the front plate are also jumpered using two right angle connections. All fittings are quick-disconnect, push-on types.

To connect cooling tubing to your 48-5 laser, refer to Figure 1-4 and perform the following steps:

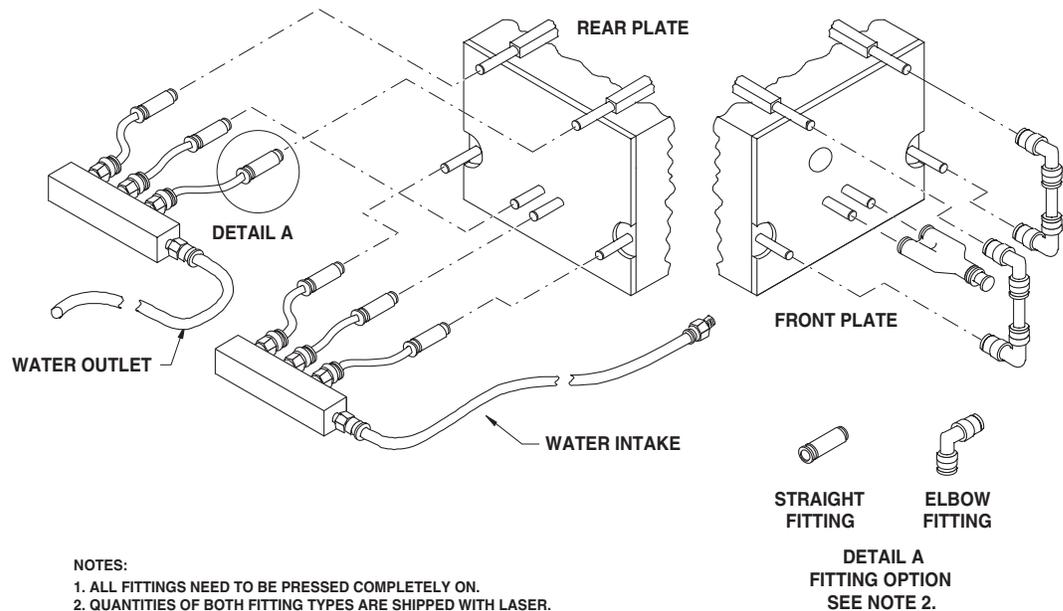

**Figure 1-4** 48-5 cooling connections

- 1 Connect the Water Intake manifold tubing to both of the laser's lower side-mounted coolant tubes and one of the center coolant tubes on the rear plate.
- 2 Connect the Water Intake fitting to your coolant source.
- 3 Connect the Water Outlet manifold tubing to both of the laser's upper coolant tubes and one of the center coolant tubes on the rear plate.
- 4 Connect the Water Outlet fitting to your coolant return or drain.
- 5 On the front plate, connect one right angle connection between one of the lower coolant tubes and its corresponding upper coolant tube. Repeat this step on the other set of lower/upper tubes.
- 6 Connect the "U" connector between both of the center coolant tubes.
- 7 Turn on the chiller and adjust the temperature setpoint between 18 °C–22 °C. Regulate coolant flow to 5.7 lpm (1.5 GPM) at less than 414 kPa (60 PSI) of pressure.
- 8 Closely examine all cooling connections and verify that there are no leaks.

**Important Note:** Inlet cooling water temperature must always be maintained above the dew point to prevent condensation and water damage to your laser.

# getting started

## Connecting Electrical connections

### DC power supply

**Note:** The negative (–) side of the DC input to the laser is internally connected so that the laser chassis serves as DC power ground. You should isolate the laser’s DC power supply so that the only grounded connection is at the laser. Alternatively, you can mount the laser chassis on an insulating pad or film in order to electrically isolate the laser when other equipment is grounded to the laser’s DC power supply.


The 48-1 laser requires a DC power supply capable of providing 30 VDC at 7 A minimum; the 48-2 laser requires 30 VDC at 14 A and the 48-5 requires 30 VDC at 28 A min. For the 48-1 laser, SYNRAD recommends the DC-1, a 30 V, 250 W DC power supply; for 48-2 lasers, we recommend the PS-2, a 30 V, 750 W DC power supply; and for the 48-5 laser, we recommend the PS-6, a 30 V, 1500 W DC power supply.

If substituting power supplies, use a well-regulated DC power supply in the range of 30 V to 32 V with no more than 3 V overshoot under a 10–90% modulation load. The use of short leads and terminations rated for the appropriate output current is recommended.

**Note:** Series 48 lasers are tested to meet published specifications at an input voltage of 30.0 VDC.

### DC-1 DC power supply (48-1 laser)

AC input power requirements for the DC-1 power supply are 85–264 VAC, single phase (1Ø), 4 A max, 47–440 Hz. To connect the DC-1 power supply, refer to Figure 1-5 and perform the following steps:

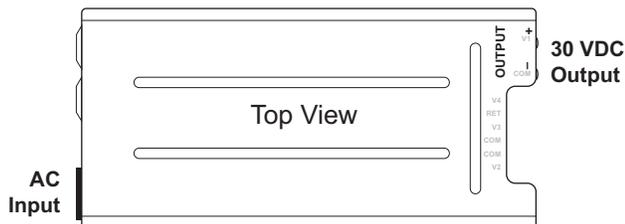

**Figure 1-5** DC-1 (Emerson LPS) power supply

- 1 Verify that input AC to the DC power supply is physically locked out or disconnected.
- 2 Locate the 30 VDC output terminals on the power supply’s output section and connect the black (–) DC Power cable from the laser to the negative (– COM) output terminal.
- 3 Connect the red (+) DC Power cable from the laser to the positive (+ V1) 30 VDC output terminal.
- 4 Connect an AC line cord to the AC receptacle located on the fan end of the DC-1 power supply.


**Note:** Because AC input connections and requirements vary from country to country, customers must provide an AC power cable with the proper AC outlet plug on one end and a standard IEC 320 female connector, for the DC-1 power supply, on the other end.

# getting started

## Connecting

### PS-2 DC power supply (48-2 laser)

AC input requirements for the PS-2 power supply are 90–264 VAC (auto-ranging) single phase (1Ø), 10 A max, 47–440 Hz. To connect the PS-2 power supply, refer to Figure 1-6 and perform the following steps:

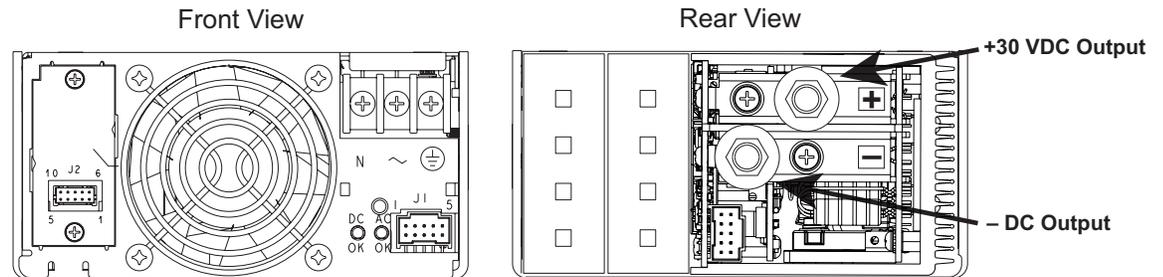

**Figure 1-6** PS-2 (Emerson iMP4) power supply

- 1 Verify that input AC power to the DC power supply is physically locked out or disconnected.
- 2 Locate the 30 VDC output terminals on the power supply's rear (output) section and connect the black (–) DC Power cable from the laser to the negative (–) DC output terminal.
- 3 Connect the red (+) DC Power cable from the laser to the positive (+) 30 VDC output terminal.
- 4 On the supply's front (input) section, connect the neutral wire, typically white, from your AC voltage source to the terminal labeled "N" (Neutral).
- 5 Connect the AC hot wire, typically black, from your AC voltage source to the terminal labeled "~" (AC Hot Line).
- 6 Connect the ground (earth) wire, typically green, from your AC voltage source to the terminal labeled with the ground symbol.


**Note:** Because AC input connections and requirements vary from country to country, customers must provide the appropriately sized AC power cable or wiring.

# getting started

## Connecting

### PS-6 DC power supply (48-5 laser)

AC input requirements for the PS-6 power supply are 90–264 VAC (auto-ranging) single phase (1Ø), 20 A max, 47–440 Hz. To connect the PS-6 power supply, refer to Figure 1-7 and perform the following steps:

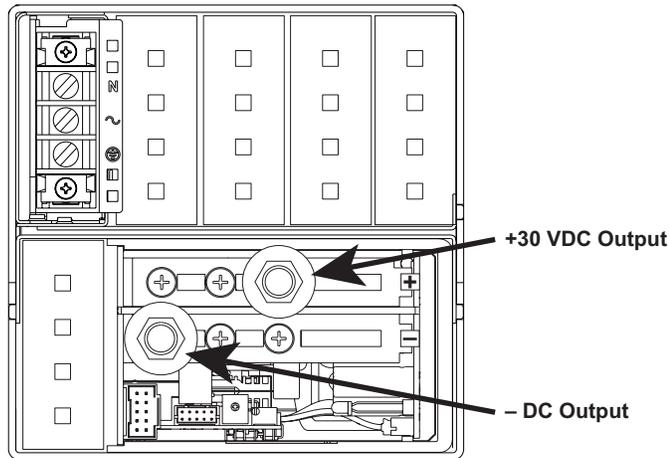

**Figure 1-7** PS-6 (Emerson iVS1) power supply

- 1 Verify that input AC power to the DC power supply is physically locked out or disconnected.
- 2 Locate the 30 VDC output terminals on the power supply's output section and connect the black (–) DC Power cable from the laser to the negative (–) DC output terminal.
- 3 Connect the red (+) DC Power cable from the laser to the positive (+) 30 VDC output terminal.
- 4 On the supply's input section, connect the neutral wire, typically white, from your AC voltage source to terminal “N” (Neutral).
- 5 Connect the AC hot wire, typically black, from your AC voltage source to the terminal labeled “~” (AC Hot Line).
- 6 Connect the ground (earth) wire, typically green, from your AC voltage source to the terminal labeled with the ground symbol.

**Note:** Because AC input connections and requirements vary from country to country, customers must provide the appropriately sized AC power cable or wiring.

## Control connections

### UC-2000 Universal Laser Controller

The operation of Series 48 lasers requires an external controller that can provide the necessary tickle and pulse width modulated (PWM) Command signals. SYNRAD recommends the use of a UC-2000 Universal Laser Controller to generate the PWM signals that control the laser's output power. The UC-2000 requires 15–50 VDC @ 35 mA, supplied from either its wall plug transformer or from the *Auxiliary Power* connector on the side of Series 48 lasers. Refer to the *UC-2000 Laser Controller Operator's Manual* for information about UC-2000 operation.

To connect a UC-2000 Controller (not included with Series 48 lasers), perform the following steps:

# getting started

## Connecting

**Warning**  
serious  
personal  
injury

Always use shielded cable when connecting your PWM Command signal source to the laser's *CTRL* connections. In electrically-noisy environments, long lengths of unshielded wire act like an antenna and may generate enough voltage to trigger uncommanded lasing.

- 1 Connect the mini-DIN connector on the end of the UC-2000 Controller's *Power/Control* cable to the *Laser* connector on the rear panel of the UC-2000.
- 2 Connect the miniature DC power plug on the UC-2000's *Power/Control* cable to the laser's side-mounted *Auxiliary Power* connector.  
  
To use the UC-2000's wall plug transformer instead, connect the miniature DC power plug on the UC-2000's *Power/Control* cable to the miniature connector on the wall plug transformer cable
- 3 On 48-1 and 48-2 lasers, attach the BNC connector on the end of the UC-2000's *Power/Control* cable to the BNC connector labeled *CTRL* on the rear of the laser.  
  
On 48-5 lasers, attach the long "leg" of the BNC "Y" control cable to the BNC connector on the UC-2000's *Power/Control* cable. Attach the short "legs" of the "Y" cable to the laser's *CTRL1* and *CTRL2* connectors located on the rear of the laser.
- 4 If your application uses external gating signals to command On/Off switching of the laser, attach a BNC cable between your gate signal source and the UC-2000's *Gate* connector.
- 5 If your application uses external analog voltage or current signals to control the PWM duty cycle of the laser, attach a BNC cable between your analog voltage or current source and the UC-2000's *ANV/ANC* connector.

**Note:** You can control Series 48 lasers from an alternate user-supplied PWM Command signal source. See *Controlling laser power* in the Technical Reference chapter for control signal descriptions.

## DB-9 connections

48 Series lasers are equipped with a female DB-9 connector mounted to the sidewall of the laser that provides a means of monitoring fault conditions (over-temperature, control/RF circuitry failure) and adds remote interlock, remote keyswitch (relay or switch), message output, and remote LED indicator capability. For a complete description of DB-9 pin assignments and functions, see the *DB-9 connections* section in the Technical Reference chapter.

A factory-installed jumper plug is attached to the *DB-9 Connector* to enable normal laser operation (see Figure 3-6). If the jumper plug is removed, you must (1) jumper Pin 3 to Pin 4 (or Pin 2) **or** connect to external "remote interlock" circuitry **and** (2) you must jumper Pin 6 to Pin 7 **or** connect to external "remote keyswitch" circuitry as described in the *DB-9 connections* section in the Technical Reference chapter.

**Note:** On lasers manufactured as OEM (-S) version lasers, i.e. without a *Keyswitch*, the *Remote Interlock* function is bypassed internally; however, the *Remote Keyswitch* function on Pin 6 and Pin 7 provides a similar functionality.

# getting started

## Connecting

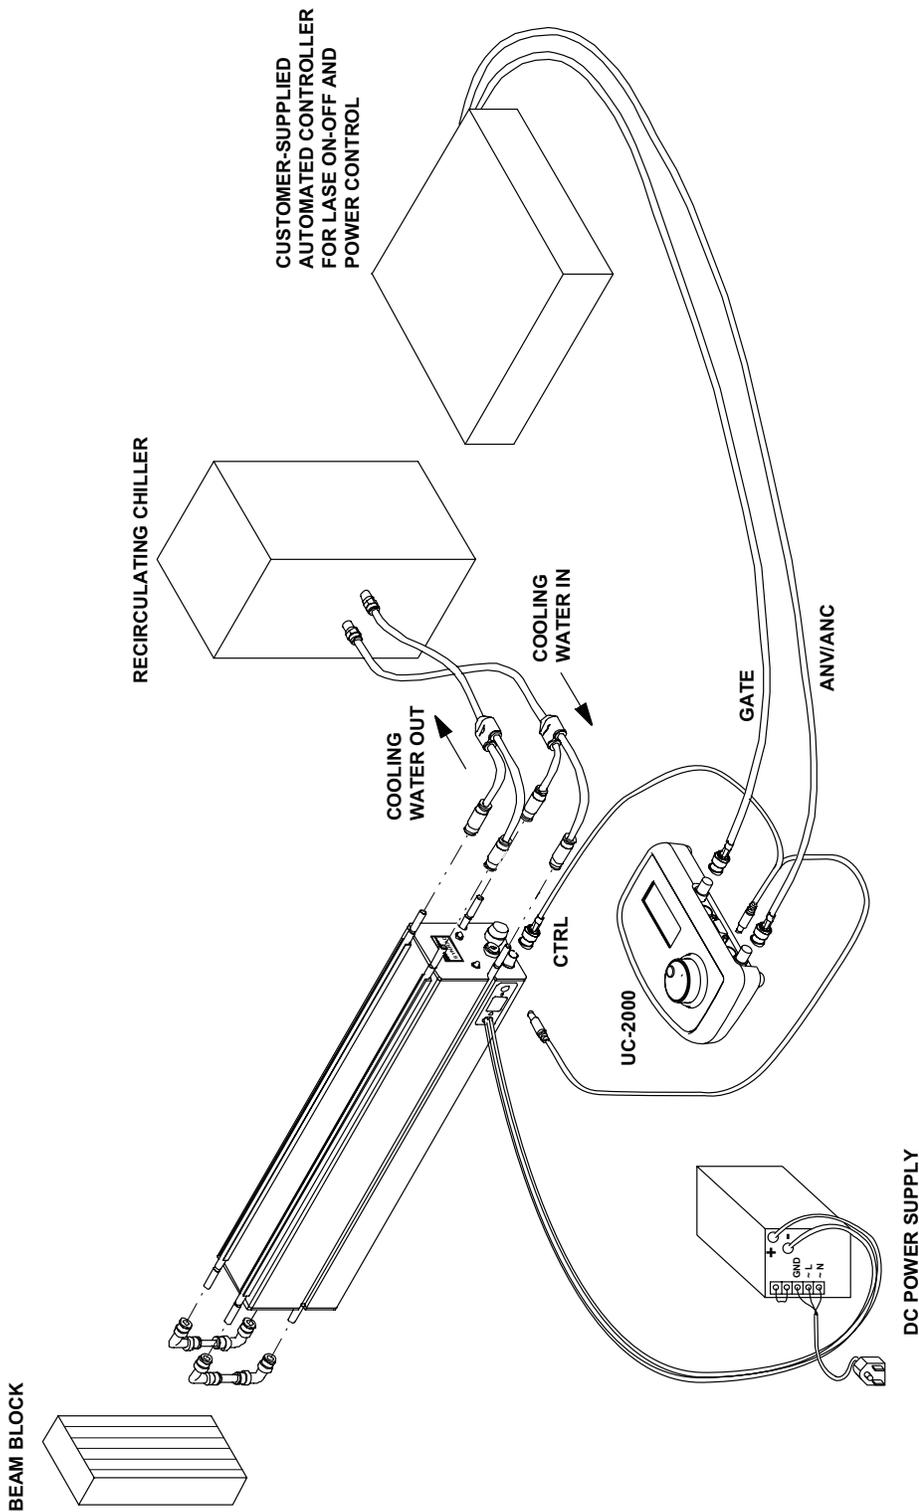


Figure 1-8 Typical Series 48 system interconnection

# operation


Use information in this chapter to familiarize yourself with Series 48 controls and indicators and to begin operating your laser.

This chapter contains the following information:

- Controls and indicators – displays and describes exterior controls and indicators on Series 48 Keyswitch and OEM lasers.
- Initial start-up – explains how to start your Series 48 laser while verifying proper operation.

# operation

## Controls and indicators

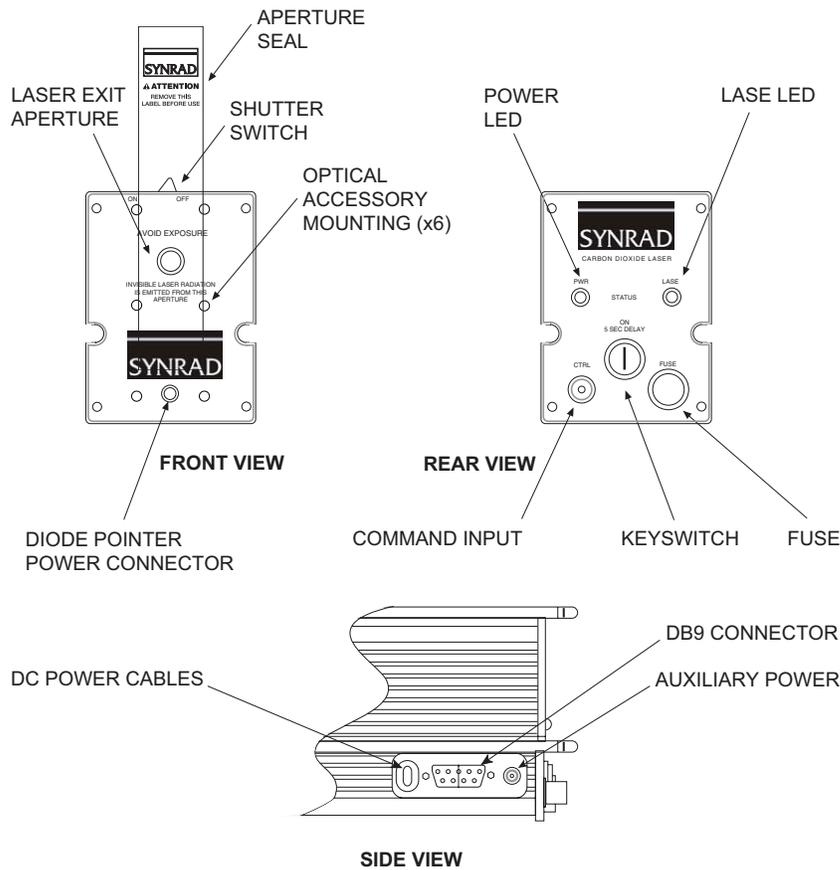

**Figure 2-1** 48-1/48-2 controls and indicators

*Aperture Seal* – prevents dust from damaging the output coupler during shipping. Remove the red self-adhesive label before applying power to the laser.

*Shutter Switch (Keyswitch models only)* – manually closes the laser aperture and interrupts power to the RF section(s). Do not use the shutter to partially block the beam or to control output power.

*Power LED* – illuminates green when the *Keyswitch* is turned to the ON position (or when an OEM laser is powered up) to indicate that power is applied to internal circuitry.

*Lase LED* – illuminates red to indicate the lase mode of operation. If a tickle signal is present, the *LASE* LED turns on after the five-second delay and becomes brighter as the PWM duty cycle is increased.


*Keyswitch (Keyswitch models only)* – used to turn the laser on, off, and to reset faults. The key cannot be removed when the *Keyswitch* is in the ON position. For OEM lasers, a plug is installed in place of the *Keyswitch* and the remote keyswitch pins of the *DB-9 Connector* then become the external power on/off/reset control means.

*Fuse* – provides overcurrent protection for the internal circuitry of the laser.

*DB-9 Connector* – provides an interconnection for message, fault shutdown, remote interlock, remote keyswitch, and interface signals. Refer to the *DB-9 connections* section in the Technical Reference chapter for information on pin assignments and function.

# operation

## Controls and indicators

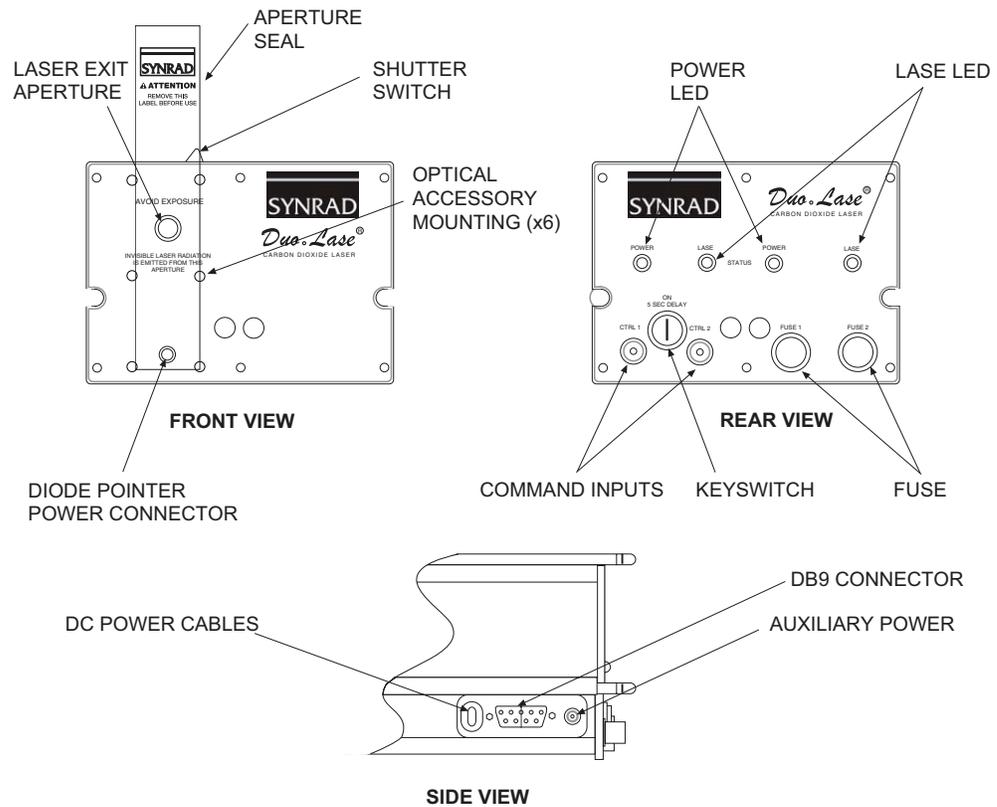

**Figure 2-2** 48-5 controls and indicators

**Command (CTRL) Input** – accepts tickle and PWM Command signal inputs. The output of the UC-2000 Controller (or FH Series marking head) is attached to this connector. For pure CW operation, a steady +5 V signal can be applied through this connector (a tickle signal must be applied during laser-off periods). This input is optically-isolated from the chassis and power supply ground circuit, but must not be subjected to common mode voltages greater than  $\pm 50$  VDC from chassis ground. The 48-5 laser has two Command inputs, CTRL1 and CTRL2, that should always be driven identically from the signal source by using a “Y” cable or “T” BNC connector.

**DC Power Cables** – red (+) and black (–) DC Power input cables are manufactured from #12 AWG (48-1/48-2) or #8 AWG (48-5) wire and measure 1.1 meters (3.5 feet) in length.

**Auxiliary Power Connector** – provides an optional 30 VDC @ 350 mA source for powering the UC-2000 Controller. An auto-resetting solid-state fuse limits line current. Connector power is active after 30 VDC is applied to the laser.

**Laser Exit Aperture** – provides an opening from which the beam is emitted when lasing.

**Diode Pointer Power Connector** (optional) – provides a regulated +5 VDC, 100 mA output and is internally protected against short circuits by an auto-resetting fuse. The Diode Pointer Power connector is not installed unless the optional Diode Pointer is ordered when the laser is manufactured.

**Optical Accessory Mounting** – provides six threaded holes for mounting standard beam delivery components. When considering other components not specifically designed as Series 48 options, please consult the factory for restrictions since excessive weight may cause damage to the laser. To prevent damage to the laser when mounting optical components, the 8–32 mounting screws must not extend further than 4.8 mm (0.1875 in) into the laser faceplate.

# operation

## Initial start-up

The *Initial start-up* section includes subsections:

- With a UC-2000 Controller
- Without a UC-2000 Controller

## With a UC-2000 Controller

Before your Series 48 laser is put into service for the first time, its functionality should be verified. Follow this procedure to verify the laser system is operating at optimum performance. For this procedure, use the UC-2000 as a stand-alone controller; do not attempt to control the laser or UC-2000 externally.

**⚠ Danger**  
serious  
personal  
injury

This Class 4 laser product emits *invisible* infrared laser radiation in the 9.3–10.6  $\mu\text{m}$   $\text{CO}_2$  wavelength band depending on model. Because direct or diffuse laser radiation can inflict severe corneal injuries, always wear eye protection when in the same area as an exposed laser beam. Do not contact the laser beam. This product emits an invisible laser beam that is capable of seriously burning human tissue.

Always be aware of the beam's path and always use a beam block while testing.

**Note:** When performing the initial start-up sequence, check that the factory-installed DB-9 jumper plug is installed. If not, you must provide the required Remote Interlock and Remote Keyswitch signals to the *DB-9 Connector*. See *DB-9 connections* in the Getting Started chapter for DB-9 pinouts and signal descriptions.

## Starting auxiliary equipment

- 1 Ensure that all personnel in the area are wearing protective eyewear.
- 2 Remove the red self-adhesive aperture seal from the laser faceplate.
- 3 Place a power meter, or appropriate beam block, 61 cm (24 in) from the laser aperture to prevent the beam from traveling beyond the work area.
- 4 On water-cooled systems, turn on the chiller (set between 18 °C and 22 °C) and verify it is delivering the specified flow rate (see page 1-12 or 1-13) at less than 414 kPa (60 PSI) of pressure. Examine all cooling connections carefully for leaks.

**Caution**  
possible  
equipment  
damage

Inlet cooling water temperature must always be maintained above the dew point to prevent condensation and water damage to your laser.

# operation

## Initial start-up

**Note:** If you have not yet operated your UC-2000 Universal Laser Controller, refer to the *UC-2000 Laser Controller Operator's Manual* for setup and operation instructions before continuing.

- 5 Set the UC-2000 to *MANUAL* mode, and then set the *PWM Adj Knob* to provide zero percent output (0.0%). The UC-2000's *Lase* indicator should be Off.
- 6 Verify that the laser's *Keyswitch* (if equipped) is in the OFF position.

## Starting your Series 48 laser

- 1 If the laser has a Diode Pointer installed, remove its aperture dust cover.
- 2 Move the *Shutter Switch* (if equipped) to the Open position.
- 3 Turn on the DC power supply.
- 4 Rotate the *Keyswitch* (if equipped) to the ON position. Verify that the green *PWR* LED illuminates. If the *Keyswitch* is already ON, turn it OFF, then back ON (or cycle the *Remote Keyswitch* input) to reset the laser.

**Note:** Each time an OEM laser is powered up or a *Keyswitch* version is cycled OFF/ON, a five-second delay occurs between the time that the *PWR* LED illuminates and the laser is permitted to lase.

- 5 Verify that the red *LASE* LED illuminates dimly after approximately five seconds. This indicates that tickle pulses are being applied to the laser and that it is safe to apply a PWM Command signal.
- 6 Press the UC-2000's *Lase On/Off* button. The *Lase* indicator on the UC-2000 should illuminate.
- 7 Use the *PWM Adj Knob* on the UC-2000 to slowly increase power. The intensity of the laser's *LASE* indicator increases in brightness as the PWM duty cycle increases. The spot where the beam hits the beam block should also increase in brightness to indicate increased power output.

## Check your laser's output power

- 1 With the UC-2000 set for maximum power output, measure laser output using a laser power meter (such as SYNRAD's PW-250 Power Wizard®) to verify that output power is consistent with the power rating for your particular model. Refer to *General specifications* in the Technical Reference chapter for output power specifications.
- 2 Reduce the PWM duty cycle to 0.0% and press the UC-2000's *Lase On/Off* button to stop lasing. The *Lase* indicator on the UC-2000 turns off and the laser's *LASE* LED turns dim.
- 3 Move the *Shutter Switch* (if equipped) to the Closed position.
- 4 Turn off the DC power supply.
- 5 On water-cooled lasers, shut off the chiller or otherwise stop coolant flow through the laser.

**Important Note:** Do not flow coolant through the laser for an extended period of time when the laser is shutdown. This causes condensation to form inside the laser that may result in catastrophic damage to internal optics and electronic circuits.

If your Series 48 laser fails to lase, refer to *Troubleshooting* in the Maintenance/Troubleshooting chapter for troubleshooting information.

# operation

## Initial start-up

### Without a UC-2000 Controller

If you have chosen not to use a UC-2000 to control the laser, follow the procedure below to verify the laser's functionality. You will need to provide a tickle signal and a pulse width modulated (PWM) Command signal to the laser's CTRL input connector. Refer to *Controlling laser power* in the Technical Reference chapter for tickle and PWM Command signal descriptions.

**⚠ Danger**  
serious  
personal  
injury

This Class 4 laser product emits *invisible* infrared laser radiation in the 9.3–10.6  $\mu\text{m}$  CO<sub>2</sub> wavelength band depending on model. Because direct or diffuse laser radiation can inflict severe corneal injuries, always wear eye protection when in the same area as an exposed laser beam. Do not contact the laser beam. This product emits an invisible laser beam that is capable of seriously burning human tissue.

Always be aware of the beam's path and always use a beam block while testing.

**Note:** When performing the initial start-up sequence, check that the factory-installed DB-9 jumper plug is installed. If not, you must provide the required Remote Interlock and Remote Keyswitch signals to the DB-9 Connector. See *DB-9 connections* in the Getting Started chapter for DB-9 pinouts and signal descriptions.

## Starting auxiliary equipment

- 1 Ensure that all personnel in the area are wearing protective eyewear.
- 2 Remove the red self-adhesive aperture seal from the laser faceplate.
- 3 Place a power meter, or appropriate beam block, 61 cm (24 in) from the laser aperture to prevent the beam from traveling beyond the work area.
- 4 On water-cooled systems, turn on the chiller (set between 18 °C and 22 °C) and verify it is delivering the specified flow rate (see page 1-12 or 1-13) at less than 414 kPa (60 PSI) of pressure. Examine all cooling connections carefully for leaks.

**Caution**  
possible  
equipment  
damage

Inlet cooling water temperature must always be maintained above the dew point to prevent condensation and water damage to your laser.

- 5 Ensure that your PWM controller is set to zero percent output (0.0%).
- 6 Verify that the laser's *Keyswitch* (if equipped) is in the OFF position.

# operation

## Initial start-up

### Starting your Series 48 laser

- 1 If the laser has a Diode Pointer installed, remove its aperture dust cover.
- 2 Move the *Shutter Switch* (if equipped) to the Open position.
- 3 Turn on the DC power supply.
- 4 Rotate the *Keyswitch* (if equipped) to the ON position; the *PWR* LED illuminates. If the *Keyswitch* is ON, turn it OFF, then back ON (or cycle the *Remote Keyswitch* input) to reset the laser.

**Note:** Each time an OEM laser is powered up or a *Keyswitch* version is cycled OFF/ON, a five-second delay occurs between the time that the *PWR* LED illuminates and the laser is permitted to lase.

- 5 Apply a tickle signal (a +5 VDC, 5 kHz square wave of 1  $\mu$ s duration) to the laser's *CTRL* connector. If operating a 48-5 laser, apply the signal in parallel to both *CTRL1* and *CTRL2* connectors.

#### Caution

possible  
equipment  
damage

Series 48 lasers MUST be provided with a pre-ionizing “tickle” signal during standby or laser “low” periods. This signal is automatically provided by SYNRAD's UC-2000 Universal Laser Controller or FH Series marking head.

A tickle signal keeps the plasma ionized during laser “low” periods and facilitates plasma breakdown and pulse-to-pulse fidelity. Damage to or malfunction of the laser may occur if this, or equivalent drive signals are not provided.

- 6 Verify that the red *LASE* LED illuminates dimly after approximately five seconds. This indicates that tickle pulses are being applied to the laser and that it is safe to apply a PWM Command signal.
- 7 Apply a PWM Command signal (a +5 VDC, 5 kHz square wave of 1  $\mu$ s to 3  $\mu$ s duration) to the laser's *CTRL* connector. If operating a 48-5 laser, apply the signal in parallel to both *CTRL1* and *CTRL2* connectors simultaneously.
- 8 Slowly increase the duty cycle of the signal. The intensity of the laser's *LASE* indicator increases in brightness as the PWM duty cycle increases. The spot where the beam hits the beam block should also increase in brightness to indicate an increasing power output.

### Check your laser's output power

- 1 With your PWM signal source set for maximum power output, measure laser output using a laser power meter (such as SYNRAD's PW-250 Power Wizard®) to verify that output power is consistent with the power rating for your particular model. Refer to *General specifications* in the Technical Reference chapter for output power specifications..
- 2 Reduce the PWM duty cycle to 0.0%. The *LASE* indicator on the laser dims (tickle signal only).
- 3 Move the *Shutter Switch* (if equipped) to the Closed position.
- 4 Turn off the DC power supply.

# operation

## Initial start-up

5 On water-cooled lasers, shut off the chiller or otherwise stop coolant flow through the laser.

**Important Note:** Do not flow coolant through the laser for an extended period of time when the laser is shutdown. This causes condensation to form inside the laser that may result in catastrophic damage to internal optics and electronic circuits.

If your Series 48 laser fails to lase, refer to *Troubleshooting* in the Maintenance/Troubleshooting chapter for troubleshooting information.

# technical reference

Use information in this chapter as a technical reference for your Series 48 laser.

This chapter contains the following information:

- Technical overview – briefly describes Series 48 technology and basic optical setup.
- Controlling laser power – explains various aspects of Series 48 control signals.
- DB-9 connections – describes signals and specifications for the side-mounted DB-9 connector.
- Integrating Series 48 safety features – describes how to integrate Series 48 safety features into your automated control system.
- Series 48 general specifications – provides specifications for Series 48 lasers.
- Model 48-1 package outline drawing – illustrates laser package and mounting dimensions for Keyswitch and OEM 48-1 10 watt lasers.
- Model 48-2 package outline drawing – illustrates laser package and mounting dimensions for Keyswitch and OEM 48-2 25 watt lasers.
- Model 48-5 package outline drawing – illustrates laser package and mounting dimensions for Keyswitch and OEM 48-5 50 watt lasers.
- Series 48 packaging instructions – describes how to package Series 48 lasers for shipment.

# technical reference

## Technical overview

The *Technical overview* section includes subsections:

- Introduction
- Plasma section
- Optical resonator
- Control circuitry
- Optical setup

## Introduction

Series 48 lasers incorporate the latest technology in sealed carbon dioxide devices, combining the best features of both waveguide and free space CO<sub>2</sub> laser technology. The all-metal laser tube construction features the ruggedness, stable optical support, and small size of waveguide lasers. Its larger bore (4.8 mm) eliminates the high optical power density of waveguide lasers with their predisposition to optical degradation and incorporates the mode purity and easy optical alignment of free space TEM<sub>00</sub> lasers. Low cost is achieved by using simple extruded and welded aluminum structures packaged together with compact, state-of-the-art RF power supplies.

48 Series lasers emit a laser beam with a wavelength of 9.3 or 10.6 microns (μm) depending on model. The beam shape is square at the laser output aperture, changing to circular at distances of approximately one meter or more from the laser. The laser beam diverges due to diffraction at a full angle of 4 mrad (milliradians), with the beam waist at the output aperture of the laser.

Power control of the laser beam is achieved by pulse width modulation (PWM) of the RF drive circuit. Modulation control can be used to gate the laser on and off at time intervals synchronized with automated processing equipment. It can also be used to control instantaneous power by adjusting the pulse width (PWM duty cycle) at a fixed modulation frequency. Both methods can be used simultaneously.

## Plasma section

The laser consists of an RF-excited plasma tube with an adjustable mirror on each end, mounted together with the RF drive assembly in a single aluminum chassis. The plasma tube is made of two-inch square cross-section extruded aluminum tubing with pre-machined ends welded on. RF drive power is applied between the lower electrode and the plasma tube. The internal resonant circuit induces RF drive on the upper electrode that is 180 degrees out of phase with that of the lower electrode. Thus the voltage between the two RF electrodes is roughly twice that on either electrode, causing the plasma to form only in the 4.8 mm square bore region. The two sidewalls confine the plasma but carry negligible current. Waste heat is conducted away by all four metal sides of the bore to the outer walls of the plasma tube, where it is transferred to the chassis.


## Optical resonator

The optical resonator consists of a curved total reflector and a flat Zinc Selenide (ZnSe) output coupler. The mirrors are held on with Viton (fluorocarbon) elastomeric o-rings for factory adjustment by means of three screws that are secured by adhesive after alignment. The 4.8 mm bore, in conjunction with the mirror curvature selected, limits the output beam to TEM<sub>00</sub> modes when the mirrors are properly aligned.

# technical reference

## Technical overview

On 10.6  $\mu\text{m}$  models, the output wavelength remains at or near 10.6  $\mu\text{m}$  (typically 10.57  $\mu\text{m}$  to 10.63  $\mu\text{m}$ ). At the 9.3  $\mu\text{m}$  wavelength, laser output is in the range of 9.229–9.317  $\mu\text{m}$ . Beam shape is square at the laser output aperture, changing to circular at distances of approximately one meter or more from the laser with a near gaussian profile in the far field (0.6 m or more). The internal structure and optics of the resonator combine to produce a mode quality ( $M^2$  factor) of less than 1.2. As shown in Figure 3-1, beam waist diameter is 3.5 mm at the output aperture and full angle divergence due to diffraction is 4 mrad (a 4 mrad full angle divergence means that beam diameter increases 4 mm over every one meter distance traveled in the far field).

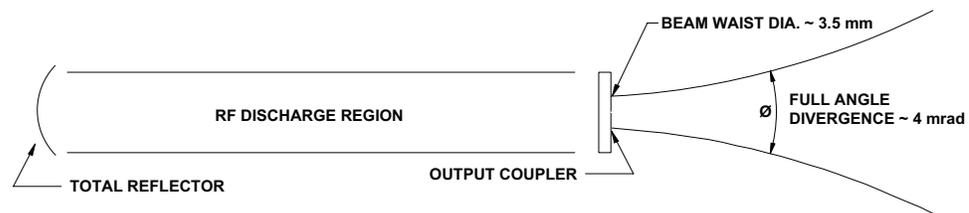

**Figure 3-1** Beam characteristics

## Control circuitry

### Electrical description

Control of laser operation and power output levels is essentially performed using a single PCB. The Control PCB connects the modulated signal to the RF amplifier. It also provides electronics to monitor performance of RF control, output circuitry, input power, temperature, PWM accuracy, provides outputs to an externally accessible connector, and incorporates reverse polarity protection.

Functional differences between model types generally relate to the number of RF channels. Model 48-1 lasers use a single RF electrode requiring a single modulated RF drive input from the Control PCB. The 48-2 uses 2 RF electrodes and requires 2 RF channels, while the 48-5 uses 4 electrodes and 4 RF channels (2 Control PCB's). For the purpose of this description, a single channel will be described. Model specific details relating to differences in electrical characteristics are individually discussed.

The modulated input Command signal is generated externally to the laser and connected to the panel-mounted BNC connector labeled *CTRL*. This signal is connected to an optoisolator, the output of which is applied to the PWM switch control circuit. The PWM switch control circuit gates the PWM switch off and on at the frequency and duty cycle controlled by the modulation source. When the PWM switch closes, a potential of +30 VDC is applied to the RF Driver. The PWM control circuit provides on/off gating of the PWM switch unless disabled by the five-second delay, *Shutter Switch*, or the fault shutdown circuits.

The five-second delay disables PWM output to the RF amplifier for a period of approximately five seconds after the panel-mounted *Keyswitch* and *Remote Keyswitch* link are closed (power ON). On OEM models, the five-second delay period begins on DC power up of the laser.

The *Shutter Switch* allows the operator to temporarily interrupt laser output during active lase modes. A mechanical lever physically blocks the exit aperture and at the same time actuates independent micro-switches that electrically interrupt power to the RF module by disabling the PWM input optoisolator, forcing an “off” state.

# technical reference

## Technical overview

### Fault shutdown conditions

The output of the *Keyswitch* is connected to the control board through the *DB-9 Connector* user port. Note that the supplied DB-9 jumper plug can be removed to allow the user to insert a remotely located relay or switch in series with the *Keyswitch*. If the *Keyswitch* is left on or is electrically bypassed, the user can turn the laser on and off, and reset fault shutdowns from a remote location.

The temperature warning message output (Pin 5 of the DB-9 connector) goes low when the laser tube temperature reaches  $54\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}$  and remains low until tube temperature falls  $2\text{ }^{\circ}\text{C}$  below the trigger temperature. The warning message output does not shut down the laser. Over temperature fault shutdown occurs when laser tube temperature reaches  $60\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}$ .

Control board operation begins when the supply voltage rises above +18 VDC and remains below +36 VDC. After start-up, the control board will shut the laser down if supply voltage falls below +15 VDC or rises above +36 VDC.

If an electronics failure causes the control board to output PWM power to the RF Drivers in excess of 20% of the commanded PWM input, a fault shutdown will occur.

To reset after any fault shutdown, correct the problem(s) then cycle the *Keyswitch* (or *Remote Keyswitch* if one is present) or remove power to the laser for 30 seconds. During any fault shutdown, the fault shutdown output (Pin 1 of the DB-9 connector) will latch to low state until a keyswitched reset occurs.

The Power-On Reset feature will not allow lasing to restart after a power failure or shutdown has occurred until the *Keyswitch* or *Remote Keyswitch* is first cycled off (open circuit condition) and then back on (closed circuit). Power-On Reset is defeated on all OEM versions. OEM customers must provide this required safety feature elsewhere as part of their equipment integration.

### Cooling requirements

Series 48 electronics are mounted opposite the laser tube in the smaller section of the “H” bay and share the same cooling removal as the plasma tube. Typical efficiency of  $\text{CO}_2$  laser plasma tubes operating in a  $\text{TEM}_{00}$  mode is 10% to 12% (radiation out to RF power in). Factor in the conversion efficiency of AC input to RF output and the overall “wall plug” efficiency of these lasers drops to about 6% to 8%, resulting in a considerable amount of heat removal, even at 10 W and 25 W output power levels; therefore, external cooling in the form of forced air- or water-cooling is required.

### Duo-Lase® operation (48-5)

The 48-5 laser combines two laser tubes for twice the output of a standard laser. The outputs from two 25 W sealed  $\text{CO}_2$  tubes are combined optically to provide a single diffraction-limited beam at 50 W. This optical combining technique is based on the fact that each laser is linearly polarized, allowing the use of a polarization sensitive beam combiner to achieve 98% efficiency in combining the two beams. The two components of the resulting beam are spatially parallel and collinear, reducing the normal temporal and spatial variations of a single laser. Output polarization is random and therefore superior for many cutting applications.

The 48-5 laser uses two control boards and four RF drivers. The control boards are tied together electronically so that if a failure mode shuts down either board, both laser tubes are turned off. The control boards are equipped with individual fuses for each RF driver PWM output. In the event of an RF driver failure, only that fuse will open, allowing other RF drivers in the system to continue operating. Unless both fuses are open on a given control board, no shutdown will occur, nor is there a fault output signal.

# technical reference

## Technical overview

In general, the two Command inputs (*CTRL1* and *CTRL2*) should always be driven identically with a “Y” or “T” connector. For special applications in redundant or ultra-wide dynamic range systems, it is permissible to drive only one Command input; however, the beam’s random polarization is compromised.


## Optical setup

After selecting a CO<sub>2</sub> laser for your processing system, the two most important elements to consider are: (1) delivery optics to transmit the beam to the work area; and (2) focusing optics to focus the beam onto the part or material to be processed. Each element is crucial in the development of a reliable laser-based material processing system and each element should be approached with same careful attention to detail.

### Delivery optics

Divergence, or expansion, of the laser beam is important for materials processing since a larger beam entering the focusing optic produces a smaller focused spot. Because the laser beam diverges slowly, increasing 4 mm in diameter over every meter, Series 48 lasers should be mounted a distance of 1.0–1.5 m (40–60 in) away from the work area. Right angle turning mirrors are often used in conjunction with the laser mounting position to obtain this distance. Figure 3-2 shows how right angle turning mirrors in a “flying optics” setup create this longer beam path.

Expander/collimators are optical devices that reduce beam divergence while at the same time increasing beam diameter by a selectable magnification factor. Adding an expander/collimator to the “flying optics” setup shown above would substantially reduce beam divergence and any variance in beam diameter caused by the changing optical path length. In fixed-length delivery systems where the laser is positioned only one meter away from the focusing optic and a small spot size is required, an expander/collimator is again the best solution to provide the required beam expansion before reaching the focusing optic.

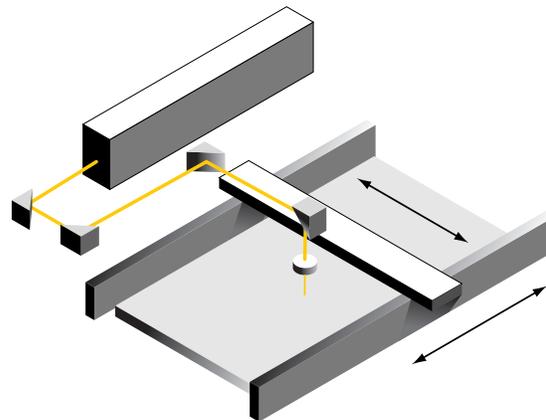

**Figure 3-2** “Flying optics” beam path

# technical reference

## Technical overview

### Focusing optics

When selecting a focusing optic, the primary consideration should be material thickness and any vertical tolerances that occur during final part positioning rather than making a selection based only on minimum spot size. The chosen focal length should create the smallest possible focused spot while providing the depth of field required for the material to be processed.

#### Caution

possible  
equipment  
damage

Small amounts of contaminants on the laser's output window (or on any optic in the beam path) can absorb enough energy to damage the optic. Inspect all beam delivery optics periodically for signs of contaminants and carefully clean as required. In dirty environments, purge laser optics using filtered air or nitrogen to prevent vapor and debris from accumulating on optical surfaces.

Optics are fragile and must be handled carefully, preferably by the mounting ring only. Be careful to select optics that are thick enough to withstand the maximum assist gas pressure available for the process. This is especially important in metal cutting applications using high-pressure assist gases.

Cleanliness is another important issue affecting performance and becomes increasingly important as laser power increases. Dirty or scratched lenses will under perform, exhibit a vastly shortened lifetime, and may fail catastrophically.

When the application requires air (instead of nitrogen) as an assist gas, use only breathing quality air available in cylinders from a welding supply company. Compressed shop air contains minute particles of oil and other contaminants that will damage optical surfaces. If compressed shop air is the only choice available, it must be filtered and dried to ISO 8573-1:2010 Class 1, 2, 1 specifications shown in Table 3-1.

**Table 3-1** Assist gas purity specifications

Assist Gas	Typical Purpose	Specification	
Air	Cutting/Drilling	Breathing Grade	$\geq 99.9996\%$ purity; filtered to ISO Class 1 particulate level
Air	Cutting/Drilling	Compressed	Instrument-grade air filtered and dried to ISO 8573-1:2010 Class 1, 2, 1 ( $\leq 10$ 1.0–5.0 $\mu\text{m}$ particles/ $\text{m}^3$ ; $\leq -40$ °F dew point; $\leq 0.01$ mg/ $\text{m}^3$ oil vapor)
Argon	Welding	High Purity Grade	$\geq 99.998\%$ purity; filtered to ISO Class 1 particulate level
Helium	Welding	High Purity Grade	$\geq 99.997\%$ purity; filtered to ISO Class 1 particulate level
Nitrogen	Cutting/Drilling	High Purity Grade	$\geq 99.9500\%$ purity; filtered to ISO Class 1 particulate level
Oxygen	Cutting/Drilling	Ultra Pure Grade	$\geq 99.9998\%$ purity; filtered to ISO Class 1 particulate level

# technical reference

## Controlling laser power

The *Controlling laser power* section includes subsections:

- Control signals
- Operating modes

### Control signals

Much of the information provided in this section describes the use of a SYNRAD UC-2000 Universal Laser Controller to provide tickle and PWM Command signals to the laser. If you are using an alternate method of laser control, thoroughly review this section for an understanding of the signal requirements necessary to control SYNRAD Series 48 lasers. Table 3-2 lists input voltage and current specifications for 48 Series control (*CTRL*) inputs. Table 3-3 and Table 3-4 provide specific tickle pulse and PWM Command signal parameters.

**Table 3-2** Input signal specifications

Parameter	Specification
Logic Low (Off State)	0.0 V to +0.5 VDC; 0.0 VDC nominal
Logic High (On State)	+3.5 V to +10.0 VDC; +5.0 VDC nominal
Maximum Current Load	6 mA (48-1 / 48-2); 12 mA (48-5)

### Tickle pulse

Series 48 lasers require a 1  $\mu$ s tickle pulse delivered at a nominal 5 kHz clock frequency from the Controller. Tickle pulses pre-ionize the laser gas to just below the lasing threshold so that any further increase in pulse width adds enough energy to the plasma to cause laser emission. This tickle signal causes the laser to respond predictably and almost instantaneously to PWM Command signals, even when there is considerable delay (laser off time) between applied Command signals. The lase threshold is preset for 3  $\mu$ s  $\pm$  0.5  $\mu$ s based on a PWM and tickle frequency input of 5 kHz. See Table 3-3 for tickle specifications.

#### Caution

possible  
equipment  
damage

Applying PWM Command pulses directly to the laser without first sending tickle pulses will cause unpredictable laser emission, degrade optical rise time, and may lead to RF Driver failure.


**Table 3-3** Tickle pulse specifications

Parameter	Specification
Tickle Frequency	5 kHz
Pulse Length	1.0 $\mu$ s $\pm$ 0.2 $\mu$ s
Pulse Rise/Fall Time	$\leq$ 100 ns between +0.5 V to +3.5 VDC

# technical reference

## Controlling laser power

The UC-2000 (or FH Series marking head) does not produce tickle pulses continuously, but generates them only when the PWM Command signal is low. Tickle pulses are sent one tickle period, 200  $\mu\text{s}$ , after the falling edge of a PWM Command signal pulse. Figure 3-3 illustrates tickle pulse parameters.

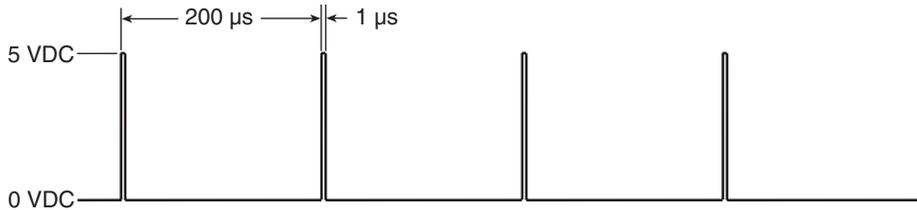


**Figure 3-3** Tickle pulse waveform

Series 48 lasers are designed to operate at a tickle frequency of 5 kHz, which allows the laser to meet published specifications. Tickle frequencies lower than 4.5 kHz may compromise laser performance, particularly optical rise times, and stress the RF electronics thereby reducing long term reliability while tickle frequencies greater than 5 kHz may cause unintended lasing. Special care must be taken to maintain plasma ionization without lasing at tickle frequencies greater than 5 kHz. When sending 1  $\mu\text{s}$  tickle pulses at 5 kHz, PWM signals can be sent at an independent, higher frequency but must go to near zero (< 1%) duty cycle to ensure laser turn-off.

## Pulse width modulation (PWM)

Pulse Width Modulation, or PWM, controls laser power by varying the duty cycle of the laser's RF amplifiers, which in turn control the time-averaged RF power applied to the laser. Because laser output follows PWM input with a rise and fall time constant of  $\sim 100 \mu\text{s}$ , the laser cannot precisely follow Command signal frequencies over 5 kHz with duty cycles greater than 50%. Typically, the depth of modulation for a 50% duty cycle is 90 to 100% at 2 kHz and 60 to 80% at 5 kHz. Figure 3-4 shows Series 48 optical waveforms at two different modulation frequencies.

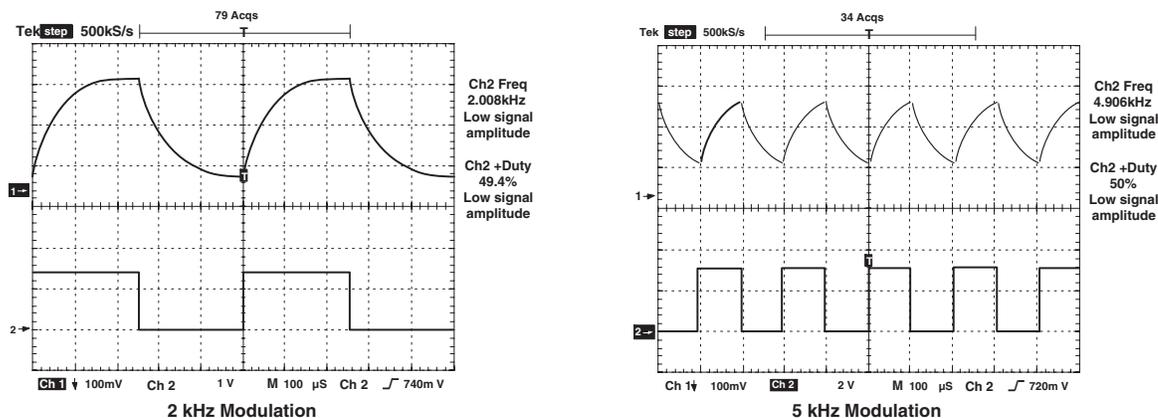

**Figure 3-4** Series 48 waveforms

# technical reference

## Controlling laser power

Series 48 lasers are designed to operate at Command signal base frequencies up to 20 kHz; however, the choice of PWM frequency depends on the user's specific application. In the majority of laser applications, the UC-2000's default Command signal frequency of 5 kHz has proven to work well. When considering Command frequencies at 5 kHz or below, please review *Marking/engraving operation* later in this chapter.

For high-speed motion applications that cannot tolerate any ripple in the optical beam response but still need adjustable power levels, we recommend the use of higher PWM frequencies, up to 20 kHz maximum. At 20 kHz, the laser's optical beam response no longer follows the Command input and is very nearly a DC value with just a small amount of ripple present.

### Command signal

**Warning**  
serious  
personal  
injury


Always use shielded cable when connecting your PWM Command signal source to the laser's CTRL connections. In electrically-noisy environments, long lengths of unshielded wire act like an antenna and may generate enough voltage to trigger uncommanded lasing.

The modulated Command signal applied to Series 48 lasers has three parameters: signal amplitude, base frequency, and PWM duty cycle. By changing these parameters, you can command the beam to perform a variety of marking, cutting, welding, or drilling operations.

The first Command signal parameter, signal amplitude, is either logic low—corresponding to laser beam off, or logic high—corresponding to beam on. The laser off voltage, typically 0 V, can range from 0.0 V to +0.5 VDC while the laser on voltage, typically 5 V, can range from +3.5 V to 10.0 VDC.

Base frequency, the second parameter, is the rate at which the amplitude is switched between its low and high logic states. The standard base frequency is 5 kHz, which has a period of 200  $\mu$ s. Maximum PWM frequency is 20 kHz.

The third Command signal parameter, PWM duty cycle, is the percentage of the period that the Command signal is high. If the Command signal's amplitude (at 5 kHz) is high for 100  $\mu$ s and low for 100  $\mu$ s, it has a 50% duty cycle; if the amplitude is high for 190  $\mu$ s and low for 10  $\mu$ s, it has a 95% duty cycle. Figure 3-5 illustrates Command signal parameters while Table 3-4 lists PWM Command signal specifications.

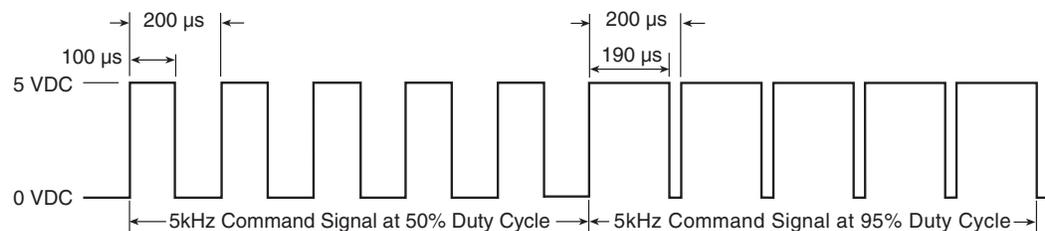

**Figure 3-5** PWM Command signal waveform

# technical reference

## Controlling laser power

**Table 3-4** PWM Command signal specifications

Laser State	Minimum	Nominal	Maximum
Laser Off Voltage	0.0 VDC	0.0 VDC	+0.5 VDC
Laser On Voltage	+3.5 V	+5.0 VDC	+10.0 VDC
Current (@ 5 VDC)	— —	— —	6 mA (48-1/48-2) 12 mA (48-5)
Frequency Range	0 Hz (DC)	5 kHz	20 kHz
Duty Cycle	0%	— —	100%

### Caution

possible  
equipment  
damage

Applying PWM Command pulses directly to the laser without first sending tickle pulses will cause unpredictable laser emission, degrade optical rise time, and may lead to RF Driver failure.

## Operating modes

### External control

In addition to controlling your Series 48 laser using a UC-2000 Controller, controlling the laser externally, without a UC-2000, is also possible. The two primary elements of laser control are gating, the ability to turn the laser on and off at the appropriate times, and power, the ability to control the laser's output energy. Both gating and power can be handled by a device such as a personal computer, Programmable Logic Controller (PLC), or a function generator capable of sending PWM pulses at the proper time (gating) and with the proper duty cycle (power).

### Analog voltage or analog current control

Although Series 48 lasers cannot be controlled directly by analog voltage or current signals, this type of control is possible when using the UC-2000 Controller. The Controller is connected normally to the laser and analog voltage or current signals sent to the UC-2000's ANV/C connector then control both gating and power.

To generate the correct analog voltage from a computer or PLC, a Digital-to-Analog (D/A or DAC) card capable of generating 0 V (laser off) to 10 V (maximum laser power) must be installed. To generate the proper analog current, install a D/A card that can generate 4 mA (laser off) to 20 mA (maximum power). Software able to control your analog output card is required for both configurations.

### Continuous wave (CW) operation

In some applications, such as high speed marking or cutting, the time constant of the laser and the PWM modulation causes a series of dots that may be visible on the marking surface instead of a "clean" line. Operating the laser in CW mode will prevent this behavior from occurring.

# technical reference

## Controlling laser power

To operate the laser in CW mode, a constant +5 VDC signal is applied to the CTRL input(s) of the laser. This constant voltage source forces the internal switching electronics to remain on, providing continuous and uninterrupted laser output power.

**Note:** When operating in CW mode, laser power output cannot be adjusted. If you require an adjustable output power level, refer to the *Pulse width modulation (PWM)* section for information regarding high frequency operation.

## Gated operation

In many marking and cutting applications, the laser is required to pulse, or gate, on and off in synchronization with an external control signal (typically from a computer or function generator operating in the range from DC to 1 kHz). To pulse or gate the laser, connect a signal providing +5.0 VDC pulses to the Gate connector on the rear panel of the UC-2000.

Users who intend to use a gating signal should set the UC-2000's gate input logic to internal Pull-Down (normally off) mode. This prevents the beam from being enabled unless a high level (+3.5 V to +5.0 VDC) signal is applied to the Gate input connector. In the pull-down (normally off) mode an asserted logic low state, short circuit to ground, or an open or disconnected Gate input locks the beam off.

 **Warning**  
serious  
personal  
injury

The UC-2000's default gate logic is factory set to internal Pull-Up (normally on) mode so that an open (disconnected) Gate input causes the laser to turn on. This functionality allows the user to easily test and verify laser operation prior to integration.

In an integrated system, you should configure the UC-2000's gate input logic to internal Pull-Down (normally off) mode. This prevents the beam from being enabled unless a high level (+3.5 V to +5.0 VDC) signal is applied to the Gate input connector. In the Pull-Down (normally off) mode, an asserted logic low signal, short circuit to ground, or an open or disconnected Gate input locks the beam off.

Many CO<sub>2</sub> lasers operating in applications requiring short gating pulses at repetition rates below 500 Hz will exhibit some leading edge overshoot regardless of the PWM frequency. This occurs because a cooler lasing medium (the CO<sub>2</sub> gas) is more efficient than a hotter one. This overshoot is more pronounced at lower gating frequencies since the gas has a longer time to cool down between Command signal pulses.


# technical reference

## DB-9 connections

Series 48 lasers are equipped with a female DB-9 connector mounted to the sidewall of the laser. The *DB-9 Connector* provides the user with a convenient method for monitoring fault conditions (over temperature, control/RF circuitry failure, etc.) and adds remote interlock, remote keyswitch (relay or switch), message output, and remote LED indicator capability. These signals allow you to connect remote keyswitch, *LASE*, and ready (*PWR*) indicators to a remote operator's station or connect a remote interlock safety switch to interlock equipment doors or panels.

A factory-installed jumper plug is attached to the *DB-9 Connector* on each laser to enable normal operation on initial start-up. Two jumpers are wired into the plug as shown in Figure 3-6. The jumper between Pin 6 and Pin 7 closes the Remote Keyswitch Input and the jumper between Pin 3 and Pin 4 closes the Remote Interlock Input. If the jumper plug is removed, then you must connect the appropriate external remote interlock or remote keyswitch circuitry in order to enable lasing. To take advantage of the DB-9 functions described in Table 3-5, you must manufacture a connecting cable that properly integrates the DB-9 signals into your automated system. A spare DB-9 male connector and cover is included with each laser (*Keyswitch only*) to facilitate cable manufacture.

**Note:** On lasers manufactured as OEM (-S) version lasers, i.e. without a *Keyswitch*, the *Remote Interlock* function is bypassed internally; however, the *Remote Keyswitch* function on Pin 6 and Pin 7 provides a similar functionality.

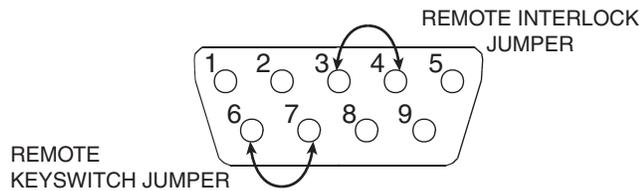

**Figure 3-6** Factory-installed DB-9 jumper plug wiring

### Caution

possible  
equipment  
damage

Do not ground Remote Keyswitch or Remote Interlock inputs to an external circuit—this will damage laser circuitry. Any external circuit(s) connected to these terminals must be floating with respect to ground. We recommend using “dry circuit” (zero voltage) switches or relay circuitry.

### Caution

possible  
equipment  
damage

Do not apply a voltage to the Remote Interlock Input on *DB-9 Connector* Pin 3 as this will damage internal laser circuitry. The Remote Interlock Input on Pin 3 is a “dry-circuit” (zero voltage) input and must connect only to Pin 2 or Pin 4 to complete the interlock circuit.

# technical reference

## DB-9 connections

**Table 3-5** DB-9 pin assignments

Pin #	Function	Description
1	Fault Shutdown Output	Indicates failure of internal circuitry or existence of over temperature ( $> 60\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}$ ), over voltage, or under voltage fault. This active low signal (referenced to Pin 2 or Pin 4) transitions from +15 V (normal operation) to 0 VDC when a fault occurs. Use this output signal to disable external processes during a fault. See <b>Note 1</b> and Table 3-7 for output signal specifications.
2	Signal Ground	Signal ground/chassis ground for Pins 1, 3, 5, 8, and 9.
3	Remote Interlock Input	Disables the laser when an interlock switch wired to this input from an equipment door or panel is opened. Ground this input to Pin 2 or Pin 4 only. Do <b>not</b> apply a voltage to this pin—see <b>Note 2</b> and Table 3-6 for input signal specifications. As shipped, Pins 3 and 4 are connected by the factory-installed jumper plug to enable the <i>Remote Interlock</i> function.
4	Signal Ground	Signal ground/chassis ground for Pins 1, 3, 5, 8, and 9.
5	Message Output	This active low signal (referenced to Pin 2 or Pin 4) transitions from +15 V (normal operation) to 0 VDC when a pre-shutdown temperature warning occurs (when laser temperature reaches $54\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}$ ) and remains low until temperature falls $2\text{ }^{\circ}\text{C}$ . Use this output to notify user of need to increase laser cooling or risk shutdown. See <b>Note 1</b> and Table 3-7 for output signal specifications.
6	Remote Keyswitch Input	Connect a remote relay or switch in series with the laser <i>Keyswitch</i> to control laser On / Off / Reset functions. Connect Pin 6 to Pin 7 to run; open this connection to halt lasing or reset faults. As shipped, Pins 6 and 7 are connected by the factory-installed jumper plug to enable the <i>Remote Keyswitch</i> function. See <b>Note 2</b> , <b>Note 3</b> , and Table 3-6 for input signal specifications.
7	Remote Keyswitch Output	Connect Pin 7 to Pin 6 to enable the <i>Remote Keyswitch</i> function (see Pin 6 description above). Pin 7 is at DC line potential (+30 VDC) only when the <i>Keyswitch</i> is set to ON. As shipped, Pins 6 and 7 are connected by the factory-installed jumper plug. See <b>Note 3</b> , <b>Note 4</b> , and Table 3-7 for output signal specifications.
8	Remote Lase LED Output	Connect an LED or LED-optoisolator between Pin 8 and Signal Ground for a remote <i>LASE</i> indication. See <b>Note 5</b> , <b>Note 6</b> , and Table 3-7 for output signal specifications.
9	Remote Ready LED Output	Connect an LED or LED-optoisolator between Pin 9 and Signal Ground for a remote <i>Ready</i> ( <i>PWR</i> ) indication. See <b>Note 5</b> and Table 3-7 for output signal specifications.

**1** Pin 1 and Pin 5 are active low outputs. Specifications: OFF: +15 VDC, 5 mA into 3 kOhm. ON: < 1 VDC, sinking 100 mA.

**2** “Dry-circuit” (zero voltage) external switches are required since current into remote interlock and debounced remote keyswitch pins is negligible.

**3** Connecting an LED to Pins 6 or 7 to indicate keyswitch status requires an external current-limiting resistor.

**4** The remote keyswitch output pin is not current-limited or fused.


**5** Pins 8 and 9 can be directly connected to the anodes of LEDs or LED-input optoisolators without external current limiting devices. Connect LED cathodes to Pin 2 or 4. Current is limited internally to 20 mA at 3.3 V maximum.

**6** The output of Pin 8, the Remote Lase LED Output, is a Pulse Width Modulated (PWM) signal based on the PWM Command input signal. It is not a steady state (on/off) output.

# technical reference

## DB-9 connections

Figure 3-7 shows the physical layout and pin identification of the Series 48 DB-9 Connector. Table 3-6 describes input signal specifications while Table 3-7 lists output signal specifications.

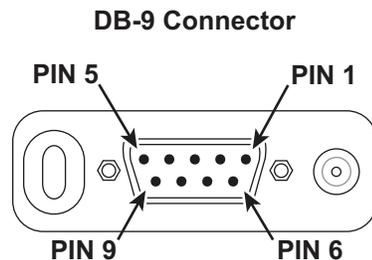

**Figure 3-7** Physical layout of Series 48 DB-9 Connector

**Table 3-6** DB-9 Connector input signal specifications

Pin #	Input Signal Name	Input Specifications
3	Remote Interlock Input	50 mA maximum @ 30 VDC. <b>Important Note:</b> Use “dry
6	Remote Keyswitch Input	circuit” (zero-voltage) external switches to prevent internal circuit damage.

**Table 3-7** DB-9 Connector output signal specifications

Pin #	Output Signal Name	Output Specifications
1	Fault Shutdown Output	Active Low output signal: Off: + 15 VDC, 5 mA into 3 kOhm;
5	Message Output	On: < 1 VDC, sinking 100 mA.
7	Remote Keyswitch Output	50 mA maximum @ 30 VDC. Output active (+30 VDC) when Keyswitch ON or bypassed (OEM models).
8	Remote Lase LED Output	Current-limited to 11 mA @ 2.4 VDC maximum. Voltage output is pulse width modulated at input PWM Command signal frequency, <u>not</u> a steady state on/off signal.
9	Remote Ready LED Output	Current-limited to 11 mA @ 2.4 VDC maximum.


# technical reference

## DB-9 connections

### Sample DB-9 Connector I/O circuits


#### Sample input circuits

Figure 3-8 illustrates a method of connecting a relay contact or limit switch to act as a remote keyswitch. Remember that Remote Keyswitch and Remote Interlock inputs are “dry circuit” or zero-voltage inputs.

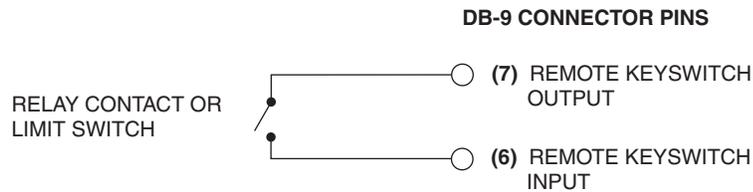

**Figure 3-8** Remote Keyswitch circuit

Figure 3-9 shows how to connect the laser’s Remote Interlock input in series with one or more door safety switches or relay contacts.

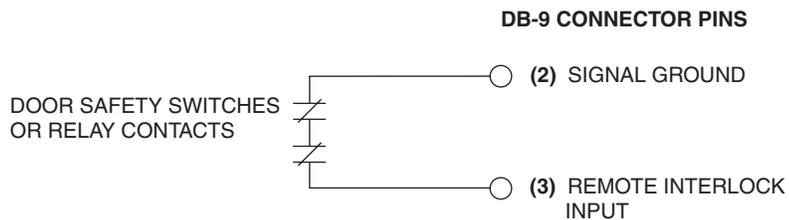


**Figure 3-9** Remote Interlock circuit

#### Sample output circuits

Figures 3-10 through 3-12 illustrate how to connect the laser’s Remote Ready LED Output to a Programmable Logic Controller (PLC) DC input module using current sourcing, current sinking, and resistive pull-up methods.


**Note:** You can use these same circuits to monitor the laser’s Remote Lase LED Output (DB-9, Pin 8); however, the Remote Lase LED Output is **not** a steady state (on/off) output. It is a Pulse Width Modulated (PWM) signal based on the PWM Command input signal to the laser.

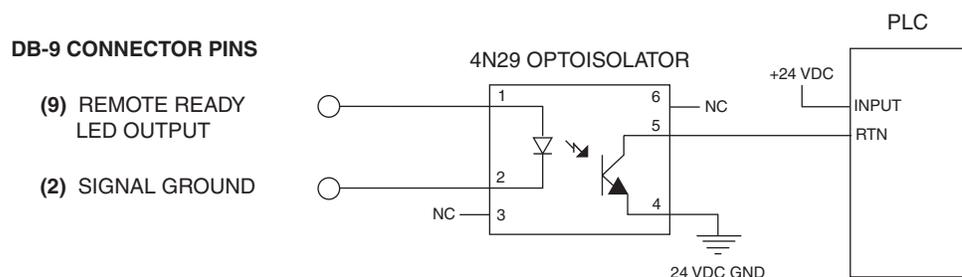


**Figure 3-10** Remote Ready output to PLC input (PLC sourcing)

# technical reference

## DB-9 connections

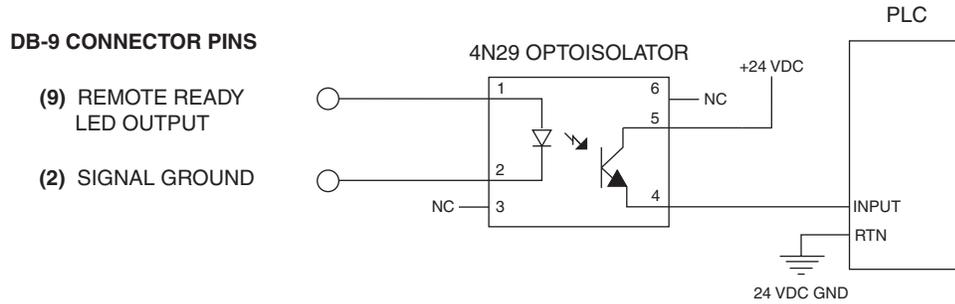


**Figure 3-11** Remote Ready output to PLC input (PLC sinking)

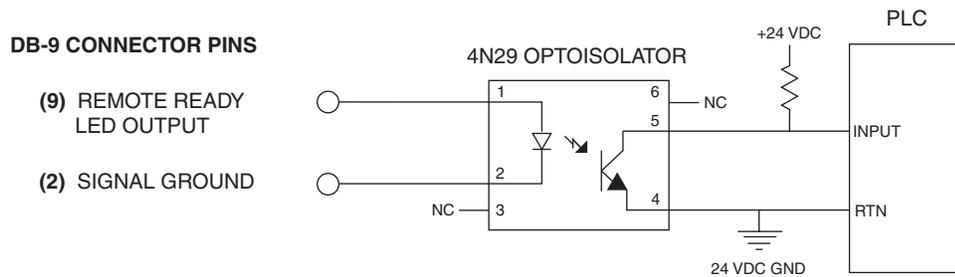

**Figure 3-12** Remote Ready output to PLC input using pull-up resistor

Figure 3-13 shows how to connect the Message Output signal on the *DB-9 Connector* to a PLC. The Message Output function provides a pre-shutdown temperature indication when laser tube temperature reaches  $54\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}$ , signaling the need to increase laser cooling or risk laser shutdown if laser temperature rises to  $> 60\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}$ .

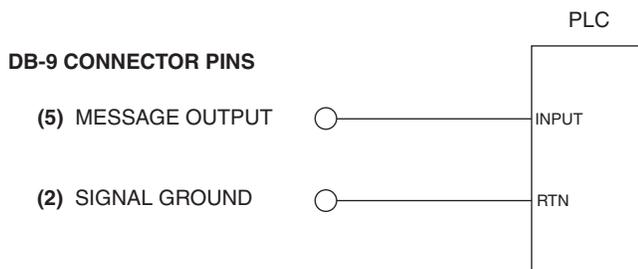


**Figure 3-13** Message Output to PLC input

# technical reference

## DB-9 connections

Figure 3-14 illustrates how to connect the Fault Shutdown Output signal to a PLC. The Fault Shutdown Output function signals a laser shutdown due to an under/over voltage condition, an over temperature condition, or failure of internal circuitry.

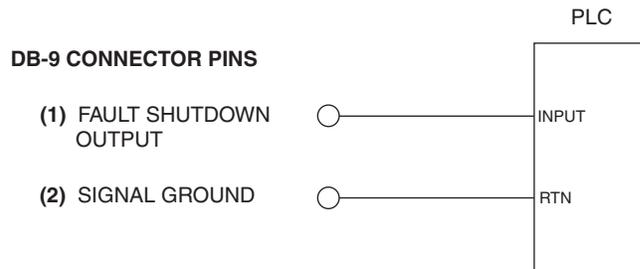

**Figure 3-14** Fault Shutdown Output to PLC input

# technical reference

## Integrating Series 48 safety features

The *Integrating Series 48 safety features* section includes subsections:

- Remote keyswitch functions
- Remote interlock functions

The Series 48 *DB-9 Connector* allows system integrators or end-users to integrate Series 48 laser safety features into their control system. In particular, the Series 48 *Remote Keyswitch* and *Remote Interlock* functions serve to disable DC power to the laser's RF driver. Without power, the RF driver cannot supply PWM Command or tickle signals to the resonator, causing the CO<sub>2</sub> gas to remain in a zero-energy state.

## Remote keyswitch functions

### Keyswitch lasers

After DC power-up, or after a fault or open interlock condition, the *Keyswitch* must be toggled to reset the laser, which enables the *PWR LED* and signals that DC power is applied to the RF driver. Over temperature faults are reset by removing, then reapplying DC power after the laser has cooled.

For *Keyswitch* lasers in automated control systems, this reset function is provided by the Remote Keyswitch signal via pins 6 and 7 on the *DB-9 Connector*. To use this “remote keyswitch” functionality, first place the *Keyswitch* in the ON position. To reset a fault condition, open and then close a “dry-circuit” (zero voltage) switch or relay contact between Pin 6, Remote Keyswitch Input, and Pin 7, Remote Keyswitch Output. Reconnecting Pin 6 to Pin 7 applies power to the RF driver and begins a five-second delay after which lasing is enabled. The RF driver is disabled when the remote keyswitch circuit is open.

Your control system can monitor the laser's power-on status through the *DB-9 Connector* by connecting your system's input between Pin 9, Remote Ready LED Output, and Pin 2 or Pin 4, Signal Ground. The Remote Ready LED Output goes active when the laser is enabled (*PWR LED* turns On), indicating that lasing is possible after the five-second delay. The output is inactive (*PWR LED* off) when lasing is disabled. Refer back to Table 3-6, *DB-9 pin assignments* for specific details.

**Important Note:** Pin 9, the Remote Ready LED Output, is a current- and voltage-limited output meant only for direct connection to an LED or LED-input optoisolator.

### OEM lasers

On OEM lasers, the *PWR LED* illuminates on DC power-up and five seconds later DC power is applied to the RF driver. To reset a fault condition, remove DC power for 30 seconds and then reapply power to the laser or toggle (open, then close) the Remote Keyswitch signal via pins 6 and 7 on the *DB-9 Connector*. To use this “remote reset” functionality, open and then close a “dry-circuit” (zero voltage) switch or relay contact between Pin 6, Remote Keyswitch Input, and Pin 7, Remote Keyswitch Output. Reconnecting Pin 6 to Pin 7 applies power to the RF driver and begins a five-second delay after which lasing is enabled.

Your control system can monitor the laser's power-on status through the *DB-9 Connector* by connecting your system's input between Pin 9, Remote Ready LED Output, and Pin 2 or Pin 4, Signal Ground. The Remote Ready LED Output goes active when the laser is enabled (*PWR LED* turns On), indicating that lasing is possible after the five-second delay. The output is inactive (*PWR LED* off) when lasing is disabled. Refer back to Table 3-6, *DB-9 pin assignments* for specific details.

**Important Note:** Pin 9, the Remote Ready LED Output, is a current- and voltage-limited output meant only for direct connection to an LED or LED-input optoisolator.

# technical reference

## Integrating Series 48 safety features Remote interlock functions

### Keyswitch lasers

Interlock circuits are often used to disable machinery when a shield, panel, or door is opened. The Series 48 remote interlock connects directly into an external, zero-voltage remote interlock circuit to prevent lasing by removing DC power from the laser's RF driver boards when the circuit is electrically "open".

Remote interlock functionality is provided by the Remote Interlock Connection via Pin 3 on the *DB-9 Connector*. Lasing is enabled when the Remote Interlock Connection signal is closed and disabled when the Remote Interlock Connection signal is electrically "open". DC power is applied to the RF driver only when the Remote Interlock Connection signal is closed (*PWR LED* is illuminated). When the Remote Interlock Connection is opened and then closed, you must toggle the *Keyswitch* or Remote Keyswitch Input to reset the laser.

To use the Series 48 remote interlock feature, connect Pin 3, Remote Interlock Connection, to your "dry-circuit" (zero-voltage) interlock circuit and then ground the circuit to Pin 2 or Pin 4, Signal Ground.

#### Caution

possible  
equipment  
damage

Do not apply a voltage to Pin 3, Remote Interlock Connection on the *DB-9 Connector*—the laser will be damaged. This input is a "dry-circuit" (zero voltage) input and must be grounded to either Pin 2 or Pin 4 to complete the interlock circuit.

Lasing is enabled when Pin 3 is grounded (when the external interlock circuit is closed). If the external interlock circuit opens, then Pin 3 opens and lasing is disabled. To enable lasing again, you must close the interlock circuit and toggle the *Keyswitch* or Remote Keyswitch Input. This resets the laser and begins a five-second delay after which lasing is enabled.

Your control system can monitor the laser's power-on status through the *DB-9 Connector* by connecting your system's input between Pin 9, Remote Ready LED Output, and Pin 2 or Pin 4, Signal Ground. The Remote Ready LED Output goes active when the laser is enabled (*PWR LED* turns On), indicating that lasing is possible after the five-second delay. The output is inactive (*PWR LED* off) when lasing is disabled. Refer back to Table 3-6, *DB-9 pin assignments* for specific details.

**Important Note:** Pin 9, the Remote Ready LED Output, is a current- and voltage-limited output meant only for direct connection to an LED or LED-input optoisolator.

### OEM lasers

**Note:** On lasers manufactured as OEM (-S) version lasers, i.e. without a *Keyswitch*, the *Remote Interlock* function is bypassed internally; however, the *Remote Keyswitch* function on Pin 6 and Pin 7 provides a similar functionality.

# technical reference

## Model 48-1 general specifications

**Table 3-8** Model 48-1 general specifications

Parameter		
Output Specifications	10.6 $\mu\text{m}$	9.3 $\mu\text{m}$
Wavelength (microns) .....	10.57–10.63 <sup>†</sup> .....	9.23–9.31
Power Output <sup>1,2</sup> .....	10 W .....	8 W
Power Stability <sup>3</sup> .....	$\pm 10\%$ .....	$\pm 15\%$
Mode Quality .....	$M^2 \leq 1.2$ .....	$M^2 \leq 1.2$
Beam Waist Diameter (at $1/e^2$ ) <sup>4</sup> .....	3.5 mm .....	3.5 mm
Beam Divergence, full angle .....	4 mrad .....	4 mrad
Ellipticity .....	$< 1.2$ .....	$< 1.2$
Polarization .....	Linear, vertical .....	Linear, vertical
Extinction ratio .....	50:1 minimum .....	50:1 minimum
Rise Time .....	$< 150 \mu\text{s}$ .....	$< 150 \mu\text{s}$
<b>Electrical Specifications</b>		
Power Supply Output		
Voltage .....	30 VDC	
Maximum Current .....	7 A	
Control (CTRL) Input		
Logic Low (Off State) .....	0.0 V to +0.5 VDC; 0.0 V nominal	
Logic High (On State) .....	+3.5 V to +10.0 VDC; +5.0 V nominal	
Maximum Current Load .....	6 mA @ +5.0 VDC	
Tickle Pulse Signal		
Tickle Frequency <sup>5</sup> .....	5 kHz	
Pulse Length .....	1.0 $\mu\text{s} \pm 0.2 \mu\text{s}$	
Pulse Rise/Fall Time .....	$\leq 100 \text{ ns}$ between +0.5 V to +3.5 VDC	
PWM Command Input Signal		
PWM Frequency <sup>6</sup> .....	DC to 20 kHz	
PWM Duty Cycle .....	0% to 100%	

\* Specifications subject to change without notice.

† Typical. Actual wavelength range may vary from 10.2–10.8  $\mu\text{m}$ .

1 This power level is guaranteed for 12 months regardless of operating hours.

2 Minimum 30 VDC input voltage to obtain guaranteed output power.

3 From cold start (guaranteed) at 95% duty cycle.

4 Measured at laser output.

5 48 Series lasers are designed to operate at a tickle frequency of 5 kHz, which allows the laser to meet published specifications. Tickle frequencies lower than 4.5 kHz may compromise laser performance, particularly optical rise times, and stress the RF electronics thereby reducing long term reliability while tickle frequencies greater than 5 kHz may cause laser emission.

6 FCC and CE tested at 5 kHz.

# technical reference

## Model 48-1 general specifications

### Parameter

Cooling Specifications <sup>7</sup>	(Air-cooled)	(Water-cooled)
Maximum Heat Load, laser .....	300 W .....	300 W
Minimum Flow Rate .....	250 CFM × 2 fans.....	0.5 GPM, < 60 PSI
Coolant Temperature .....	≤ 40 °C, ambient.....	18 °C to 22 °C

### Environmental Specifications

Operating Temperature <sup>8</sup> .....	15 °C to 40 °C
Humidity.....	0% to 95%, non-condensing

### Physical Specifications

Length .....	16.9 in (42.9 cm)
(incl. cooling tubes).....	18.1 in (46.0 cm)
Width .....	2.8 in (7.1 cm)
Height .....	4.2 in (10.7 cm)
Weight .....	9.0 lbs (4.1 kg)

\* Specifications subject to change without notice.

7 Inlet cooling water temperature should always be maintained above the dew point to avoid condensation and water damage to the laser.

8 Published specifications guaranteed at a cooling temperature of 22 °C. Some performance degradation may occur when operated in ambient air or coolant temperatures above 22 °C.

# technical reference

## Model 48-2 general specifications

**Table 3-9** Model 48-2 general specifications

Parameter		
Output Specifications	10.6 $\mu\text{m}$	9.3 $\mu\text{m}$
Wavelength (microns) .....	10.57–10.63 <sup>†</sup> .....	9.23–9.31
Power Output <sup>1,2</sup> .....	25 W .....	18 W
Power Stability <sup>3</sup> .....	$\pm 5\%$ .....	$\pm 7\%$
Mode Quality .....	$M^2 \leq 1.2$ .....	$M^2 \leq 1.2$
Beam Waist Diameter (at $1/e^2$ ) <sup>4</sup> .....	3.5 mm .....	3.5 mm
Beam Divergence, full angle .....	4 mrad .....	4 mrad
Ellipticity .....	$< 1.2$ .....	$< 1.2$
Polarization .....	Linear, vertical .....	Linear, vertical
Extinction ratio .....	50:1 minimum .....	50:1 minimum
Rise Time .....	$< 150 \mu\text{s}$ .....	$< 150 \mu\text{s}$
<b>Electrical Specifications</b>		
Power Supply Output		
Voltage .....	30 VDC	
Maximum Current .....	14 A	
Control (CTRL) Input		
Logic Low (Off State) .....	0.0 V to +0.5 VDC; 0.0 V nominal	
Logic High (On State) .....	+3.5 V to +10.0 VDC; +5.0 V nominal	
Maximum Current Load .....	6 mA @ +5.0 VDC	
Tickle Pulse Signal		
Tickle Frequency <sup>5</sup> .....	5 kHz	
Pulse Length .....	1.0 $\mu\text{s} \pm 0.2 \mu\text{s}$	
Pulse Rise/Fall Time .....	$\leq 100 \text{ ns}$ between +0.5 V to +3.5 VDC	
PWM Command Input Signal		
PWM Frequency <sup>6</sup> .....	DC to 20 kHz	
PWM Duty Cycle .....	0% to 100%	

\* Specifications subject to change without notice.

† Typical. Actual wavelength range may vary from 10.2–10.8  $\mu\text{m}$ .

1 This power level is guaranteed for 12 months regardless of operating hours.

2 Minimum 30 VDC input voltage to obtain guaranteed output power.

3 From cold start (guaranteed) at 95% duty cycle.

4 Measured at laser output.

5 48 Series lasers are designed to operate at a tickle frequency of 5 kHz, which allows the laser to meet published specifications. Tickle frequencies lower than 4.5 kHz may compromise laser performance, particularly optical rise times, and stress the RF electronics thereby reducing long term reliability while tickle frequencies greater than 5 kHz may cause laser emission.

6 FCC and CE tested at 5 kHz.

# technical reference

## Model 48-2 general specifications

### Parameter

Cooling Specifications <sup>7</sup>	(Air-cooled)	(Water-cooled)
Maximum Heat Load, laser .....	500 W .....	500 W
Minimum Flow Rate .....	250 CFM × 4 fans.....	0.8 GPM, < 60 PSI
Coolant Temperature .....	≤ 40 °C, ambient.....	18 °C to 22 °C

### Environmental Specifications

Operating Temperature <sup>8</sup> .....	15 °C to 40 °C
Humidity.....	0% to 95%, non-condensing

### Physical Specifications

Length .....	31.9 in (81.0 cm)
(incl. cooling tubes).....	33.1 in (84.1 cm)
Width .....	2.8 in (7.1 cm)
Height .....	4.2 in (10.7 cm)
Weight .....	18.0 lbs (8.2 kg)

\* Specifications subject to change without notice.

7 Inlet cooling water temperature should always be maintained above the dew point to avoid condensation and water damage to the laser.

8 Published specifications guaranteed at a cooling temperature of 22 °C. Some performance degradation may occur when operated in ambient air or coolant temperatures above 22 °C.

# technical reference

## Model 48-5 general specifications

Table 3-10 Model 48-5 general specifications

### Parameter

<b>Output Specifications</b>	<b>10.6 <math>\mu\text{m}</math></b>
Wavelength (microns) .....	10.57–10.63 <sup>†</sup>
Power Output <sup>1,2</sup> .....	50 W
Power Stability <sup>3</sup> .....	$\pm 5\%$
Mode Quality .....	$M^2 \leq 1.2$
Beam Waist Diameter (at $1/e^2$ ) <sup>4</sup> .....	3.5 mm
Beam Divergence, full angle .....	4 mrad
Ellipticity .....	$< 1.2$
Polarization .....	Random
Extinction ratio.....	N/A
Rise Time .....	$< 150 \mu\text{s}$

### Electrical Specifications

#### Power Supply Output

Voltage .....	30 VDC
Maximum Current .....	28 A

#### Control (CTRL) Input

Logic Low (Off State) .....	0.0 V to +0.5 VDC; 0.0 V nominal
Logic High (On State) .....	+3.5 V to +10.0 VDC; +5.0 V nominal
Maximum Current Load.....	12 mA @ +5.0 VDC

#### Tickle Pulse Signal

Tickle Frequency <sup>5</sup> .....	5 kHz
Pulse Length .....	$1.0 \mu\text{s} \pm 0.2 \mu\text{s}$
Pulse Rise/Fall Time.....	$\leq 100 \text{ ns}$ between +0.5 V to +3.5 VDC

#### PWM Command Input Signal

PWM Frequency <sup>6</sup> .....	DC to 20 kHz
PWM Duty Cycle .....	0% to 100%

\* Specifications subject to change without notice.

† Typical. Actual wavelength range may vary from 10.2–10.8  $\mu\text{m}$ .

1 This power level is guaranteed for 12 months regardless of operating hours.

2 Minimum 30 VDC input voltage to obtain guaranteed output power.

3 From cold start (guaranteed) at 95% duty cycle.

4 Measured at laser output.

5 48 Series lasers are designed to operate at a tickle frequency of 5 kHz, which allows the laser to meet published specifications. Tickle frequencies lower than 4.5 kHz may compromise laser performance, particularly optical rise times, and stress the RF electronics thereby reducing long term reliability while tickle frequencies greater than 5 kHz may cause laser emission.

6 FCC and CE tested at 5 kHz.

# technical reference

## Model 48-5 general specifications

---

**Parameter**

---

<b>Cooling Specifications<sup>7,8</sup></b>	(Water-cooled)
Maximum Heat Load, laser .....	800 W
Minimum Flow Rate .....	1.5 GPM, < 60 PSI
Coolant Temperature .....	18 °C to 22 °C

---

**Environmental Specifications**

Operating Temperature <sup>9</sup> .....	15 °C to 40 °C
Humidity.....	0% to 95%, non-condensing

---

**Physical Specifications**

Length .....	34.9 in (88.6 cm)
(incl. cooling tubes).....	36.4 in (92.5 cm)
Width .....	5.3 in (13.5 cm)
Height .....	4.5 in (11.4 cm)
Weight .....	44.0 lbs (20.0 kg)

---

\* Specifications subject to change without notice.

7 Lasers with output power  $\geq 50$  W must be water-cooled. Lasers with output < 50 W can be water- or air-cooled although water-cooling is strongly recommended for duty cycles > 50%. Water-cooling improves power stability at any duty cycle.

8 Inlet cooling water temperature should always be maintained above the dew point to avoid condensation and water damage to the laser.

9 Published specifications guaranteed at a cooling temperature of 22 °C. Some performance degradation may occur when operated in ambient air or coolant temperatures above 22 °C.

# technical reference

## Model 48-1 package outline drawing

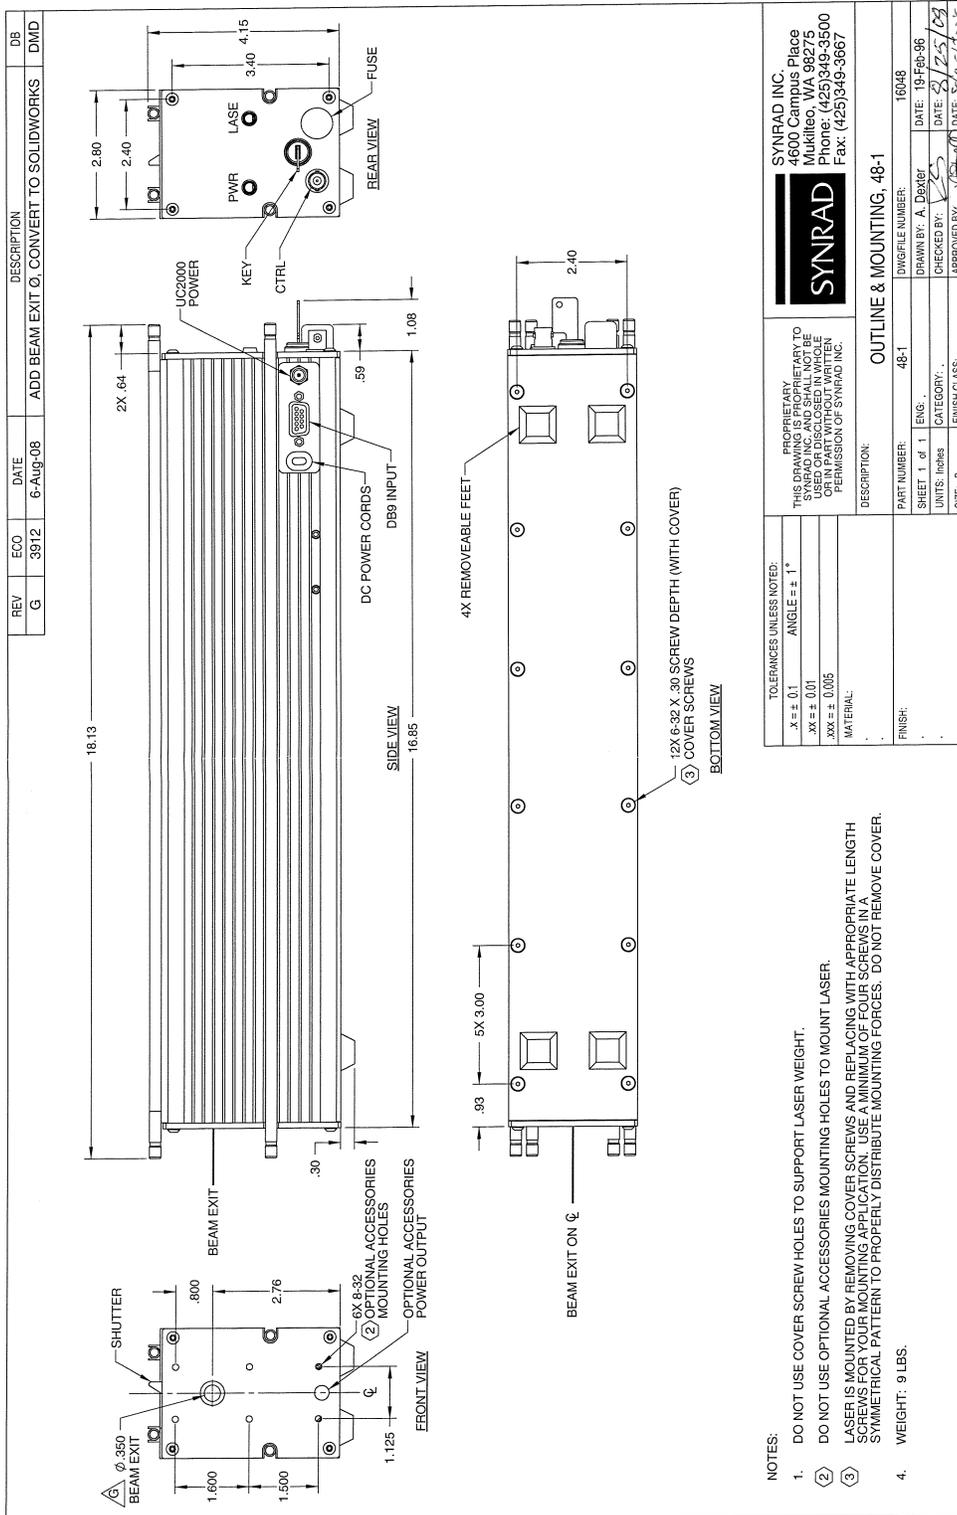


Figure 3-15 Model 48-1 package outline and mounting dimensions

# technical reference

## Model 48-2 package outline drawing

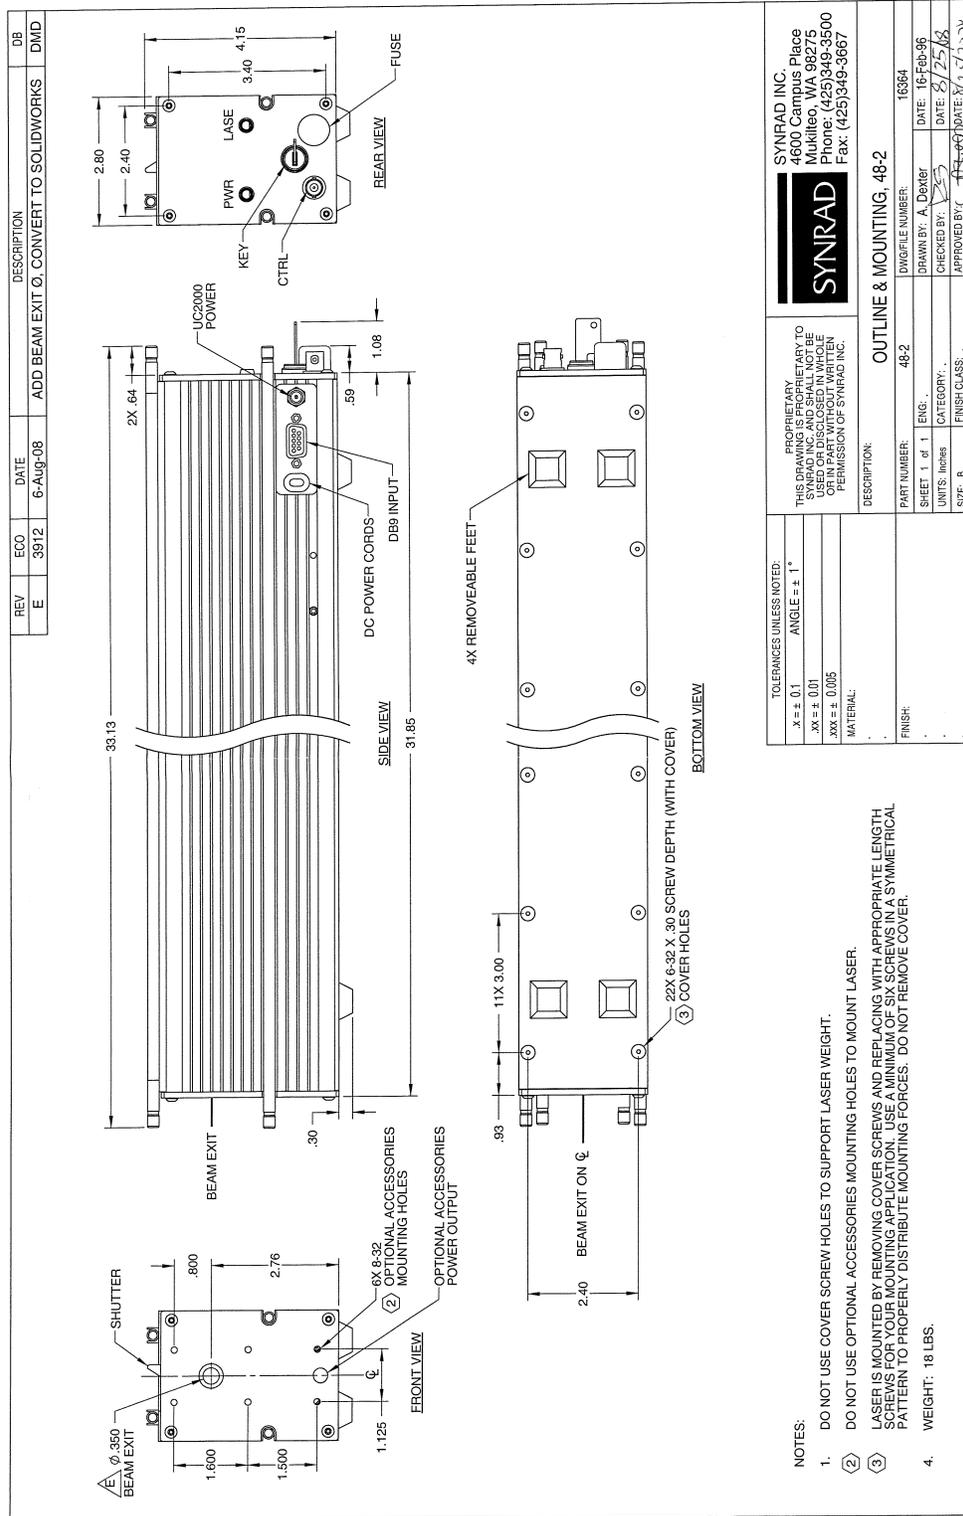


Figure 3-16 Model 48-2 package outline and mounting dimensions



# technical reference

## Series 48 packaging instructions

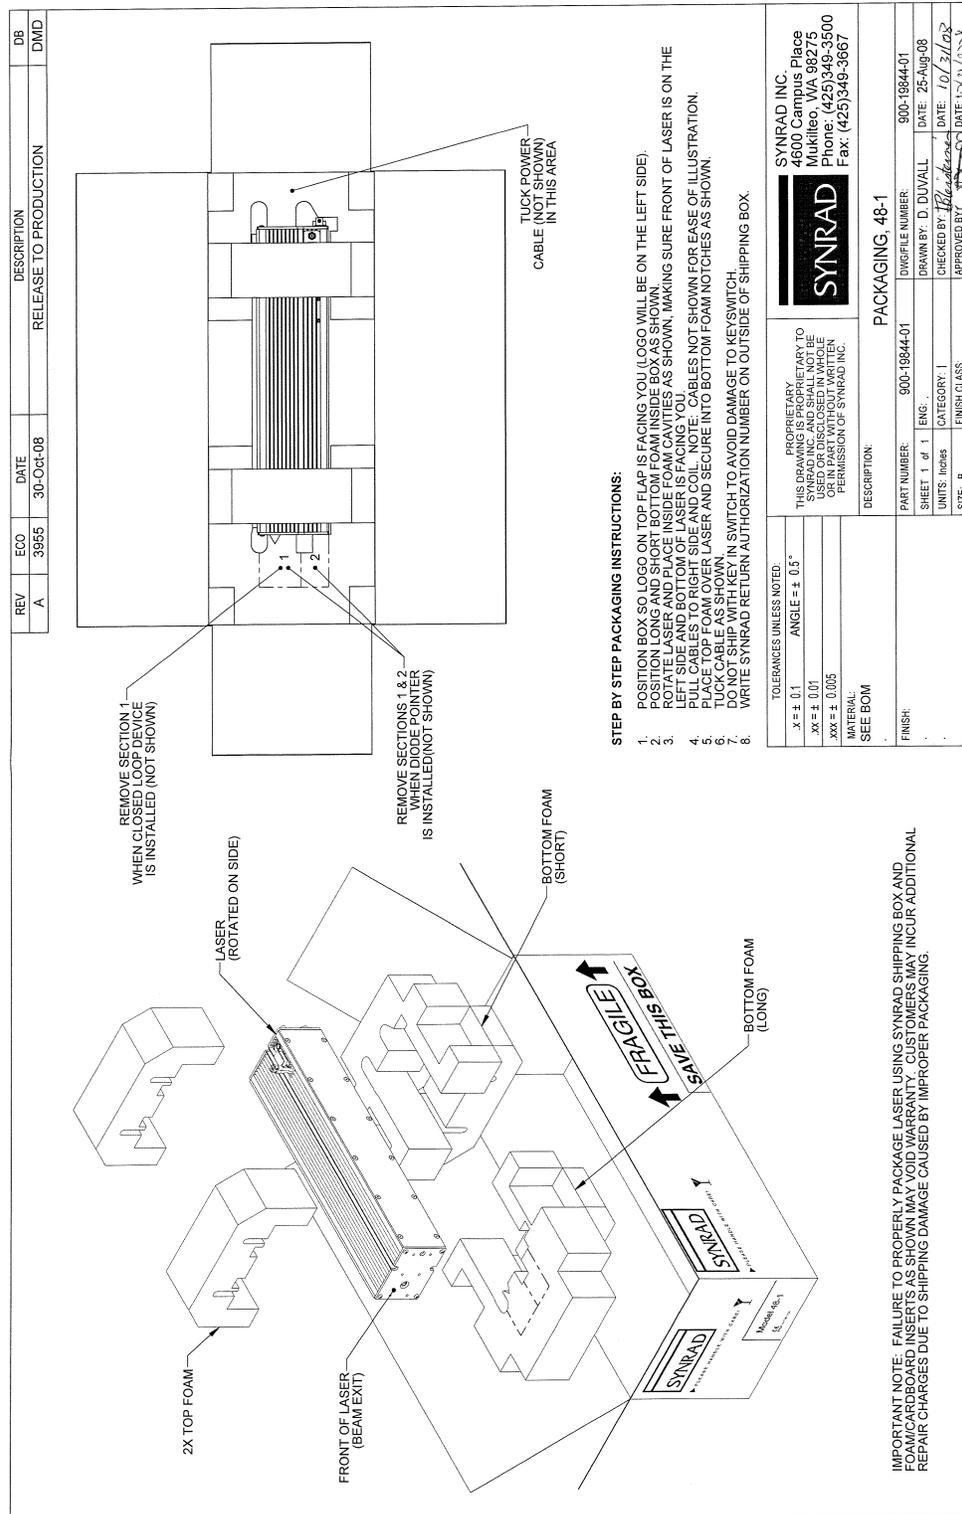


Figure 3-18 Model 48-1 packaging instructions

# technical reference

## Series 48 packaging instructions

REV	ECO	DATE	DESCRIPTION	DB
A	3955	30-Oct-08	RELEASE TO PRODUCTION	DMD

**STEP-BY-STEP PACKAGING INSTRUCTIONS:**

1. POSITION BOX SO LOGO ON TOP FLAP IS FACING YOU (LOGO WILL BE ON THE LEFT SIDE).
2. POSITION OVERPACK FOAM AND LONG AND SHORT BOTTOM FOAM INSIDE BOX AS SHOWN.
3. ROTATE LASER AND PLACE INSIDE FOAM CAVITIES AS SHOWN, MAKING SURE FRONT OF LASER IS ON THE LEFT SIDE AND BOTTOM OF LASER IS FACING YOU.
4. PULL CABLE TO RIGHT SIDE AND COIL. NOTE: CABLES NOT SHOWN FOR EASE OF ILLUSTRATION.
5. PLACE TOP FOAM OVER LASER AND SECURE INTO BOTTOM FOAM NOTCHES AS SHOWN.
6. DO NOT SHIP WITH KEY IN SWITCH TO AVOID DAMAGE TO KEYSWITCH.
7. DO NOT SHIP WITH KEY IN SWITCH TO AVOID DAMAGE TO KEYSWITCH.
8. WRITE SYNRAD RETURN AUTHORIZATION NUMBER ON OUTSIDE OF SHIPPING BOX.

**TOLERANCES UNLESS NOTED:**

x ± 0.1    ANGLE ± 0.5°

xx ± 0.01

xxx ± 0.005

MATERIAL: SEE BOM

**PROPRIETARY**  
THIS DRAWING IS PROPRIETARY TO SYNRAD INC. IT IS NOT TO BE USED OR DISCLOSED IN WHOLE OR IN PART WITHOUT WRITTEN PERMISSION OF SYNRAD INC.

**SYNRAD**

SYNRAD INC.  
4600 Campus Place  
Mukilteo, WA 98275  
Phone: (425)349-3500  
Fax: (425)349-3667

DESCRIPTION: PACKAGING, 48-2	
PART NUMBER: 900-19845-01	DWG FILE NUMBER: 900-19845-01
SHEET 1 of 1	ENG. BY: D. DUVALL
UNITS: inches	DATE: 25-Aug-08
SIZE: B	CHECKED BY: [Signature]
	APPROVED BY: [Signature]
	DATE: 10/30/08

**IMPORTANT NOTE:** FAILURE TO PROPERLY PACKAGE LASER USING SYNRAD SHIPPING BOX AND OVERPACK FOAM MAY CAUSE DAMAGE TO LASER AND INCUR ADDITIONAL REPAIR CHARGES DUE TO SHIPPING DAMAGE CAUSED BY IMPROPER PACKAGING.

Figure 3-19 Model 48-2 packaging instructions

# technical reference

## Series 48 packaging instructions

REV A	ECO 3955	DATE 30-Oct-08	DESCRIPTION RELEASE TO PRODUCTION	DB DMD
----------	-------------	-------------------	--------------------------------------	-----------

**STEP-BY-STEP PACKAGING INSTRUCTIONS:**

1. POSITION BOX SO LOGO ON TOP FLAP IS FACING YOU (LOGO WILL BE ON THE LEFT SIDE).
2. POSITION BOTTOM FOAM INSIDE BOX AS SHOWN.
3. PLACE LASER INSIDE FOAM CAVITIES AS SHOWN, MAKING SURE FRONT OF LASER IS ON THE LEFT SIDE.
4. PULL CABLES TO RIGHT SIDE AND COIL.
5. PLACE TOP FOAM OVER LASER AS SHOWN.
6. LOCK OF BIBLE AS SHOWN.
7. TUCK POWER CABLE AS SHOWN.
8. WRITE SYNRAD RETURN AUTHORIZATION NUMBER ON OUTSIDE OF SHIPPING BOX.

**TOLERANCES UNLESS NOTED:**

X = ± 0.1  
 XX = ± 0.01  
 XXX = ± 0.005

**MATERIAL**  
 SEE BOM

**PROPRIETARY**  
 THIS DRAWING IS PROPRIETARY TO SYNRAD AND IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART WITHOUT WRITTEN PERMISSION OF SYNRAD INC.

**SYNRAD**  
 SYNRAD INC.  
 4600 Campus Place  
 Mukilteo, WA 98275  
 Phone: (425)349-3500  
 Fax: (425)349-3667

DESCRIPTION PACKAGING, 48-5	PART NUMBER 900-19860-01	DWG FILE NUMBER 900-19860-01	DRAWN BY: D. DUVALL
			DATE: 22-Oct-08
			CHECKED BY: <i>[Signature]</i>
			DATE: 10/21/08
			APPROVED BY: <i>[Signature]</i>
			DATE: 10/21/08

**IMPORTANT NOTE:** FAILURE TO PROPERLY PACKAGE LASER USING SYNRAD SHIPPING BOX AND FOAM/CARDBOARD INSERTS AS SHOWN MAY VOID WARRANTY. CUSTOMERS MAY INCUR ADDITIONAL REPAIR CHARGES DUE TO SHIPPING DAMAGE CAUSED BY IMPROPER PACKAGING.

**FINISH:**

SHEET 1 of 1    ENG.    CATEGORY: 1

UNITS: inches    FINISH CLASS: .

SIZE: B

Figure 3-20 Model 48-5 packaging instructions

# technical reference

## Series 48 packaging instructions

REV	ECO	DATE	DESCRIPTION
A	4030	13-Apr-09	RELEASE TO PRODUCTION
B	4134	16-Nov-09	UPDATE PACKAGING INSTRUCTIONS, ADD DETAIL 'A'

DB	DESCRIPTION
DMD	RELEASE TO PRODUCTION
DMD	UPDATE PACKAGING INSTRUCTIONS, ADD DETAIL 'A'

**STEP BY STEP PACKAGING INSTRUCTIONS:**

- POSITION BOX SO LOGO ON TOP FLAP IS FACING YOU (LOGO WILL BE ON THE LEFT SIDE).
- PLACE BOTTOM ENDCAPS AND BOTTOM CENTER BRACE INTO BOX AS SHOWN.
- INSTALL THE RED PROTECTIVE LENS CAP OVER THE FOCUSING LENS.
- PLACE LASER ASSEMBLY ON TOP OF WOOD PLATFORM, SLIDING MOUNTING PLATE UNDER BOTH 6" WOOD EXTENSION STRIPS, TIGHTEN FOUR BOLTS TO SECURE FRONT OF MOUNTING PLATE.
- REFER TO DETAIL 'A' AND INSERT TWO CARRIAGE BOLTS THROUGH BOTTOM OF PLATFORM AND MOUNTING PLATE. PLACE FLAT WASHER AND LOCK WASHER OVER BOLT AND SECURE WITH HEX NUT.
- PLACE LASER ASSEMBLY PLATFORM ON TOP OF FOAM ENDCAPS AND CENTER BRACE AS SHOWN.
- FOLD CARDBOARD CAP AND INSERT INTO TOP ENDCAP AS SHOWN.
- PLACE TOP ENDCAPS OVER LASER. SLIDE TOP CENTER BRACE INTO LOWER CENTER BRACE AND SECURE.
- DO NOT SHIP WITH KEY IN SWITCH TO AVOID DAMAGE TO KEYSWITCH.
- USE THE ACCESSORY BOX AS SHOWN.
- WRITE SYNRAD RETURN AUTHORIZATION NUMBER ON OUTSIDE OF SHIPPING BOX.

**DETAIL A**

HEX NUT  
LOCK WASHER  
FLAT WASHER  
MOUNTING PLATE  
WOOD  
BOLT

SUPPORT BLOCK  
PROTECTIVE CAP  
BOTTOM CENTER BRACE  
(PLACE BETWEEN WOOD STRIPS OF PLATFORM)

TOLERANCES UNLESS NOTED: .x ± .1 .xx ± .01 .xxx ± .005 MATERIAL: SEE BOM		PROPRIETARY THIS DRAWING IS PROPRIETARY TO SYNRAD INC. AND IS NOT TO BE USED OR DISCLOSED IN WHOLE OR IN PART WITHOUT WRITTEN PERMISSION OF SYNRAD INC.
SYNRAD INC. 4600 Campus Place Mukitico, VA 96275 Phone: (425)348-3500 Fax: (425)348-3667		
DESCRIPTION: PACKAGING, FLMK-1A, 48-1, FLYER		
PART NUMBER:	900-19860-01	DWG FILE NUMBER: 900-19860-01
SHEET 1 of 1	ENG.:	DRAWN BY: D. DUVALL
UNITS: inches	CATEGORY: I	CHECKED BY:
SIZE: B	FINISH CLASS:	APPROVED BY:
FINISH:		DATE: T3-Apr-09

**IMPORTANT NOTE:**  
 FAILURE TO PROPERLY PACKAGE LASER USING SYNRAD SHIPPING  
 BOX AND FOAM/CARDBOARD INSERTS AS SHOWN MAY VOID  
 WARRANTY. CUSTOMERS MUST FOLLOW ALL TOPICAL PACKAGING  
 CHARGES TO AVOID SHIPPING DAMAGE CAUSED BY IMPROPER PACKAGING.

Figure 3-21 FLMK-1A (10W fan shroud) packaging instructions

# technical reference

## Series 48 packaging instructions

**IMPORTANT NOTE:**  
FAILURE TO PROPERLY PACKAGE LASER USING SYNRAD SHIPPING BOX AND FOAM/CARDBOARD INSERTS AS SHOWN MAY VOID WARRANTY. CUSTOMERS MAY INCUR ADDITIONAL REPAIR CHARGES DUE TO SHIPPING DAMAGE CAUSED BY IMPROPER PACKAGING.

REV	ECO	DATE	DESCRIPTION	DB
A	4030	13-Apr-09	RELEASE TO PRODUCTION	DMD
B	4134	18-Nov-09	UPDATE PACKAGING INSTRUCTIONS, ADD DETAIL 'A'	DMD

**STEP BY STEP PACKAGING INSTRUCTIONS:**

- POSITION BOX SO LOGO ON TOP FLAP IS FACING YOU (LOGO WILL BE ON THE LEFT SIDE).
- PLACE BOTTOM ENDCAPS AND BOTTOM CENTER BRACE INTO BOX AS SHOWN.
- INSTALL THE RED PROTECTIVE LENS CAP OVER THE FOCUSING LENS.
- PLACE LASER ASSEMBLY ON TOP OF WOOD PLATFORM. SLIDING MOUNTING PLATE UNDER BOTH 6" WOOD EXTENSION STRIPS. TIGHTEN FOUR BOLTS TO SECURE FRONT OF MOUNTING PLATE. THE FAN SHROUD TO REMAIN IN THE FRONT OF THE LASER. DO NOT TIGHTEN THE FOUR THUMBSCREWS.
- THE FAN SHROUD IS ON THE FRONT OF THE LASER. TIGHTEN THE TWO THUMBSCREWS.
- CAREFULLY TILT THE FAN SHROUD TO THE REAR. BEING SURE NOT TO DAMAGE FAN OR POWER WIRING.
- REFER TO DETAIL 'A' AND INSERT TWO CARRIAGE BOLTS THROUGH BOTTOM OF PLATFORM AND MOUNTING PLATE. PLACE FLAT WASHER AND LOCK WASHER OVER BOLT AND SECURE WITH HEX NUT.
- LOWER FAN SHROUD. REPLACE FRONT AND CENTER THUMBSCREWS, AND THEN TIGHTEN ALL SIX SNUGLY.
- PLACE LASER ASSEMBLY WITH FAN SHROUD ON TOP OF WOOD PLATFORM.
- PLACE LASER ASSEMBLY WITH FAN SHROUD ON TOP OF WOOD PLATFORM.
- PLACE LASER ASSEMBLY WITH FAN SHROUD ON TOP OF WOOD PLATFORM.
- FOLD CARDBOARD CAP AND INSERT INTO TOP ENDCAP AS SHOWN.
- PLACE TOP ENDCAPS OVER LASER. SLIDE TOP CENTER BRACE INTO LOWER CENTER BRACE AND SECURE.
- PLACE ACCESSORY BOX IN FRONT OF FOAM ENDCAPS AS SHOWN.
- DO NOT SHIP WITH KEY IN SWITCH TO AVOID DAMAGE TO KEYSWITCH.
- CLOSE AND SEAL BOX AS REQUIRED.
- WRITE SYNRAD RETURN AUTHORIZATION NUMBER ON OUTSIDE OF SHIPPING BOX.

**SYNRAD INC.**  
4600 Campus Place  
Mukitico, VA 96273  
Phone: (425)348-3500  
Fax: (425)348-3667

PROPRIETARY  
THIS DRAWING IS PROPRIETARY TO  
USED OR DISCLOSED IN WHOLE  
OR IN PART WITHOUT WRITTEN  
PERMISSION OF SYNRAD INC.

SYNRAD

**TOLERANCES UNLESS NOTED:**

x ± .1  
xx ± .01  
xxx ± .005

MATERIAL:  
SEE BOM

DESCRIPTION: PACKAGING, FLMK-2A, 48-2, FLYER

PART NUMBER: 900-19851-01  
DWS/FILE NUMBER: 900-19851-01

SHEET 1 of 1  
DRAWN BY: D. DUVALL  
DATE: 13-Apr-09

UNITS: inches  
CATEGORY: I  
CHECKED BY: DATE:

SIZE: B  
FINISH CLASS: ...  
APPROVED BY: DATE:

Figure 3-22 FLMK-2A (25W fan shroud) packaging instructions

# technical reference

This page intentionally left blank.

# **maintenance/ troubleshooting**

Use information in this chapter to perform maintenance or troubleshoot your SYNRAD Series 48 laser.

This chapter contains the following information:

- Maintenance – describes typical Series 48 maintenance procedures.
- Troubleshooting – explains how to troubleshoot common Series 48 problems.

# maintenance/ troubleshooting

## Maintenance

The *Maintenance* section includes subsections:

- Disabling the 48 Series laser
- Daily inspections
- Storage/shipping
- Cleaning optical components

## Disabling the 48 Series laser

Before performing any maintenance on your SYNRAD 48 Series laser, be sure to completely disable the laser by disconnecting the laser from its DC power source.

## Daily inspections

Perform the following steps daily to keep your Series 48 laser in optimum operating condition. Except for the procedures described below, no other service is required or should be attempted.

**Warning**  
serious  
personal  
injury

A risk of exposure to toxic elements, like zinc selenide, may result when certain optical or beam delivery components are damaged. In the event of damage to laser, marking head, or beam delivery optics, contact SYNRAD, Inc. or the optics manufacturer for handling instructions.

**Caution**  
possible  
equipment  
damage

If you operate your laser or marking head in a dirty or dusty environment, contact SYNRAD about the risks of doing so and the precautions you can take to increase the longevity of your laser, marking head, and associated optical components.

- 1 For water-cooled lasers, inspect cooling tubing connections for signs of leakage. Check for signs of condensation that may indicate the cooling water temperature is set below the dew point temperature. Condensation will damage electrical and optical components inside the laser. See *Setting coolant temperature* in the Getting Started chapter for information on preventing condensation.
- 2 Inspect beam delivery components for signs of dust or debris and clean as required. When cleaning the optical surfaces of beam delivery components, carefully follow the manufacturer's instructions.

# maintenance/ troubleshooting

## Maintenance

- 3 When using compressed air as a purge/assist gas for your beam delivery system, empty water traps and oil separators on each filter and/or dryer between the laser and your compressed air source. Compressed air purity must meet the gas purity specifications shown in Table 3-1 in the Technical Reference chapter.
- 4 Visually inspect the laser's exterior housing to ensure that all warning labels are present. Refer to hazard label drawings in the Laser Safety chapter for label types and locations.

## Storage/shipping

When preparing a water-cooled laser for storage or shipping, remember to drain cooling water from the laser. In cold climates any water left in the cooling system may freeze, which could damage internal components. After draining thoroughly, use compressed shop air at no more than 29 PSI (while wearing safety glasses!) to remove any residual water. When finished, cap all cooling connectors to prevent debris from entering the cooling system.

When shipping SYNRAD lasers to another facility, we highly recommend that you ship the unit in its original SYNRAD shipping container. If you no longer have the original shipping box and inserts, contact SYNRAD Customer Service about purchasing replacement packaging. Refer to *Series 48 packaging instructions* in the Technical Reference chapter for detailed instructions on properly packaging the laser for shipment.

**Important Note:** Failure to properly package the laser using SYNRAD-supplied shipping boxes and foam/cardboard inserts as shown in the Packaging Instructions may void the warranty. Customers may incur additional repair charges for shipping damage caused by improper packaging.

## Cleaning optical components

 **Danger**  
serious  
personal  
injury

Ensure that DC power to the laser is turned off and locked out before inspecting optical components in the beam path. **Invisible** CO<sub>2</sub> laser radiation is emitted through the aperture. Corneal damage or blindness may result from exposure to laser radiation.

**Caution**  
possible  
equipment  
damage

A small amount of contamination on the laser's output window (or on any optic in the beam path) can absorb enough energy to damage the optic. Inspect the output window and other beam delivery optics periodically for signs of contaminants and carefully clean as required.

In dirty environments, purge laser optics using filtered air or nitrogen to prevent vapor and debris from accumulating on optical surfaces.

# maintenance/ troubleshooting

## Maintenance

Debris or contaminants on the laser's output coupler or external beam delivery components may affect laser processing and lead to damage or failure of the optics and/or the laser. Carefully follow the steps below to inspect and clean the optical components in the beam path. Before beginning the cleaning process, read this entire section thoroughly to ensure that all cleaning materials are available and that each step is completely understood.

**Important Note:** Exercise great care when handling infrared optics; they are much more fragile than common glass materials. Optical surfaces and coatings are easily damaged by rough handling and improper cleaning methods.

## Cleaning guidelines

- Wear latex gloves or finger cots (powder-free) to prevent contamination of the optical surfaces by dirt and skin oils.
- Never handle optics with tools; always use gloved hands or fingers.
- Hold optics by the outer edge; never touch the coated surface.
- Always place optics on lens tissue for protection; never place optics on hard or rough surfaces.
- It may be necessary to use a fluffed cotton swab or cotton ball instead of a lens wipe to uniformly clean the entire surface of small-diameter mounted optics.
- Before using any cleaning agents, read Material Safety Data Sheets (MSDS) and observe all necessary safety precautions.

## Required cleaning materials

Table 4-1 lists the type and grade of materials required to properly clean optical surfaces.

**Table 4-1** Required cleaning materials

<b>Cleaning Material</b>	<b>Requirements</b>
Latex gloves or finger cots	Powder free
Air bulb	Clean air bulb
Ethyl or isopropyl alcohol	Spectroscopic or reagent grade
Acetone	Spectroscopic or reagent grade
Lens wipe (preferred)	Optical (cleanroom) quality
Cotton balls or cotton swabs	High-quality surgical cotton/high-quality paper-bodied

# maintenance/ troubleshooting

## Maintenance

### Cleaning optics

- 1 Shut off and lock out all power to the laser. You must verify that the laser is in a zero-energy state before continuing with the optical inspection!
- 2 Visually inspect all optical surfaces in the beam path, including the laser's output coupler, for contaminants.

#### **Caution**

possible  
lens  
damage

Do not allow the nozzle of the air bulb to touch the optical surface. Any contact may damage the optic by scratching coatings on the optical surface.

Do not use compressed shop air to blow contamination from the optic. Compressed air contains significant amounts of water and oil that form adsorbing films on the optical surface.

Do not exert pressure on the surface of the optic during cleaning. Optical surfaces and coatings are easily scratched by dislodged contaminants.

Use a new lens wipe on each pass as contaminants picked up by the wipe may scratch the optical surface.

- 3 Remove loose contaminants from the optic by holding a clean air bulb at an angle to the optic and blow a stream of air at a glancing angle across the lens surface. Repeat as necessary.
- 4 Dampen a lens wipe with the selected cleaning agent. Alcohol (least aggressive) is best for initial surface cleaning. Acetone (moderately aggressive) is best for oily residue or minor baked-on vapors and debris.

**Important Note:** If acetone is used as a cleaning solvent, a second follow-up cleaning of the optical surface using alcohol is required to remove any acetone residue.

- 5 Gently, and without applying pressure, drag the damp lens wipe across the optical surface in a single pass. **Do not rub hard or apply any pressure**, especially when using a cotton swab. Drag the wipe without applying any downward pressure.

**Note:** Use a clean lens wipe on each pass. The wipe will pick up and carry surface contaminants that may scratch optical surfaces or coatings if reused.

To prevent streaking during the final alcohol cleaning, drag the lens wipe slowly across the surface so that the cleaning liquid evaporates right behind the wipe.

- 6 Carefully examine the optic under a good light. Certain contaminants or damage such as pitting cannot be removed. In these cases the optic must be replaced to prevent catastrophic failure.
- 7 Repeat Steps 4 through 6 as required, removing all traces of contaminants and deposits.

# maintenance/ troubleshooting

## Troubleshooting

The *Troubleshooting* section includes subsections:

- Introduction
- Resetting faults
- Laser faults
- Beam delivery optics

## Introduction

This section is designed to help isolate problems to the module level only. Problems on circuit boards or the laser tube are not within the scope of this guide because they are not user-serviceable assemblies; do not attempt to repair them. Contact SYNRAD or a SYNRAD Authorized Distributor for repair or replacement information.

To troubleshoot the Series 48 laser, it is necessary to understand the sequence of events that must happen before the laser can turn on and operate. Before you attempt to perform any service, we advise you to read the entire troubleshooting guide and review the relevant schematic diagrams. Symptoms and possible causes are highlighted by dark print and bullet points throughout this section. Information about each symptom and cause can be found in the paragraphs following each heading.

**⚠ Danger**  
serious  
personal  
injury

This Class 4 laser product emits *invisible* infrared laser radiation in the 9.3–10.6  $\mu\text{m}$  CO<sub>2</sub> wavelength band depending on model. Because direct or diffuse laser radiation can inflict severe corneal injuries, always wear eye protection when in the same area as an exposed laser beam. Do not contact the laser beam. This product emits an invisible laser beam that is capable of seriously burning human tissue.

Always be aware of the beam's path and always use a beam block while testing.

**Caution**  
possible  
equipment  
damage

Attempting repair of a SYNRAD Series 48 laser without the express authorization of SYNRAD, Inc. will void the product warranty. If troubleshooting or service assistance is required, please contact the SYNRAD Service Department.

# maintenance/ troubleshooting

## Troubleshooting

### Resetting faults

#### Keyswitch lasers

On *Keyswitch* lasers, the *PWR* indicator illuminates green only when the *Remote Interlock* input is closed and the *Keyswitch* is cycled from OFF to the ON position (or the *Remote Keyswitch* input is opened and then closed). After the *PWR* indicator illuminates, a five-second delay occurs before the laser is permitted to lase. The *LASE LED* illuminates dimly when tickle pulses are applied to the laser and when PWM Command pulses are applied (and are long enough to produce laser output) the *LASE LED* illuminates and appears to brighten in relation to an increasing PWM duty cycle.

To reset a remote interlock fault after the fault condition has been cleared, the *Keyswitch* must be cycled from OFF to ON (or with the *Keyswitch* ON, cycle the *Remote Keyswitch* input open and then closed). When the *PWR* indicator illuminates, lasing is enabled after the five-second delay.

To reset an over temperature fault, lower coolant temperature below 22 °C (water-cooled) or below 40 °C (air-cooled). When the laser cools sufficiently, remove DC power for 30 seconds and then reapply power to the laser or cycle the *Keyswitch* from OFF to ON (or with the *Keyswitch* ON, cycle the *Remote Keyswitch* input open and then closed). When the *PWR* indicator illuminates, lasing is enabled after the five-second delay.

A closed shutter is not considered a fault condition; when the shutter is opened, lasing is enabled provided the *PWR* indicator is illuminated green.

After a power failure or shutdown has occurred, the Power-On Reset feature will not allow lasing to restart until the *Keyswitch* or *Remote Keyswitch* is first cycled off (open circuit condition) and then back on (closed circuit).

During any fault shutdown, the Fault Shutdown Output (Pin 1 on the *DB-9 Connector*), which is normally at +15 VDC, latches to a low state (0 VDC) until a keyswitched reset occurs.

#### OEM lasers

On OEM lasers, the *PWR* lamp illuminates on DC power-up. After the *PWR* indicator illuminates, a five-second delay occurs before the laser is permitted to lase. The *LASE LED* illuminates dimly when tickle pulses are applied to the laser and when PWM Command pulses are applied (and are long enough to produce laser output) the *LASE LED* illuminates and appears to brighten in relation to an increasing PWM duty cycle.

To reset an over temperature fault, the coolant temperature must be lowered below 22 °C (water-cooled) or below 40 °C (air-cooled). When the laser cools sufficiently, remove DC power for 30 seconds and then reapply power to the laser or toggle (open, then close) the *Remote Keyswitch* signal via Pin 6 and Pin 7 on the *DB-9 Connector*. When the *PWR* indicator illuminates, lasing is enabled after the five-second delay.

The Power-On Reset feature is not available on OEM models; OEM customers must provide this required safety feature as part of their equipment integration.

During any fault shutdown, the Fault Shutdown Output (Pin 1 on the *DB-9 Connector*), which is normally at +15 VDC, latches to a low state (0 VDC) until the laser is reset by removing DC power for 30 seconds and then reapplying power to the laser.

# maintenance/ troubleshooting

## Troubleshooting

### Laser faults

Each Symptom listed below describes a particular fault condition. For each Symptom, specific causes and solutions are described in the Possible Causes section.

#### Symptom:

- There is no output laser beam; *PWR* and *LASE* indicators are off.

#### Possible Causes:

- No DC voltage is applied or the voltage level is out of specification.

Check that +30 VDC is available on the power supply output terminals and ensure that *DC Power* cable terminal connections are tight.

Check the fuse(s) on the rear of the laser. Replace with fast-blow 10 Amp (48-1) or 20 Amp (48-2/48-5) AGC/3AG fuses (rated at 32 V minimum) as required.

- A reverse DC voltage was applied to the laser.

Replace the fuse(s) with a fast-blow 10 Amp (48-1) or 20 Amp (48-2/48-5) AGC/3AG fuse (rated at 32 V minimum) as required.

- The laser's *DB-9 Connector* is not configured correctly.

Ensure that the factory-wired DB-9 jumper plug is firmly plugged into the laser's *DB-9 Connector*.

If the laser is connected through the *DB-9 Connector* to external circuits, check that field wiring is correct. The remote interlock connection (Pin 3) must be grounded through your external interlock circuit to Pin 2 or Pin 4. Pin 6 must be connected to Pin 7 through your external keyswitch circuitry. Refer to *Connecting* in the Getting Started chapter and *DB-9 connections* in the Technical Reference chapter for details. A quick method to isolate the problem to either the laser or the field wiring is to disconnect field wiring and plug in the factory-wired jumper plug; if the lasers operates normally with the jumper plug installed, verify external wiring and circuit devices.

- The laser's *Keyswitch* is not set properly.

Cycle the *Keyswitch* to the OFF position for a few seconds, then cycle back to ON.

- The laser is in an over temperature condition.

Allow the laser to cool. Verify that the laser is receiving the proper air or water flow per Table 4-2. On air-cooled lasers, verify fan operation and check for at least 57.2 mm (2.25 in) of unobstructed clearance around the fan housing. To restart the laser, disconnect DC power, wait 30 seconds, and then reapply DC power.

# maintenance/ troubleshooting

## Troubleshooting

**Table 4-2** Series 48 cooling specifications

Model	Air-cooled	Water-cooled
48-1	7.1 m <sup>3</sup> /min × 2 fans (1 per side) 250 CFM × 2 fans (1 per side)	1.9 lpm at < 414 kPa 0.5 GPM at < 60 PSI
48-2	7.1 m <sup>3</sup> /min × 4 fans (2 per side) 250 CFM × 4 fans (2 per side)	3.0 lpm at < 414 kPa 0.8 GPM at < 60 PSI
48-5	N/A N/A	5.7 lpm at < 414 kPa 1.5 GPM at < 60 PSI

### Symptom:

- No output beam and the *PWR* and *LASE* LEDs are Off, but +30 VDC is applied.

### Possible Causes:

- A fault shutdown has occurred. Pin 1 on the *DB-9 Connector* is at 0 VDC in reference to Pin 2 or Pin 4 (Pin 1 is at +15 VDC during normal operation).

An over temperature, overvoltage/undervoltage, or RF circuitry failure has occurred.

Correct the problem(s), then remove power from the laser for 30 seconds. Re-apply power (on *Keyswitch* lasers, cycle the *Keyswitch* or *Remote Keyswitch*).

### Symptom:

- No output beam, the *PWR* LED is On, but the *LASE* indicator is off.

### Possible Causes:

- The *Shutter Switch* is closed or not fully open.

Close and then re-open the *Shutter Switch*.

### Symptom:

- No output beam, but the *PWR* LED is On. The *LASE* indicator is dim and does not brighten.

### Possible Causes:

- A PWM Command input signal is not present.

Verify that a PWM Command signal is present on the *CTRL* input. On 48-5 dual-tube lasers, a Command signal must be applied to both *CTRL1* and *CTRL2* inputs simultaneously. See *Controlling laser power* in the Technical Reference chapter for PWM Command signal details.

# maintenance/ troubleshooting

## Troubleshooting

### Symptom:

- Laser power varies or responds intermittently to input PWM Command pulses.

### Possible Causes:

- Verify that your UC-2000 or equivalent PWM controller is delivering tickle pulses of the proper duration. See *Controlling laser power* in the Technical Reference chapter for tickle pulse details.

## Beam delivery optics

### **Warning** serious personal injury

The use of aerosol dusters containing difluoroethane causes “blooming”, a condition that **significantly** expands and scatters the laser beam. This beam expansion can affect mode quality and/or cause laser energy to extend beyond the confines of optical elements in the system, possibly damaging acrylic safety shielding. Do not use air dusters containing difluoroethane in any area adjacent to CO<sub>2</sub> laser systems because difluoroethane persists for long time periods over wide areas.

### **Caution** possible equipment damage

If you operate your laser or marking head in a dirty or dusty environment, contact SYNRAD about the risks of doing so and the precautions you can take to increase the longevity of your laser, marking head, and associated optical components.

### Symptom:

- The laser appears to slowly lose power over time; laser output power must be increased to maintain previous performance.

### Possible Causes:

- Beam delivery optics are coated by vapor residue or debris.

### **Danger** serious personal injury

Ensure that DC power to the laser is turned off and locked out before inspecting optical components in the beam path. **Invisible** CO<sub>2</sub> laser radiation is emitted through the aperture. Corneal damage or blindness may result from exposure to laser radiation.

# maintenance/ troubleshooting

## Troubleshooting

Shut down the laser and carefully inspect each optic in the beam delivery path, including the laser's output coupler. Remember that optics are fragile and must be handled carefully; preferably by the mounting ring only. If the optic requires cleaning, then refer back to *Maintenance* for cleaning instructions. Use only recommended cleaning materials (see Table 4-1) to prevent scratching delicate optical surfaces.

If the focusing optic is pitted, it must be replaced immediately. The laser's high power density will cause pits or debris on the lens to absorb enough energy that the lens may crack. If this happens, other optics in the beam path may be contaminated or damaged as well.

 **Warning**  
serious  
personal  
injury

A risk of exposure to toxic elements, like zinc selenide, may result when certain optical or beam delivery components are damaged. In the event of damage to laser, marking head, or beam delivery optics, contact SYNRAD, Inc. or the optics manufacturer for handling instructions.

When the application requires air (instead of nitrogen or argon) as an assist gas, we recommend the use of breathing quality air available in cylinders from a welding supply company. Because compressed shop air contains minute particles of oil and other contaminants that will damage optical surfaces, it must be carefully filtered and dried before use as a purge or assist gas. Refer to Table 3-1, *Assist gas purity specifications*, in the Technical Reference chapter for filtering specifications.

# **maintenance/ troubleshooting**

This page intentionally left blank.

# appendix a

Use information in this Appendix to connect and operate your Closed Loop (C/L) Stabilization Kit.

This Appendix contains the following information:

- Introduction – explains how the closed loop kit functions.
- Safety precautions – lists laser safety precautions.
- Connecting – describes how to connect the closed loop kit to your laser and UC-2000 Controller.
- Operation – describes closed loop operation.
- Closed loop specifications – provides technical specifications for the Closed Loop Stabilization Kit.

# appendix a

## Closed Loop Stabilization Kit

### Introduction

The Closed Loop (C/L) Stabilization Kit, available for 10 W and 25 W Series 48 lasers, must be installed and calibrated at the factory. The closed loop kit provides an effective, reliable method of stabilizing laser power output by optically sampling the beam and providing feedback to adjust the PWM duty cycle percentage of the UC-2000's output PWM Command signal.

After installation, the beam passes through an optical sampler (which replaces the standard front plate) before it exits the closed loop housing. Optical beam transmission is 92% since the sampler diverts approximately 8% of the output beam to a diffuser and thermopile detector. The detector signal is amplified and sent to the UC-2000 where the Controller generates a variable duty cycle signal to maintain constant average laser output power.

**Note:** Once installed and aligned on the laser, the Closed Loop Stabilization Kit becomes part of the loop response/gain parameter and must NOT be moved or adjusted. Any user modifications or adjustments will void the product warranty.

### Safety precautions

 **Danger**  
possible  
personal  
injury


Please read these instructions carefully before using your Series 48 laser with a Closed Loop Stabilization Kit. To prevent injury to personnel or damage to your laser or C/L Kit, follow all safety precautions and setup instructions as described here and in your laser's *Operator's Manual*. Safe operating practices should be exercised at all times when actively lasing to prevent exposure to direct or scattered laser radiation. Improper handling or operation may result in exposure to hazardous *invisible* laser radiation, damage to, or malfunction of the laser or Closed Loop Stabilization Kit. Severe burns will result from exposure to the laser beam. Always wear safety glasses with side shields to reduce the risk of damage to the eyes when operating the laser.

# appendix a

## Closed Loop Stabilization Kit

### Connecting

Refer to Figure A-1 for an illustration showing a typical closed loop system and then perform the following steps:

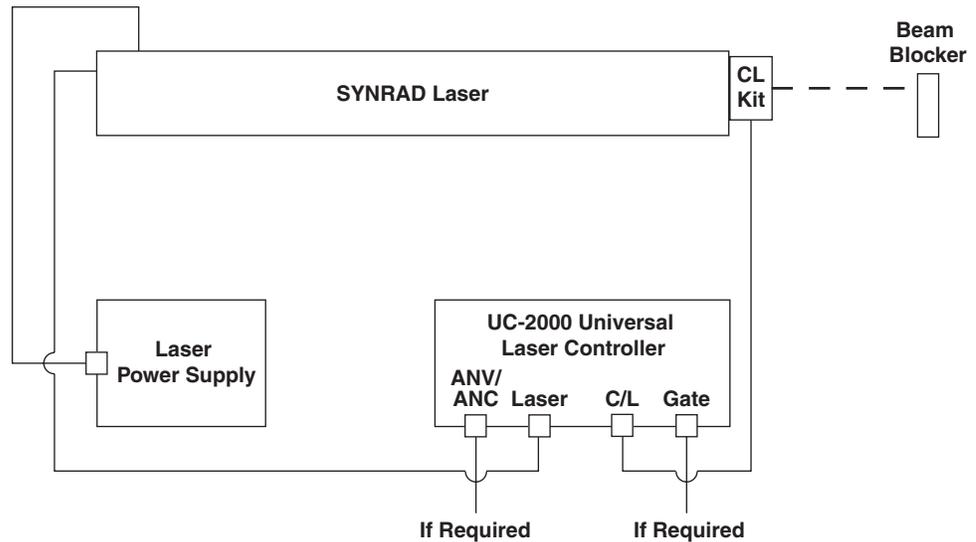

**Figure A-1** Typical closed loop setup

- 1 Disconnect power from your laser and the UC-2000 Controller.
- 2 Connect one end of the *C/L Interconnect* cable to the laser-mounted closed loop assembly and the other end to the UC-2000's 8-pin mini-DIN *C/L* connector.
- 3 If required, connect a gating signal to the UC-2000's *Gate* BNC connector.
- 4 If required, connect an ANV signal from your analog voltage source to the UC-2000's *ANV/ANC* BNC connector.
- 5 Set the UC-2000 to MAN. CLOSED or ANV CLOSED mode.
- 6 Apply power to both the laser and UC-2000 and then verify proper system operation.

# appendix a


## Closed Loop Stabilization Kit Operation

Set the UC-2000 to MAN. CLOSED or ANV CLOSED mode. Adjust the regulated setpoint to provide a laser power output between approximately 20% and 80% of full power. This 20% window on either side of the range allows the Controller to maintain full dynamic power regulation. Within the dynamic response time of the system, the UC-2000 Controller can be gated from an external, low-frequency signal source through the *Gate* connector.

**Note:** On the UC-2000 Controller, the *displayed* setpoint (SET) value may differ from the actual PWR reading by 0.5% due to the display resolution when rounding.

For the closed loop kit, servo settling time to 90% of final value occurs within approximately 2 ms. Output power regulation is typically  $\pm 2\%$ , even when the beam “line hops” between 10.57 and 10.63  $\mu\text{m}$ .

When operating in either closed loop mode, power output is no longer a curve of laser output versus PWM duty cycle but instead, laser power output becomes a linear function of the desired setpoint percentage. However it is important to note, for example, that setting a setpoint value of 50% will **not** result in a 5 W output. This is because actual laser output is greater than the rated output wattage of 10 W (48-1) or 25 W (48-2). Figure A-2 shows a graph of duty cycle percentage versus power output for a standard 10 W laser and the same unit with a closed loop kit installed.

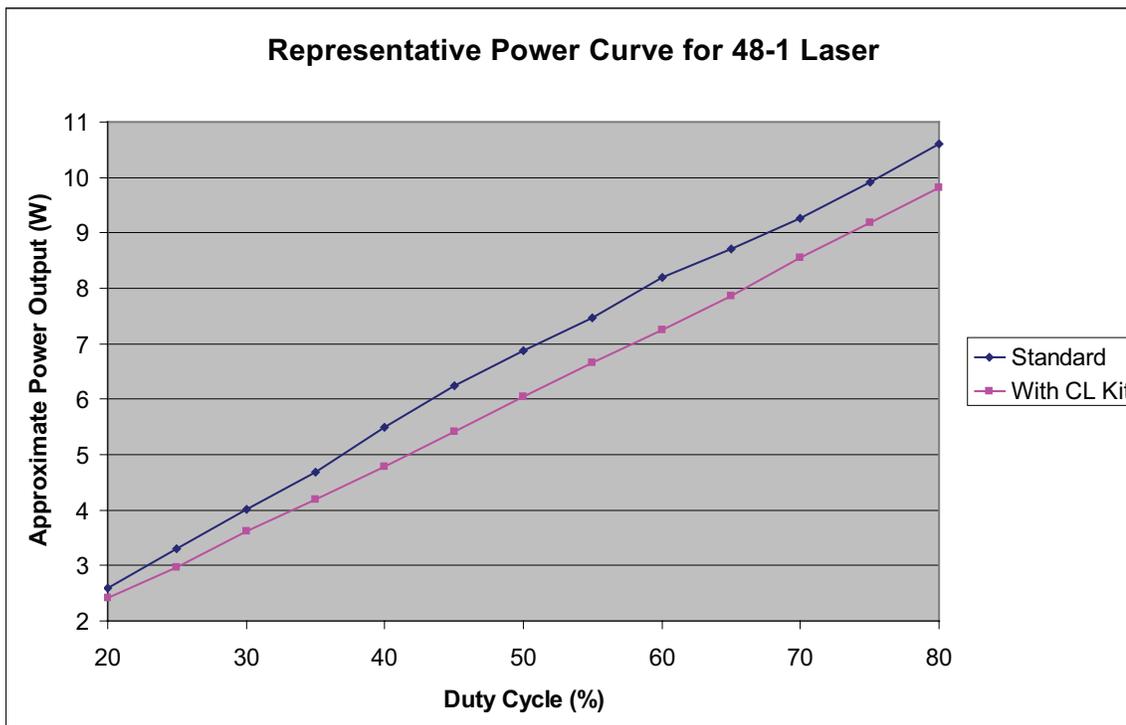

**Figure A-2** Graph of duty cycle vs. power output before/after C.L. kit installed

# appendix a

## Closed Loop Stabilization Kit

### Closed loop specifications

**Table A-1** Closed loop general specifications

<b>Parameter</b>	<b>Specification</b>
Optical Transmission	92%, $\pm 1\%$
Power Input, optical	150 W maximum
Power Input, electrical	12 VDC @ 3 mA (provided by UC-2000)
Power Stability, five minutes after cold start	$\pm 2\%$
Control Range	20%–80% of rated output power
Control Frequency <sup>1</sup>	5 kHz
Servo Settling Time, typical	2 ms

\* Specifications subject to change without notice.

1 The Closed Loop Stabilization Kit is calibrated for operation at a PWM Command frequency of 5 kHz.

# appendix a

This page intentionally left blank.

# index

## A

Agency compliance. See Compliance  
Air-cooled connections **1-8**  
American National Standards Institute (ANSI)  
    **2, 3**  
Analog current control **1-17, 3-10**  
Analog voltage control **1-17, 3-10, A-3, A-4**  
Aperture. See Laser aperture  
Aperture seal **2-2, 2-4, 2-6**  
Applications **x**  
Auxiliary Power connector **2-3**

## B

Beam attenuator **7, 10**  
Beam block **3, 2-4, 2-6**  
Beam characteristics **3-3**  
Beam delivery optics **2-3, 3-5 – 3-6**  
    caution, **3-6**  
    cleaning, **4-3 – 4-5**  
    inspection, **4-2 – 4-3**  
    troubleshooting, **4-10**  
Beam diameter **3-3**  
    specifications, **3-20, 3-22, 3-24**  
BNC Power/Control cable **1-17**  
    connecting, **1-16 – 1-17**

## C

Caution  
    condensation damage, **2-4, 2-6**  
    coolant temperature, **1-10**  
    definition, **1**  
    dirty/dusty environments, **4-2, 4-3, 4-10**  
    equipment damage, **3-19, 4-5**  
    mounting, **1-6**  
    optics damage, **3-6**  
    tickle signal, **2-7, 3-7, 3-10**  
    voiding warranty, **4-6**  
CDRH requirements **7 – 8**  
CE mark **11**  
    label location, **4, 5, 6**  
Chiller  
    connection, **1-12, 1-13**  
    coolant temperature, **1-10, 1-12, 1-13, 4-8**  
    dew point temperature, **1-10, 1-11**

    fittings, **1-9**  
    flow rate, **1-10, 1-12, 1-13, 2-4, 2-6, 3-21, 3-23, 3-25, 4-8– 4-9**  
    preparation, **1-9**  
    temperature setpoint, **1-10, 1-11, 2-4, 2-6, 3-21, 3-23, 3-25**

Class 4 safety requirements **10**  
Cleaning optics **4-3 – 4-5**  
C/L Interconnect cable **A-3**  
Code of Federal Regulations (CFR) **2, 7, 8**  
Closed loop stabilization kit **A-2 – A-5**  
    connecting, **A-3**  
    introduction, **A-2**  
    operation, **A-4**  
    safety precautions, **A-2**  
    specifications, **A-5**  
Collimators **3-5**  
Command signal **2-7, 3-3, 3-9 – 3-10, 4-9**  
    base frequency, **3-10**  
    PWM duty cycle, **3-10**  
    signal amplitude, **3-10**  
Compliance **7 – 11**  
    CDRH, **7 – 8**  
    Class 4 safety requirements **10**  
    Declaration of Conformity **12**  
    EU, **9 – 11**  
    FCC, **8 – 9**  
    RoHS, **11**  
Connecting **1-8 – 1-18**  
    air cooling, **1-8**  
    closed loop stabilization kit, **A-3**  
    control, **1-16 – 1-17**  
    DB-9, **1-17**  
    electrical, **1-14 – 1-16**  
    water cooling, **1-9 – 1-13**  
    UC-2000 Controller, **1-16 – 1-17**  
Contact information **x**  
Continuous wave (CW) **3-10 – 3-11**  
Control connections **1-16 – 1-17**  
    schematic, **1-18**  
Controlling laser power **3-7 – 3-11**  
    control signals, **3-7 – 3-10**  
    operating modes, **3-10 – 3-11**  
Controls and indicators **2-2 – 2-3**  
    48-1 / 48-2 diagram, **2-2**  
    48-5 diagram, **2-3**  
Control signals **3-7 – 3-10**

# index

- Command signal, **3-9 – 3-10**
- Pulse width modulation (PWM), **3-8 – 3-9**
- Tickle pulse, **3-7 – 3-8**
- Coolants **1-9**
  - setting temperature, **1-10, 1-11**
- Cooling connections **1-8, 1-9 – 1-14**
- Cooling fans
  - clearance, **1-6, 1-8, 4-8**
  - recommended location, **1-8**
- Cooling fittings **1-9**
- Cooling kit **1-4, 1-5**
  - connecting, **1-12, 1-13**
  - guidelines, **1-9**
- Cooling water
  - draining, **4-3**
  - flow rate, **1-10, 1-12, 1-13, 2-4, 2-6, 4-9**
  - recommended coolants, **1-9**
  - temperature setpoint, **1-10, 1-11, 1-12, 1-13, 2-4, 2-6**
- Copyright information **viii**
- CTRL (Control) input connector **1-17, 2-3, 2-7, 3-3, 3-5, 3-7, 3-9, 3-11, 4-9**
- Customer Service **x**
- CW operation. See Continuous wave (CW)
- D**
- Daily inspections **4-2 – 4-3**
- Danger
  - closed loop stabilization kit, **A-2**
  - definition, **1**
  - explosive atmospheres, **1**
  - eye protection, **1**
  - laser radiation exposure, **1, 2-4, 2-6, 4-3, 4-6, 4-10, A-2**
- DB-9 connections **1-17, 3-12 – 3-17, 3-18, 3-19**
  - jumper plug, **1-17, 2-4, 2-6, 3-12**
  - pinout diagram, **3-14**
  - sample input circuits, **3-15**
  - sample output circuits, **3-15 – 3-17**
  - signal descriptions, **3-13**
  - signal specifications, **3-14**
- DB-9 Connector **1-4, 1-5, 1-17, 2-2, 2-4, 2-6, 3-4, 3-12, 3-14, 3-16, 3-18, 3-19, 4-7, 4-8, 4-9**
- DC-1 DC power supply **1-14**
  - AC input requirements, **1-14**
  - connecting, **1-14**
- PS-2 DC power supply **1-15**
  - AC input requirements, **1-15**
  - connecting, **1-15**
- PS-6 DC power supply **1-16**
  - AC input requirements, **1-16**
  - connecting, **1-16**
- DC Power cable **1-14, 1-15, 1-16, 2-3, 4-8**
  - connecting, **1-14 – 1-16**
- DC power supply **1-14**
  - connecting, **1-14 – 1-16**
  - troubleshooting, **4-8**
- Declaration of Conformity **12**
- Delivery optics **3-5 – 3-6, 4-10**
  - caution, **3-6, 4-2, 4-3**
  - cleaning, **4-3 – 4-5**
  - Danger, **4-10**
  - Warning, **4-10**
- Dew point **1-10, 1-11**
  - caution, **2-4, 2-6**
  - chart, **1-11**
- Diode Pointer
  - aperture dust cover, **2-5, 2-7**
  - power connector, **2-3**
- Disabling the laser **4-2**
- Divergence **3-2, 3-3, 3-5**
  - specifications, **3-20, 3-22, 3-24**
- Duty cycle **2-5, 2-7, 3-8, 3-9**
- E**
- Electrical connections **1-14 – 1-16**
- EU requirements **9 – 11**
  - Declaration of Conformity **12**
  - Electromagnetic interference standards, **9 – 11**
  - Laser safety standards, **9**
  - RoHS compliance, **11**
- European headquarters **x**
- Expander/collimator **3-5**
- External control **3-10**
- Eye protection **1, 2-4, 2-6, 4-3, 4-6, 4-10**
- F**
- Fan clearance **1-6, 1-8, 4-8**

# index

- Faults
  - laser, **4-8 – 4-10**
  - resetting, **4-7**
- Fault Shutdown Output **3-13, 3-17, 4-7**
  - signal specifications, **3-14**
- FCC requirements **8 – 9**
  - caution to the user, **9**
  - information to the user, **8**
- Final Test report **1-4, 1-5**
- Focusing optics **3-6**
  - cleaning, **4-3 – 4-5**
- Fuse **1-4, 1-5, 2-2**
  - replacement, **4-8**
  - type, **2-2, 4-8**
- G
- Gas purity specifications **3-6**
- Gated operation **3-11**
- General hazards **1 – 3**
- General specifications **3-20 – 3-25**
- H
- Hazard information **1 – 3**
  - additional laser safety information, **3**
  - disposal, **3**
  - general hazards, **1 – 3**
  - label locations, **4, 5, 6**
  - other hazards, **3**
  - terminology, **1**
- Heat load
  - air-cooled, **1-8, 3-21, 3-23, 3-25**
  - water-cooled, **3-21, 3-23, 3-25**
- I
- Indicators and controls **2-2 – 2-3**
- Initial start-up **2-4 – 2-8**
  - with a UC-2000 Controller, **2-4 – 2-5**
  - without a UC-2000 Controller, **2-6 – 2-8**
- Inspections
  - daily, **4-2 – 4-3**
  - incoming, **1-3**
- Integrating safety features **3-18 – 3-19**
  - Keyswitch functions, **3-18**
  - Remote interlock functions, **3-19**
- Interconnection diagram **1-18**
- Interlock. See Remote Interlock
- Introduction **1-2**
- Inventory **1-4 – 1-5**
  - contents description, **1-5**
  - ship kit contents, **1-4**
- J
- Jumper plug **1-17, 3-12, 4-8**
  - pinout diagram, **3-12**
- K
- Keyswitch **7, 9, 10, 1-2, 2-2, 2-5, 2-6, 2-7, 3-3, 3-4, 3-12, 3-13, 3-18, 3-19, 4-7, 4-8, 4-9**
- Keyswitch functions
  - integrating, **3-18**
- Keyswitch lasers
  - resetting, **4-7**
- L
- Label locations **4, 5, 6**
- LASE indicator **7, 10, 2-2, 2-5, 2-7, 3-12, 3-13, 4-7, 4-8, 4-9**
- Laser aperture **7, 2-2, 2-3, 2-4, 2-6, 3-3, 4-10**
- Laser faults **4-8 – 4-10**
- Laser Institute of America (LIA) **3**
- Laser safety information **1 – 12**
- Laser tube **3-2, 3-4**
- L-bracket **1-7**
- M
- Maintenance **4-2 – 4-5**
  - cleaning optical components, **4-3 – 4-5**
  - daily inspections, **4-2 – 4-3**
  - disabling the laser, **4-2**
  - storage/shipping, **4-3**
- Marking/engraving operation **3-11**
- Material Safety Data Sheets (MSDS) **2, 4-4**
- Message Output **3-13, 3-16**
  - signal specifications, **3-14**
- Modulation **3-3, 3-8, 3-9**
- Mounting **1-6 – 1-7**

# index

- standard, **1-6**
  - with FH Series marking head, **1-7**
- Mounting Rail **1-7**
- N
- Nomenclature **1-2**
- O
- Occupational Safety and Health Administration (OSHA) **3**
- OEM lasers
  - resetting, **4-7**
- Operating modes **3-10 – 3-11**
  - analog current control, **3-10**
  - analog voltage control, **3-10**
  - continuous wave, **3-10 – 3-11**
  - external control, **3-10**
  - gated operation, **3-11**
  - marking/engraving operation, **3-11**
- Operator's manual **1-4, 1-5**
- Optical accessories mounting **2-3**
- Optical output pulse
  - waveforms, **3-8**
- Optical resonator **3-2 – 3-3**
- Optical setup
  - cleaning components, **4-3 – 4-5**
  - cleanliness, **3-6**
  - delivery optics, **3-5**
  - focusing optics, **3-6**
  - troubleshooting, **4-10**
- Optics damage **3-6, 4-10**
- Outline and Mounting drawings **3-26 – 3-28**
  - 48-1, **3-26**
  - 48-2, **3-27**
  - 48-5, **3-28**
- Over temperature fault
  - resetting, **4-7, 4-9 – 4-9**
- P
- Package outline drawings **3-26 – 3-28**
  - 48-1, **3-26**
  - 48-2, **3-27**
  - 48-5, **3-28**
- Packaging
  - guidelines, **1-3**
- Packaging instructions **1-3**
  - drawings, **3-29 – 3-33**
- Pulse Width Modulation (PWM) **2-2, 2-5, 2-6, 2-7, 3-2, 3-3**
  - description, **3-8 – 3-9**
- PWM Command signal **3-7, 3-8, 3-9, 3-10, 3-11, 4-7, 4-9**
- PWR (Power) indicator **7, 10, 2-2, 2-5, 2-7, 3-12, 3-13, 3-18, 3-19, 4-7, 4-8, 4-9**
- R
- Ready indicator. See PWR (Power) indicator
- Reference materials **x**
- Remote Interlock **7, 10, 1-17, 3-12, 3-13, 3-14, 3-15, 3-19, 4-7**
- Remote Interlock Connection **3-13, 3-15, 3-19**
- Remote Interlock functions
  - integrating, **3-19**
- Remote Interlock signal **2-4, 2-6, 3-12, 3-13, 3-14, 3-15, 3-19, 4-7**
  - specifications, **3-14**
- Remote Keyswitch **7, 10, 1-17, 2-4, 2-5, 2-6, 2-7, 3-3, 3-4, 3-12, 3-13, 3-14, 3-15, 3-18, 3-19, 4-7, 4-9**
- Remote Keyswitch functions
  - integrating, **3-18**
- Remote Keyswitch Input **3-13, 3-14, 3-15, 3-18**
- Remote Keyswitch Output **3-13, 3-15, 3-18**
- Remote Keyswitch signal **2-5, 2-7, 3-12, 3-13, 3-14, 3-18, 4-7, 4-9**
  - specifications, **3-14**
- Remote Lase LED Output **3-13, 3-14, 3-15**
- Remote Ready LED Output **3-13, 3-14, 3-15, 3-18, 3-19**
- Resetting faults **4-7**
  - Keyswitch lasers, **4-7**
  - OEM lasers, **4-7**
- RF driver board **3-3, 3-4, 3-18, 3-19**
- RoHS compliance **11**
- S
- Safety features **7, 9, 10**

# index

Class 4, 10  
integrating, **3-18 – 3-19**

Safety precautions 1 – 3

Sales and Applications x

Ship kit contents **1-4, 1-5**

Sample input circuits **3-15**

Sample output circuits **3-15 – 3-17**

Series 48 features **1-2**

Series 48 nomenclature **1-2**

Shorting plug. See Jumper Plug

Shutter Switch 7, 10, **1-2, 2-2, 2-5, 2-7, 3-3, 4-9**

Signal Ground **3-13, 3-15, 3-16, 3-17, 3-18, 3-19**

Specifications  
closed loop stabilization kit, **A-5**  
cooling, **4-9**  
gas purity, **3-6**  
general, **3-20 – 3-25**  
input signals, **3-7**  
PWM Command signal, **3-10**  
tickle pulse, **3-7**

Storage/shipping **4-3**

Synrad  
European headquarters, x  
worldwide headquarters, x

System interconnection diagram **1-18**

## T

Technical overview **3-2 – 3-6**  
control circuitry, **3-3 – 3-5**  
Duo-Lase operation, **3-4 – 3-5**  
introduction, **3-2**  
optical resonator, **3-2 – 3-3**  
optical setup, **3-5 – 3-6**  
plasma section, **3-2**

Technical support x

Tickle pulse **1-16, 2-2, 2-5, 2-6, 2-7, 4-10**  
caution, **3-7, 3-10**  
description, **3-7 – 3-8**

Trademark information viii

Troubleshooting **4-6 – 4-10**  
beam delivery optics, **4-10**  
introduction, **4-6**  
keyswitch faults, **4-7**

laser faults, **4-8 – 4-10**  
OEM faults, **4-7**  
resetting faults, **4-7**

Tubing adaptors **1-9**

## U

UC-2000 Laser Controller **1-16, 1-17, 2-2, 2-5, 3-7, 3-9, 3-10, 3-11, A-3, A-4, A-5**  
connecting, **1-16 – 1-17**  
initial start-up, **2-4, 2-5**

Unpacking **1-3**

## W

Warning  
aerosol dusters, 2, **4-10**  
air contaminants, 2  
definition, 1  
gate logic, **3-11**  
laser safety, 2  
PWM control, **1-16, 3-9**  
radiation exposure, 2  
toxic exposure, **4-2, 4-11**

Warning labels 4, 5, 6, 10

Warranty information ix

Water cooling ports **1-12, 1-13**

Worldwide headquarters x

# index

This page intentionally left blank.