




HOWTO

connect to **Orange Pi** using Windows Remote Desktop

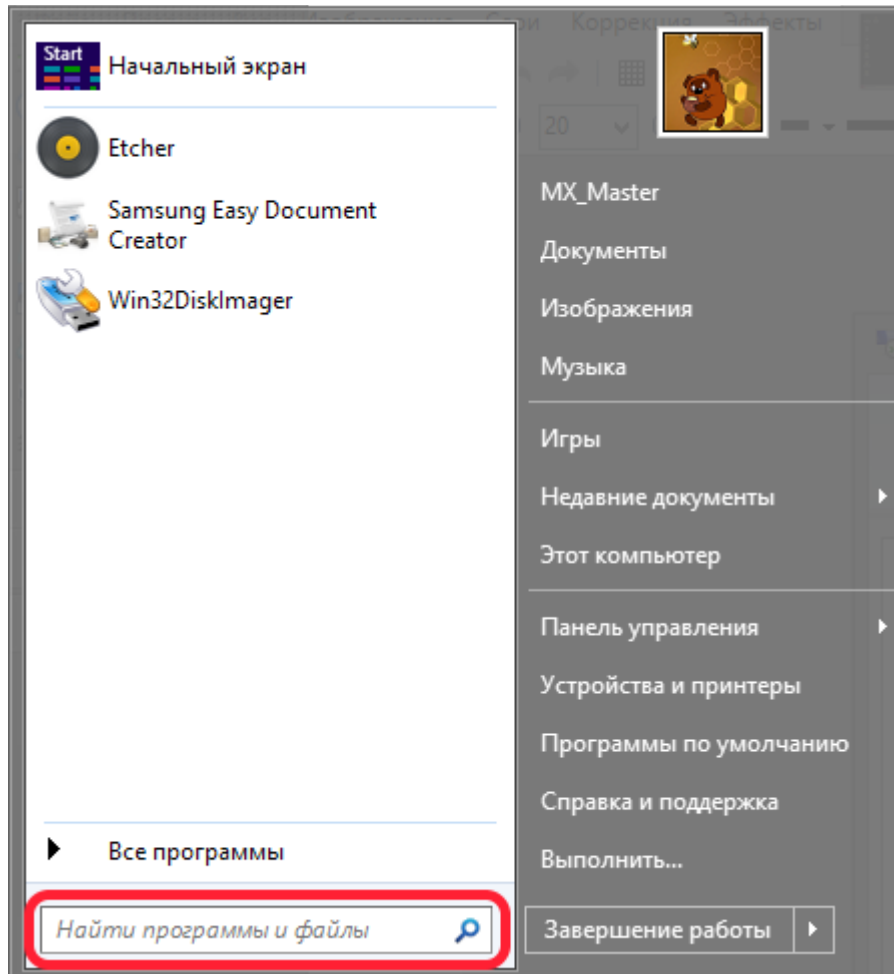


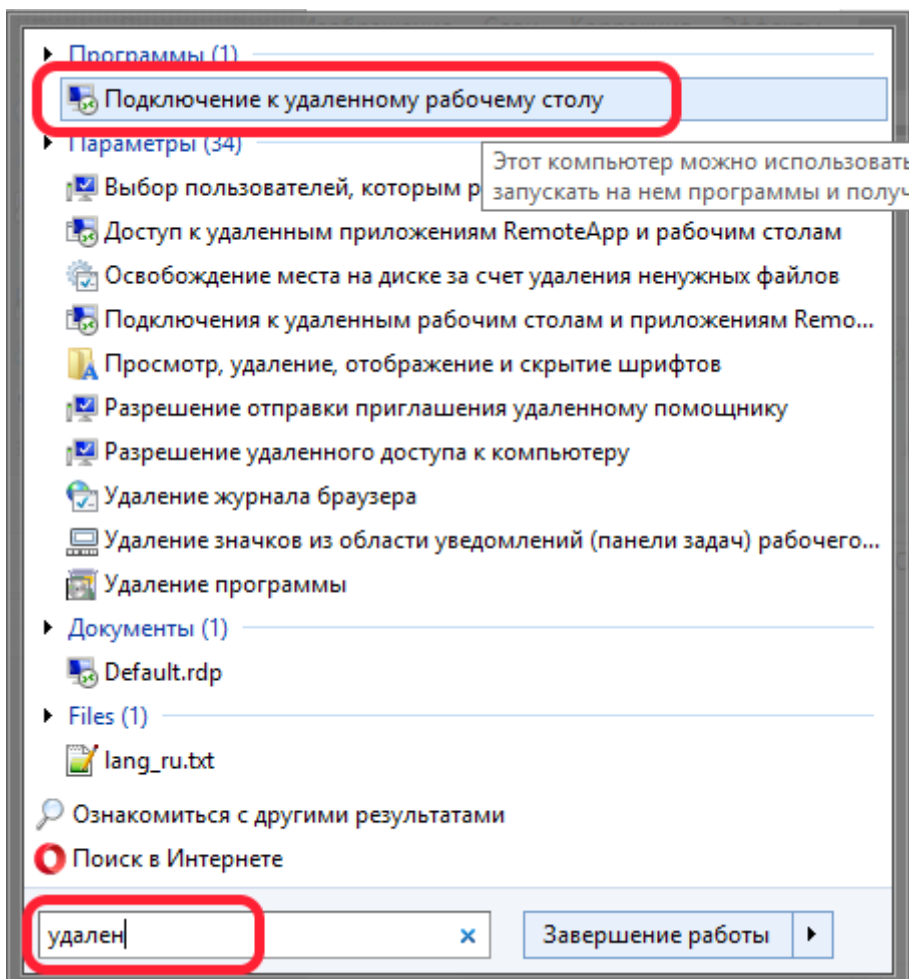

192.168.1.40
cnc

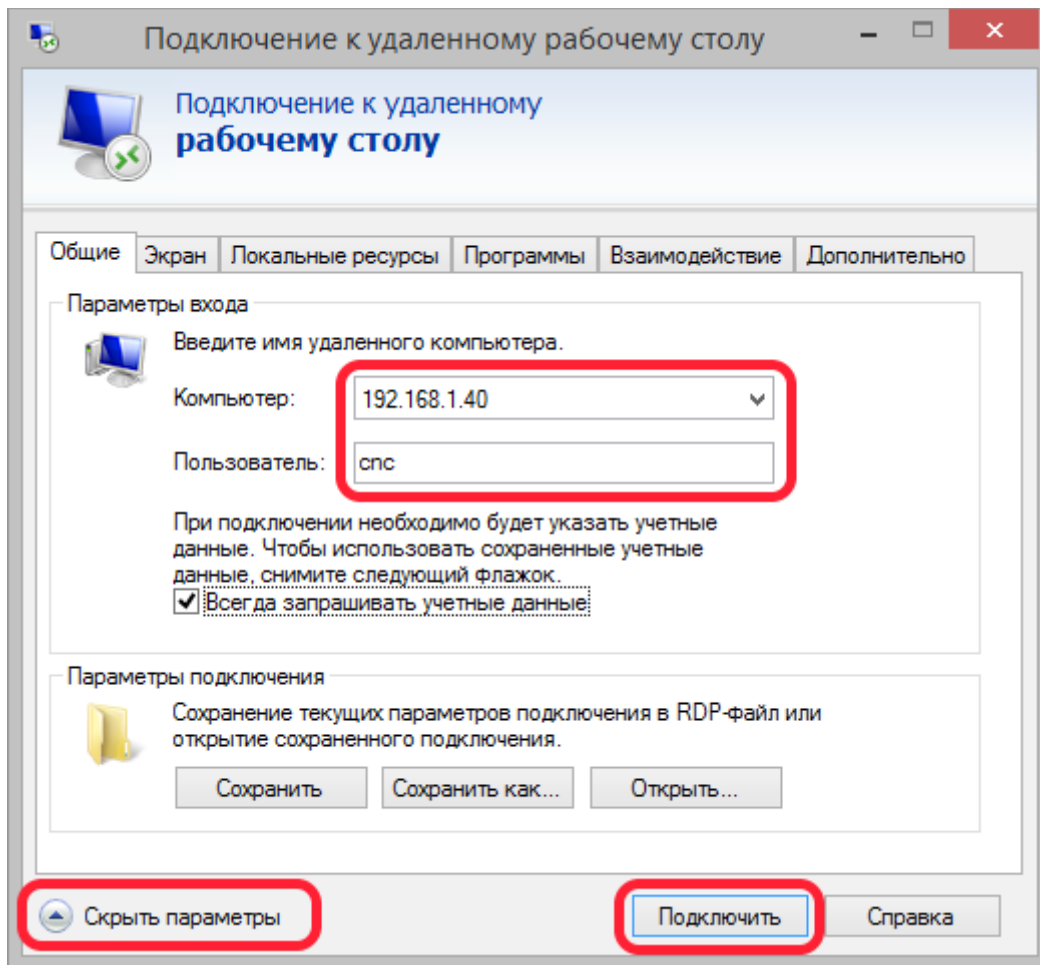

cnc
123456

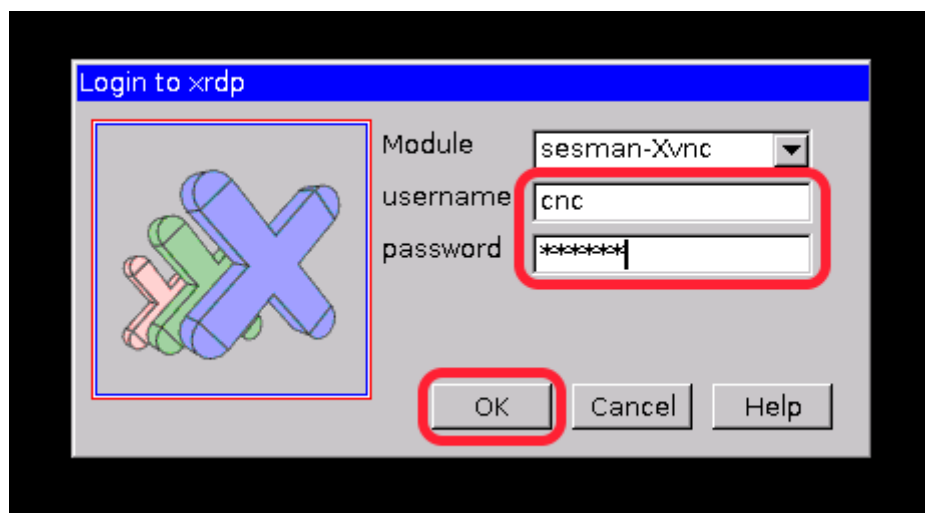



only **tkenc**
not **axis**

