


### Servo amplifier interface

This section describes each servo amplifier interface, taking that for the first axis as an example.

- S series servo amplifier

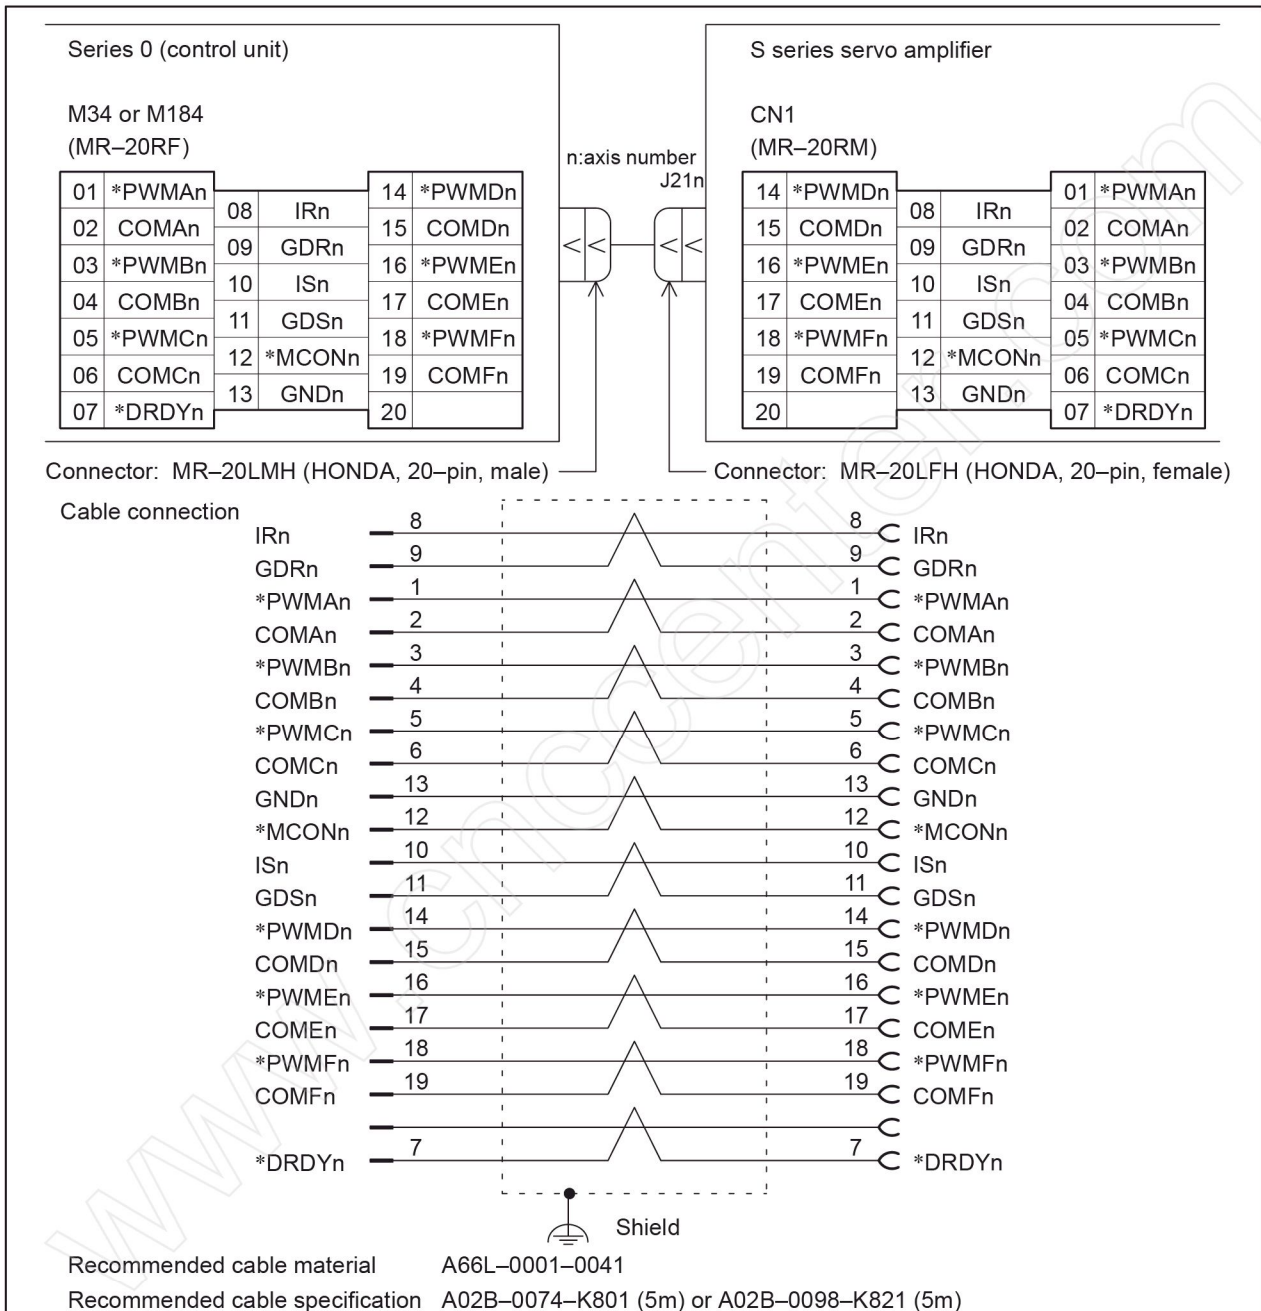

#### NOTE

To protect the signals from external noise, assign the cable's central pairs to each pair of current feedback signal and ground signal (i.e., IR<sub>n</sub> and GDR<sub>n</sub>, and IS<sub>n</sub> and GDS<sub>n</sub>). Otherwise, external noise may result in uneven feed or abnormal sound.